

SAMSUNG

SPLIT-TYPE AIR CONDITIONER

INDOOR UNIT

OUTDOOR UNIT

Basic : AS18BPA

AS24BPA

Model : AQV18MSA

AQV24MSA

AQV18MWA

AQV24MWA

Model Code : AQV18MSAN

AQV24MSAN

AQV18MWAN

AQV24MWAN

AQV18MSAX

AQV24MSAX

AQV18MWAX

AQV24MWAX

SERVICE *Manual*

AIR CONDITIONER



AQV18MSAN, AQV24MSAN, AQV18MWAN, AQV24MWAN



AQV18MSAX, AQV24MSAX, AQV18MWAX, AQV24MWAX

THE FEATURE OF PRODUCT

■ **High Energy Efficiency BLDC Air Conditioner**

■ **Slim Interior Design**

■ **Good Morning Mode**

: Good Morning Mode can help you sleep quickly and soundly and wake up refreshed.

■ **MPI Mode**

: The Micro Plasma Ion mode creates strong purified zone in your room.

■ **Silence Mode**

: When you use the "Silence Mode", you can experience extremely quiet operation of your air conditioner.

For more information, Please access to our service web site(<http://itself.sec.samsung.co.kr>)

Contents

1. Precautions	1-1
1-1 Installing the air conditioner	1-1
1-2 Power supply and circuit breaker	1-1
1-3 During operation	1-1
1-4 Disposing of the unit	1-2
1-5 Others	1-2
2. Product Specifications	2-1
2-1 The Feature of Product	2-1
2-2 Product Specifications	2-2
2-3 The Comparative Specifications of Product	2-3
2-4 Accessory and Option Specifications	2-5
3. Alignment and Adjustments	3-1
3-1 Test Mode	3-1
3-2 Indoor Display Error and Check Method	3-2
3-3 Outdoor LED Error Display and Check Method	3-3
3-4 Setting Option Setup Method	3-4
4. Disassembly and Reassembly	4-1
4-1 Indoor Unit	4-2
4-2 Outdoor Unit	4-5
5. Exploded Views and Parts List	5-1
5-1 Indoor Unit	5-1
5-2 Outdoor Unit	5-3
5-3 Ass'y Control In	5-5
5-4 Ass'y Control Out	5-7
6. Electrical Parts List	6-1
7. Wiring Diagram	7-1
7-1 Indoor Unit	7-1
7-2 Outdoor Unit	7-2
8. Schematic Diagram	8-1
8-1 Indoor Unit	8-1
8-2 Outdoor Unit	8-2

Contents

9. Circuit Descriptions	9-1
9-1 PCB Circuit Descriptions	9-1
9-2 Refrigerating Cycle Diagram	9-3
 10. PCB Diagram	 10-1
10-1 Indoor PCB	10-1
10-2 Outdoor PCB	10-2
 11. Operating Instructions	 11-1
11-1 Name of Each Part	11-1
11-2 Wireless Remote Control-Buttons and Display	11-3
11-3 Main Function	11-4
 12. Troubleshooting	 12-1
12-1 Items to be checked first	12-1
12-2 Fault Diagnosis by Symptom	12-2
12-3 PCB Inspection Method	12-20
12-4 Main Part Inspection Method	12-22
 13. Block Diagram	 13-1
13-1 Indoor Unit	13-1
13-2 Outdoor Unit	13-3
 14. Reference Sheet	 14-1
14-1 Index for Model Name	14-1
14-2 Low Refrigerant Pressure Distribution	14-2
14-3 Pressure & Capacity mark	14-3
14-4 Q & A for Non-trouble	14-4
14-5 Cleaning/Filter Change	14-7
14-6 Installation	14-9
14-7 Installation Diagram of Indoor Unit and Outdoor Unit	14-10

1. Precautions

1-1 Installing the air conditioner

- Users should not install the air conditioner by themselves.
Ask the dealer or authorized company to install the air conditioner except the window-type air conditioner in U.S.A and Canada.
- If you don't install the air conditioner properly, it may cause a fire, a water leakage or an electric shock.
- You must install the air conditioner according to the national wiring regulations and safety regulations.
- Install the indoor unit higher than 2.5m from the floor to avoid the injury caused by the operation of the fan.
(except the window-type air conditioner)
- The manufacturer is not responsible for any accidents or injury caused by an incorrect installation.
- When installing the built-in type air conditioner, keep all electric cables such as the power cable and the connection cord in pipes, ducts, or cable channels to protect them from the danger of impact or any other incidents.

1-2 Power supply and circuit breaker

- If the power cord of the air conditioner is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- The air conditioner must be plugged into an independent circuit if applicable or connect the power cable to the auxiliary circuit breaker.
An all pole disconnection from the power supply must be incorporated in the fixed wiring with a contact opening of >3mm.
- Do not extend an electric cord to the air conditioner.
- The air conditioner must be plugged in after you complete the installation.

1-3 During operation


- Do not repair the air conditioner at your discretion.
It is recommended to contact a service center directly.
- Never spill any kind of liquid on the air conditioner.
If this happens, turn off the air conditioner and contact an authorized service center.
- Do not insert anything between the airflow blades to prevent damage of the inner fan and consequent injury.
Keep children away from the air conditioner.
- Do not place any obstacles in front of the air conditioner.
- Do not spray any kind of liquid into the indoor unit. If this happens, turn off the air conditioner and contact a service center.
- Make sure that the air conditioner is well ventilated at all times:
Do not place a cloth or other materials over it.
- Remove the batteries if you don't use the remote control for a long time. (If applicable)
- Use the remote control within 7 meters from the indoor unit. (If applicable)

1-4 Disposing of the unit

- Before throwing out the air conditioner, remove the batteries from the remote control.
- When you dispose of the air conditioner, consult your dealer. If pipes are removed incorrectly, refrigerant may blow out and cause air pollution. When it contacts with your skin, it can cause skin injury.
- The package of the air conditioner should be recycled or disposed of properly for environmental reasons.

1-5 Others

- Never store or load the air conditioner upside down or sideways to prevent the damage to the compressor.
- Young children or infirm persons should be always supervised when they use the air conditioner.
- Max current is measured according to IEC standard for safety.
- Current is measured according to ISO standard for energy efficiency.

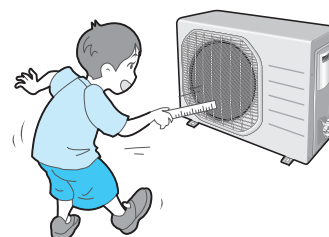

2. Product Specifications

2-1 The Feature of Product

■ **High Energy Efficiency BLDC Air Conditioner**

BLDC Technique arises the efficiency of air conditioner and makes a room cool and warm with high energy saving.

■ **Slim Interior Design**

With a Slim and Fashionable style, the high impressive interior design allow this product to set place in anywhere.

■ **Good Morning Mode**

Good Morning Mode can help you sleep quickly and soundly and wake up refreshed.

■ **MPI Mode**

The Micro Plasma Ion mode creates strong purified zone in your room.

■ **Silence Mode**

When you use the "Silence Mode", you can experience extremely quiet operation of your air conditioner.

2-2 Product Specifications



Item				Model		AQV18M*A		AQV24M*A	
						Indoor Unit	Outdoor Unit	Indoor Unit	Outdoor Unit
Type						Wall-mounted		Wall-mounted	
Performance	Capacity	Cooling		kW (Low / Std / Max)	1.60 / 5.00 / 6.00		2.20 / 6.80 / 8.00		
		Heating			1.50 / 6.00 / 7.70		1.90 / 8.00 / 10.00		
	Running Frequency	Cooling		Hz (Low / Std / Max)	20 / 68 / 85		15 / 53 / 68		
		Heating			20 / 77 / 100		15 / 59 / 85		
	Dehumidifying			ℓ/h	1.6		2.6		
	Air Volume	Cooling		m³/min (H/M/L)	13 / 12 / 11	47	14.8 / 13.4 / 11.6	47	
		Heating			14.5 / 13.5 / 12.5	46	15.6 / 13.5 / 11.5	46	
	Noise	Cooling		dB (H/L)	48/33	58	48/33	60	
		Heating			48/33	58	48/33	60	
	Energy Efficiency Ratio	Cooling		W/W (Std)	3.21		3.01		
		Heating			3.41		2.81		
	Power			ph-V-Hz	1-220/240-50		1-220/240-50		
Power	Power Consumption	Cooling		W (Low / Std / Max)	500 / 1560 / 1950		590 / 2260 / 2950		
		Heating			450 / 1760 / 2600		560 / 2850 / 4000		
	Operating Current	Cooling		A (Low / Std / Max)	2.4 / 7.0 / 9.0		3.0 / 10.6 / 13.9		
		Heating			2.3 / 8.0 / 12.0		2.8 / 13.0 / 19.0		
	Power Factor	Cooling		% (Low / Std / Max)	75 / 90 / 95		75 / 90 / 95		
		Heating			75 / 90 / 95		75 / 90 / 95		
Size	Outer Dimension	Width x Height x Depth		mm	1099 X 315 X 217	880 X 638 X 310	1099 X 315 X 217	880 X 638 X 310	
	Weight (Net)			kg	13.0	46.0	13.0	50.0	
	Refrigerant Pipe	Liquid		mm x L(m)	Φ6.35 x 5		Φ6.35 x 5		
		Gas		mm x L(m)	Φ12.70 x 5		Φ15.88 x 5		
	Drain Hose			D x L(mm)	OD23(ID13) x 535		OD23(ID13) x 535		
	Compressor	Type			Rotary, G4B135LUAEH		Rotary, G8T260FUAEW		
		Motor	Type			Hermetic		Hermetic	
			Rated Output			1324W		2454W	
	Oil Type				FREOLa68ES-T		FREOLa68ES-T		
	Blower	Type			Cross-flow	Propeller	Cross-flow	Propeller	
Motor		Type		Resin / Steel, AC	Resin / Steel, DC	Resin / Steel, AC	Resin / Steel, DC		
		Rated Output		W	40	90	40	93	
Heat Exchanger					2 Row 16 Step	2 Row 28 Step	2 Row 16 Step	2 Row 28 Step	
Refrigerant Control Unit					EEV		EEV		
Freezer Oil Capacity				cc	600		700		
Refrigerant to Change (R410A)				g	1,450		1,450		
Protection Device (OLP)					None		None		
Cooling Test Condition					Indoor Unit : DB27°C WB 19°C		Outdoor Unit : DB35°C WB 24°C		
Heating Test Condition					Indoor Unit : DB20°C WB 15°C		Outdoor Unit : DB7°C WB 6°C		
Operation conditon range		cooling	indoor		16°C ~ 32°C		16°C ~ 32°C		
			Outdoor		-10°C ~ 43°C		-10°C ~ 43°C		
		heating	indoor		27°C or less		27°C or less		
			Outdoor		-15°C ~ 24°C		-15°C ~ 24°C		

2-3 The Comparative Specifications of Product




Item		Development Model	Development Model
		AQV18M*A	AQV24M*A
Design	Indoor Unit		
	Outdoor Unit		
Net Weight	Indoor Unit	13.0kg	13.0kg
	Outdoor Unit	46.0kg	50.0kg
Outer Dimension	Indoor Unit	1099 X 315 X 217 (mm ³)	1099 X 315 X 217 (mm ³)
	Outdoor Unit	880 X 638 X 310 (mm ³)	880 X 638 X 310 (mm ³)
Noise	Indoor Unit	48dB↓	48dB↓
	Outdoor Unit	58dB↓	60dB↓
Air Purifying System	Filter	Silver Nano Evaporator Bio Filter Deodorizing Fiter	Silver Nano Evaporator Bio Filter Deodorizing Fiter
	Micro Plasma Ion	MPI Mode	MPI Mode
Indoor Display		Digital <i>i</i> Display	Digital <i>i</i> Display

2-4 Accessory and Option Specifications

 
 
2-4-1 Accessories

Item	Descriptions	Code-No.	Q'TY	Remark
	Ass'y Plate Hanger	DB61-02930A	1	Indoor Unit
	Remote Control	DB93-04394G	1	
	Batteries for Remote Control	DB47-90024A	2	
	User's Manual	DB98-26822A	1	
	Installation Manual	DB98-26824A	1	

   Accessories(cont.)

Item	Descriptions	Code-No.	Q'TY	Remark
	Drain Plug	DB67-20011A	1	Outdoor Unit
	Rubber Leg	DB73-20134A	4	
	Assembly Pipe, ø6.35mm	DB96-06553A	1	Accessory Box
	Assembly Pipe, ø12.70mm **18**	DB96-06553E	1	
	Assembly Pipe, ø15.88mm **24**	DB96-06553G	1	
	PE T3 Foam Tube Insulation	DB72-50165A	1	
	Vinyl Tape, Width 50mm	DB72-00459A	1	
	Drain Plug	DB67-20011A	1	

  Accessories(cont.)


Item	Descriptions	Code-No.	Q'TY	Remark
	Rubber Leg	DB73-20134A	4	Accessory Box
	Pipe Clamps A	DB39-20224A	3	
	Pipe Clamps B	DB39-20224B	3	
	Cement Nail	-	6	
	M4x16 Tapping Screws	6002-000215	10	
	Drain Hose, length 2m	DB62-00487A	1	
	Putty 100g	DB98-10568A	1	

3. Alignment and Adjustments

3-1 Test Mode

■ How to Approach Test Mode

You can approach the Test Mode by pressing the on/off switch of indoor unit for 5 seconds.

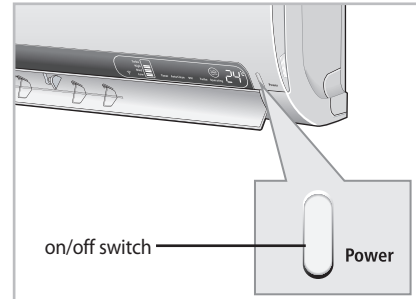

■ Test Mode Operation Option

After installing the air conditioner, check whether each subordinate is normally operated or not by operating the Test Mode.

- **When an error occurs, display the Error Mode.**
- **Operation Mode :** Cool mode. Operate the cool mode by operating the compressor by force without the compressor ON/OFF according to the set temperature/indoor temperature. (Do not follow the antifreeze control)
- **Up-down louver :** Up-down swing mode
- **Indoor Fan :** High



• Because the Test Mode operate the cool mode by force not related to the set temperature / indoor temperature, check whether each subordinate is operated normally or not after completing installation and must turn off the power of the air conditioner.

3-2 Indoor Display Error and Check Method

No	LED Display	Explanation	Explanation
1	E464	IPM Over Current(O.C)	
2	E461	Compressor Starting Error	
3	E473	Compressor Lock Error	
4	E466	DC-Link voltage under/over Error	
5	E221	Outdoor temperature sensor Error	
6	E416	Discharge over temperature	
7	E251	Discharge temperature sensor Error	
8	E468	Current sensor Error	
9	E465	Compressor Vlimit Error	
10	E237	Coil temperature sensor Error	
11	E202	1min. Time out Communication	
12	E458	Fan Error	
13	E471	OTP Error	
14	E467	Compressor Rotation Error	
15	E440/E441 (Low/High)	Operation condition secession	
16	E469	DC-Link valtage sensor Error	
17	E462	I_Trip error / PFC Over current	
18	E554	Gas Leak Error	
19	E472	AC Line Zero Cross Signal out	
20	E556	Capacity Miss-match	
21	E121	Room sensor Error	Open/Short
22	E122	In-coil sensor Error	Open/Short
23	E154	FAN Error	Indoor Fan Motor Abnormal Operation Holding for 15 sec. at less than 450rpm
24	E101	1min. Time out Communication	
25	E186	MPI Error	
26	All Lamps Blink	EEPROM Error	
27	All Lamps Blink	Option Error	Option Not Set up, Option Data Error

3-3 Outdoor LED Error Display and Check Method

No.	LED Display			Explanation
	Yellow	Green	Red	
1	○	○	○	Power off/ VDD NG
2	○	○	◎	IPM Over Current(O.C)
3	○	○	●	Abnormal Serial communication
	○	●	●	
4	○	◎	○	Compressor Starting error
5	○	◎	●	Normal Operation
6	○	●	○	Compressor Lock error
7	○	●	◎	DC-Link voltage under/over error
8	◎	○	◎	Outdoor temperature sensor error
9	◎	○	●	Discharge over temperature
10	◎	◎	○	Discharge temperature sensor error
11	◎	◎	●	Current sensor error
12	◎	●	○	Compressor limit error
13	◎	●	◎	Coil temperature sensor error
14	◎	●	●	1min. Time out Communication
15	●	○	○	Fan error
16	●	○	◎	OTP error
17	●	○	●	Compressor rotation error
18	●	◎	◎	DC-Link voltage sensor error
19	●	◎	●	I_Trip error / PFC Over current
20	●	●	○	GAS Leak error
21	●	●	◎	AC Line Zero Cross Signal out
22	●	●	●	Power ON reset(1sec)
23	◎	○	○	Capacity miss match


● : LED ON, ○ : LED OFF, ◎ : LED BLINK

3-4 Setting Option Setup Method


ex) Option No. : 066064-170373

Step 1 : Enter the Option Setup mode.

- 1st Take out the batteries of remote control.
- 2nd Press the temperature  button simultaneously and insert the battery again.
- 3rd Make sure the remocon display shown as 

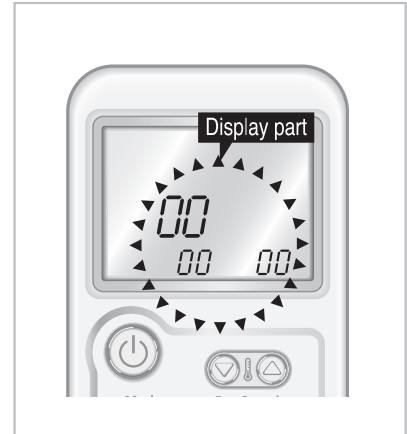

Step 2 : Enter the Option Setup mode and select your option according to the following procedure.

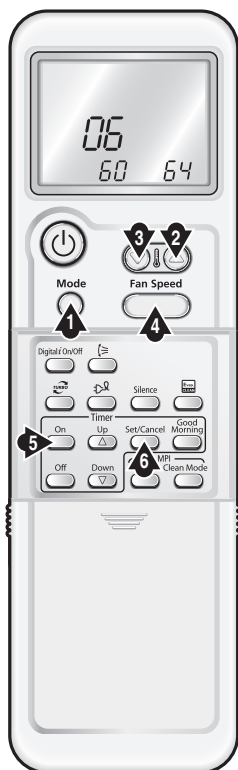

* Setting is not required if you must  a value which has a  default.

1

The default value is .

Otherwise, push the  button to .

Every time you push the button, the display panel reads 1 or 0 repeatedly.

2

Push the  button to set the display panel to 6.

Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.

3

Push the  button to set the display panel to 6.

Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.

4

Push the  button to set the display panel to 0.

Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.

5


Push the  button to set the display panel to 6.

Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.

6

Push the  button to set the display panel to 4.

Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.

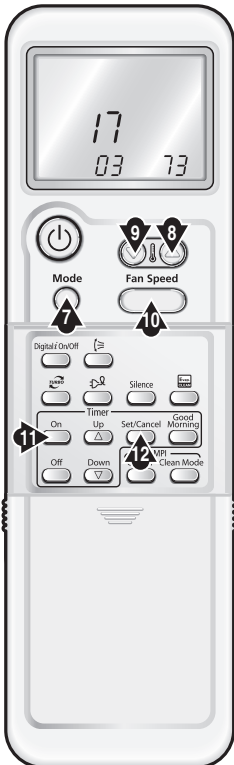

7 Press  button, then the default value is  .

8 Push the  button to set the display panel to .
Every time you push the button, the display panel reads  $\Rightarrow$  $\Rightarrow$ 
 $\Rightarrow$  $\Rightarrow$...  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  repeatedly.

9 Push the  button to set the display panel to .
Every time you push the button, the display panel reads  $\Rightarrow$  $\Rightarrow$ 
 $\Rightarrow$  $\Rightarrow$...  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  repeatedly.

10 Push the  button to set the display panel to .
Every time you push the button, the display panel reads  $\Rightarrow$  $\Rightarrow$ 
 $\Rightarrow$  $\Rightarrow$...  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  repeatedly.

11 Push the  button to set the display panel to .
Every time you push the button, the display panel reads  $\Rightarrow$  $\Rightarrow$ 
 $\Rightarrow$  $\Rightarrow$...  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  repeatedly.

12 Push the  button to set the display panel to .
Every time you push the button, the display panel reads  $\Rightarrow$  $\Rightarrow$ 
 $\Rightarrow$  $\Rightarrow$...  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  $\Rightarrow$  repeatedly.

* Setting is not required if you must  a value which has a  default.

Step 3 : Upon completion of the selection, check you made right selections.

Press the Mode Selection key,  to set the display part to  and check the display part.

$\Rightarrow$ The display part shows  .

Press the Mode Selection key,  to set the display part to  and check the display part.

$\Rightarrow$ The display part shows  .

Step 4 : Pressing the ON/OFF button ()

When pressing the operation ON/OFF key with the direction of remote control for unit, the sound "Ding" or "Diriring" is heard and the OPERATION ICON() lamp of the display is flickering at the same time, then the input of option is completed. (If the diriring sound isn't heard, try again pressing the ON/OFF button.)

Step 5 : Unit operation test-run

First, Remove the battery from the remote control.

Second, Re-insert the battery into the remote control.

Third, Press ON/OFF key with the direction of remote control for set.

• Error Mode

- 1st If all lamps of indoor unit are flickering, Plug out, plug in power plug again and press ON/OFF key to retry.
- 2nd If the unit is not working properly or all lamps are continuously flickering after setting the option code, see if the correct option code is set up for its model.

■ OPTION ITEMS


REMOCON MODEL	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6	SEG7	SEG8	SEG9	SEG10	SEG11	SEG12
AQV18MSAN AQV18MWAN	0	2	E	7	7	7	1	7	5	2	4	E
AQV24MSAN AQV24MWAN	0	3	C	7	7	7	1	7	5	2	6	E



4. Disassembly and Reassembly




■ Necessary Tools






Item	Remark
+SCREW DRIVER	
MONKEY SPANNER	


4-1 Indoor Unit

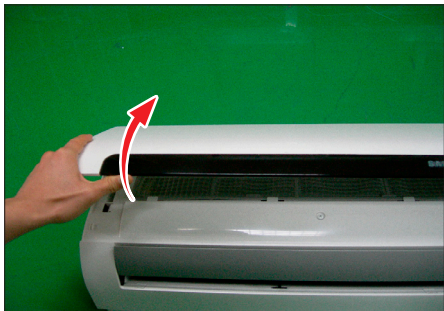No	Parts	Procedure	Remark
1	PANEL-FRONT	1) Stop the driving of air conditioner and shut off main power supply. 2) Please open the front grille. 3) Please detach link grilles from main frame. 4) To detach front grille from main frame, please catches finger stop 5) Please loosen clamping screw and detach the terminal cover. 6) Please take out filter to downward.	    

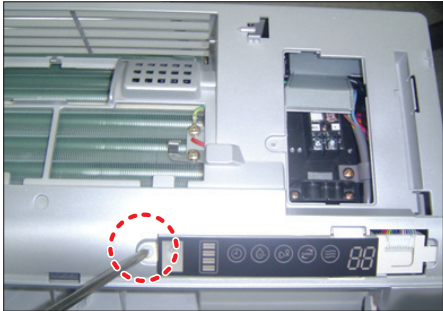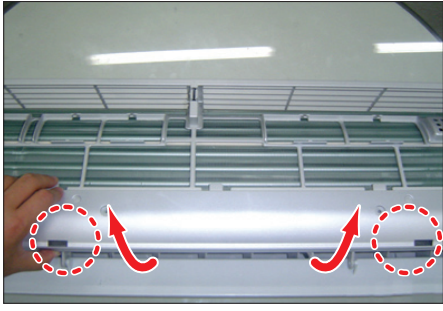No	Parts	Procedure	Remark
		7) Please detach the cover screw 3EA from the bottom of the panel front.	
		8) Loosen screws 3EA at the bottom of panel front and 2EA at the front of the panel front.	
		9) Loosen the screw of the ASSY DISPLAY.	
		10) Please separate Linked connector from the assy display.	
		11) Unlock 2 hooks between panel front and try drain to seperate panel front.	


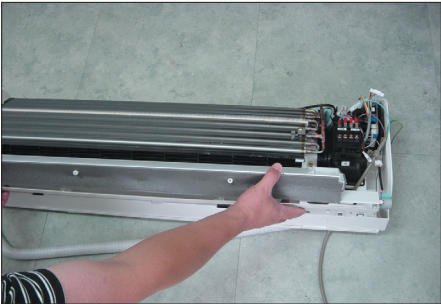
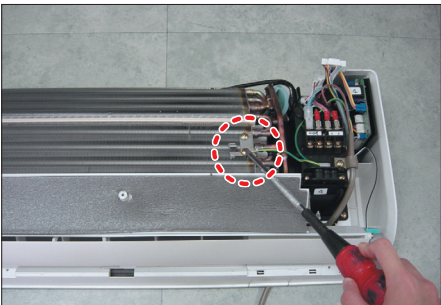
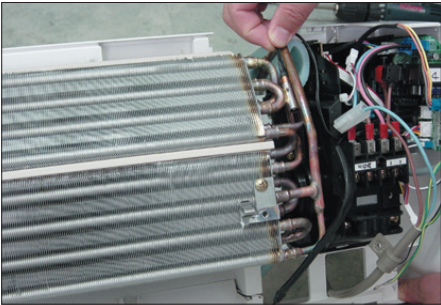
No	Parts	Procedure	Remark
		12)Unlock 2 hooks between panel front and back body.	
2	TRAY DRAIN	1) Please detach stepping motor wire. 2) Please pull tray drain and separate from back body.	
3	evap	1) Loosen the ground wire screw. 2) Detach the temperature sensor. 3) Detach the holder pipe.	  

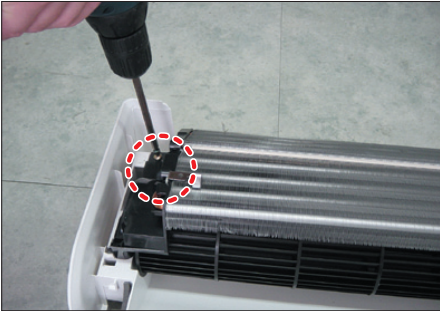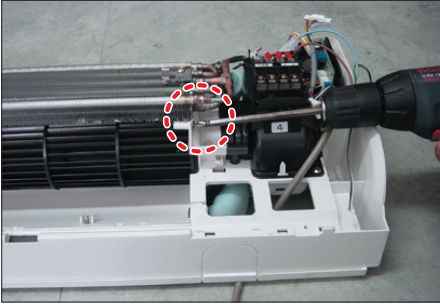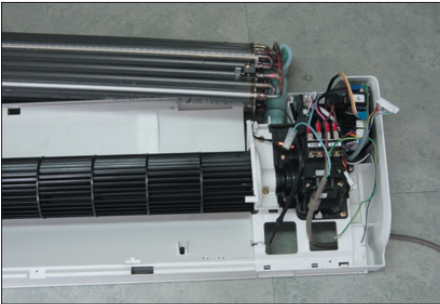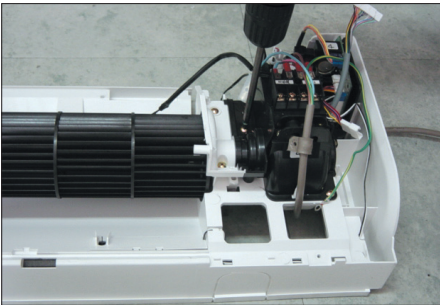
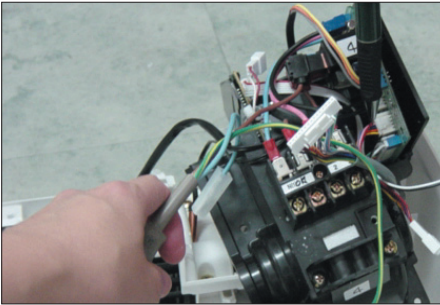
No	Parts	Procedure	Remark
		4) Loosen 3 EA screws, left of holder evap. 5) Loosen 1EA screw, right of holder motor. 6) Detach the heat exchanger from indoor unit.	  
4	MAIN PCB	1) Loosen 4EA screws of holder. 2) Detach Link wires of indoor, outdoor unit and fan motor. 3) Detach assy control from indoor unit.	 



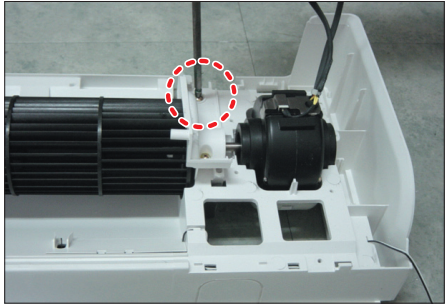
No	Parts	Procedure	Remark
5	Fan Motor & Cross Fan	1) Loosen 2EA screws of holder motor and Detach the holder. 2) Loosen a screw and detach the cross fan. 3) Detach the holder bearing and motor.	

4-2 Outdoor Unit

No	Parts	Procedure	Remark
1	Common Work	1) Loosen 1 fixing screw(CCW) of the Cover-Control and detach the Cover Control. 2) Loosen fixing screws(CCW) and detach the Cabinet-Upper. 3) Loosen 1 screw(CCW) fixed to assemble Control Box with Cabinet-Side RH. 4) Loosen 6 fixing screws(CCW) and detach the Cabinet-Side RH.	   

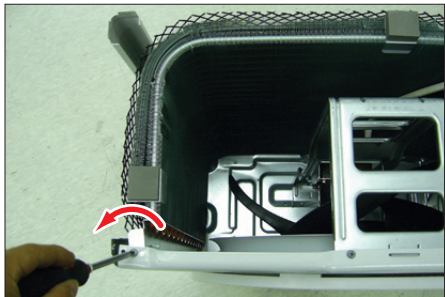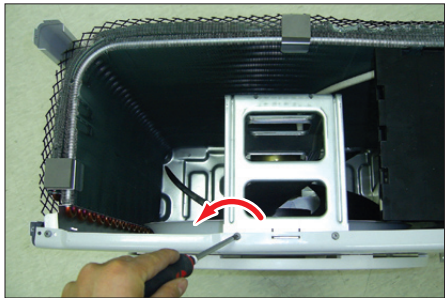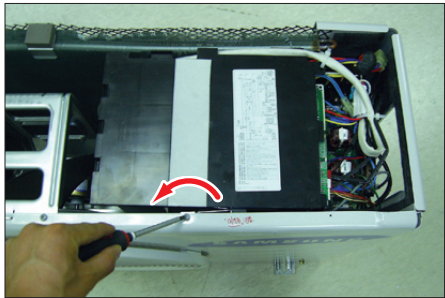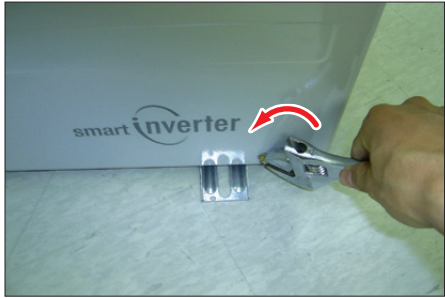No	Parts	Procedure	Remark
		5) Loosen 2 screws(CCW) fixed on the Guide Condenser.	
		6) Loosen fixing screws(CCW) of the Cabinet Front.	   

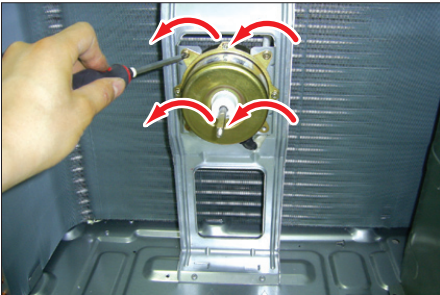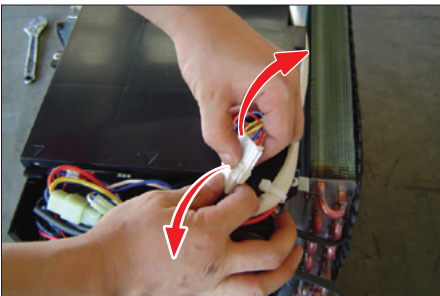
No	Parts	Procedure	Remark
2	Fan & Motor	1) Detach the Nut Flange like the picture on the right side. (Turn clockwise because the screw is left-handed.) 2) Detach the Fan Propeller. 3) Loosen 4 fixing screws(CCW) to detach the Motor. 4) Disconnect the wire between Ass'y Control Out and Motor. 5) Loosen 2 fixing screws(CCW) and detach the Bracket Motor.	   

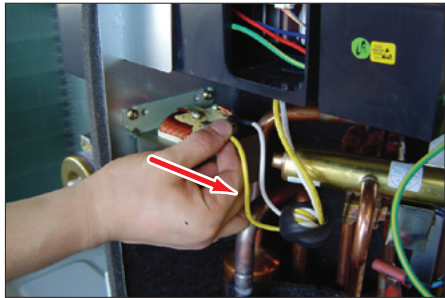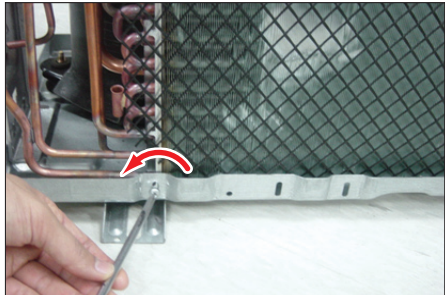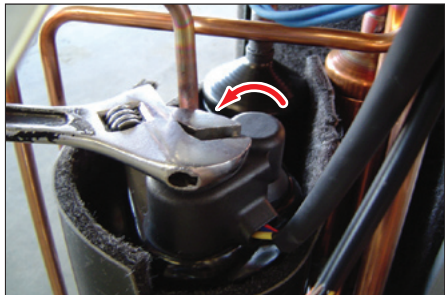No	Parts	Procedure	Remark
3	Ass'y Control Out	1) Detach several connectors from the Ass'y Control Out. 2) Detach several connectors from the PCB of Ass'y Control Out. 3) Pull up the Ass'y Control Out.	
4	Heat Exchanger	1) Release the refrigerant at first. 2) Loosen fixing screw(CCW). 3) Disassemble the pipes in both inlet and outlet with welding torch. 4) Detach the Heat Exchanger. ⚠ Before you disassemble the pipes and Condenser, be sure that there should be no refrigerant remained in the unit.	
5	Compressor	1) Loosen the fixing nut(CCW) and detach the Compressor Lead Wire.	
		2) Disassemble the Felt Comp Sound. 3) Loosen the 3 bolts(CCW) at the bottom of Compressor like the picture on the right side.	

MEMO

5. Exploded Views and Parts List


5-1 Indoor Unit

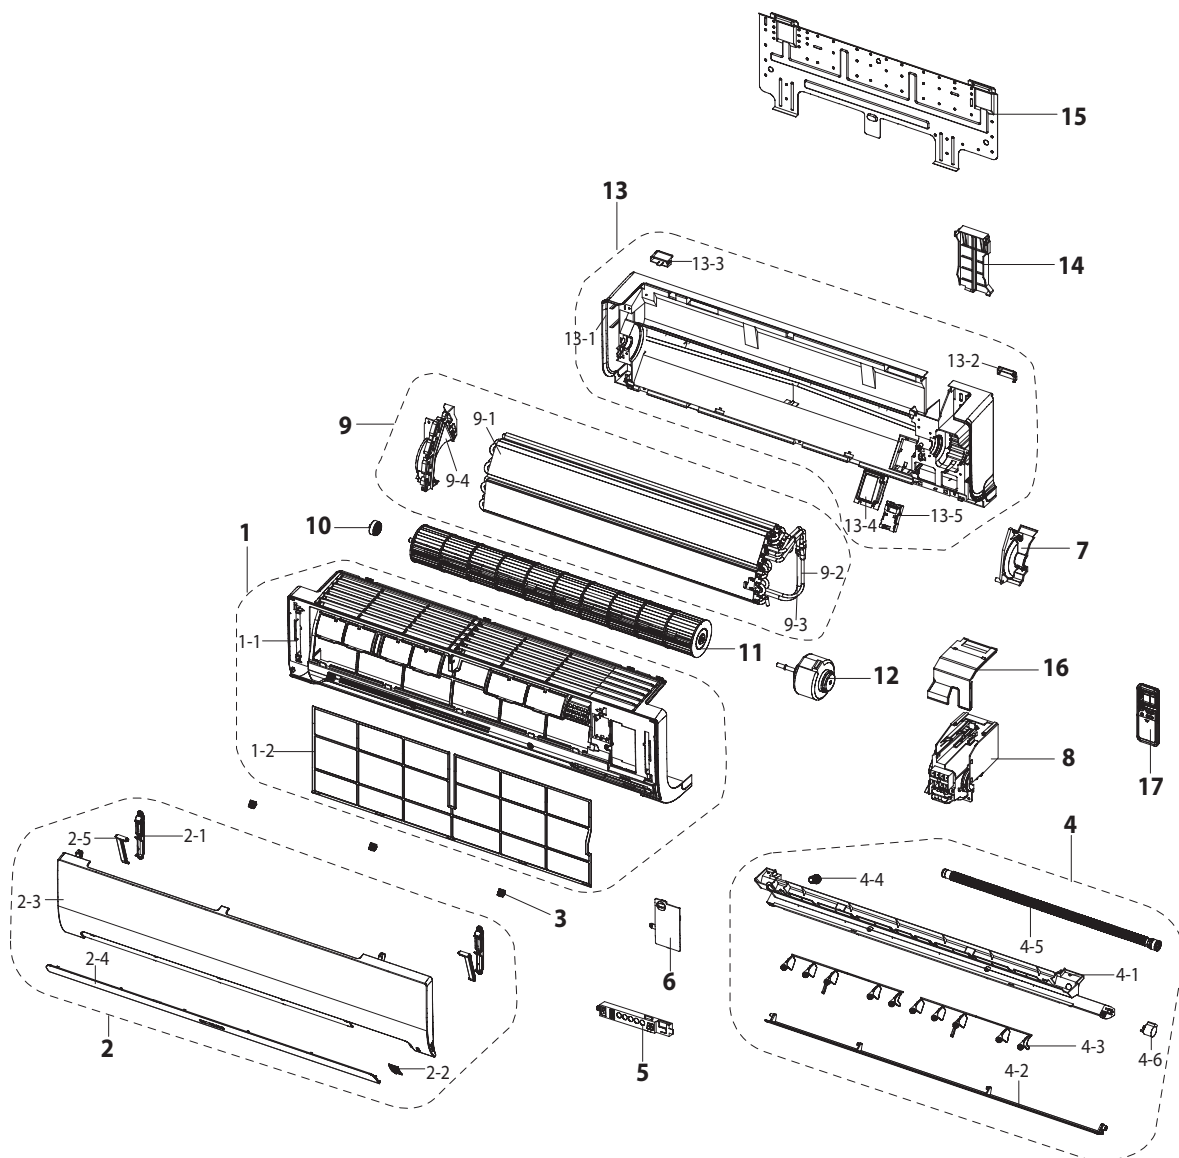

■ Parts List

No.	Code No.	Description	Specification	Q'TY				SA/SNA
				AQV18MSAN	AQV24MSAN	AQV18MWAN	AQV24MWAN	
1	DB92-00882A	ASS'Y PANEL FRONT	ASS'Y, Clean Gray Pearl	-	-	1	1	SA
	DB92-00882B		ASS'Y, Empire Silver	1	1	-	-	SA
1-1	DB64-01647A	PANEL FRONT	HIPS, Clean Gray Pearl	-	-	1	1	SA
	DB64-01647B		HIPS, Empire Silver	1	1	-	-	SA
1-2	DB63-01588A	FILTER PRE	PP	1	1	1	1	SNA
2	DB92-00883G	ASS'Y GRILLE	ASS'Y, Clean Gray Pearl	-	-	1	1	SA
	DB92-00883H		ASS'Y, Empire Silver	1	1	-	-	SA
2-1	DB61-02922A	GUIDE RAIL	POM, White	2	2	2	2	SNA
2-2	DB64-01641A	BUTTON POWER	ABS, Clean Gray Pearl	-	-	1	1	SNA
	DB64-01641B		ABS, Empire Silver	1	1	-	-	SNA
2-3	DB64-01646A	GRILLE AIR INLET	HIPS, Clean Gray Pearl	-	-	1	1	SNA
	DB64-01646B		HIPS, Empire Silver	1	1	-	-	SNA
2-4	DB64-01645D	WINDOW DISPLAY	PMMA, Black	1	1	1	1	SNA
2-5	DB66-01154A	LINK GRILLE	POM, White	2	2	2	2	SA
3	DB67-00728A	CAP SCREW	HIPS, Clean Gray Pearl	-	-	3	3	SNA
	DB67-00728B		HIPS, Empire Silver	3	3	-	-	SNA
4	DB94-01179A	ASS'Y TRAY DRAIN	ASS'Y	1	1	1	1	SA
4-1	DB63-01590A	TRAY DRAIN	ABS	1	1	1	1	SNA
4-2	DB61-02928A	BLADE H	ABS	1	1	1	1	SA
4-3	DB61-02936A	BLADE V	PP	2	2	2	2	SA
4-4	DB73-00374A	RUBBER CAP DRAIN	GUM-EPM	1	1	1	1	SNA
4-5	DB94-01182B	ASS'Y DRAIN HOSE	ASS'Y	1	1	1	1	SA
4-6	DB31-00370A	MOTOR STEP	220-240V~, 50/60Hz, Class E	1	1	1	1	SA
5	DB93-04408B	ASS'Y DISPLAY	ASS'Y	1	1	1	1	SA
6	DB63-01587A	COVER TERMINAL	HIPS V0	1	1	1	1	SA
7	DB90-02894A	ASS'Y HOLDER MOTOR	ASS'Y	1	1	1	1	SA
8	DB93-04492A	ASS'Y CONTROL IN	ASS'Y	1	1	1	1	SA
9	DB96-06665C	ASS'Y EVAP TOTAL	ASS'Y	1	-	1	-	SA
	DB96-06665D		ASS'Y	-	1	-	1	SA
9-1	DB96-06671B	ASS'Y EVAP	ASS'Y	1	1	1	1	SNA
9-2	DB96-07425A	ASS'Y TUBE EVAP IN	ASS'Y	1	1	1	1	SNA
9-3	DB96-06669A	ASS'Y TUBE EVAP OUT	ASS'Y	1	-	1	-	SNA
	DB96-06669B		ASS'Y	-	1	-	1	SNA
9-4	DB61-02937A	HOLDER EVAP	ABS, Black	1	1	1	1	SNA
10	DB94-00455A	ASS'Y BEARING RUBBER	ASS'Y	1	1	1	1	SNA
11	DB94-01228A	ASS'Y CROSS FAN	ASS'Y	1	1	1	1	SA
12	DB31-00413A	MOTOR FAN IN	220-240V~, 50/60Hz, Class E	1	1	1	1	SA
13	DB94-01178A	ASS'Y BACK BODY	ASS'Y	1	1	1	1	SA
13-1	DB61-02934A	BODY BACK	HIPS	1	1	1	1	SNA
13-2	DB61-02933A	BUSH BODY RH	HIPS	1	1	1	1	SNA
13-3	DB61-02932A	BUSH BODY LF	HIPS	1	1	1	1	SNA
13-4	DB63-01582A	COVER MPI	HIPS	1	1	1	1	SNA
13-5	DB93-04230A	ASSY COMPACT MPI	ASS'Y	1	1	1	1	SA
14	DB61-02929A	HOLDER PIPE	HIPS	1	1	1	1	SNA
15	DB61-02930A	PLATE HANGER	SGCC-M	1	1	1	1	SNA
16	DB90-02909A	ASS'Y COVER CONTROL	ASS'Y	1	1	1	1	SNA
17	DB93-04394G	ASS'Y REMOCON	ARH-1346	1	1	1	1	SNA


5-2 Outdoor Unit

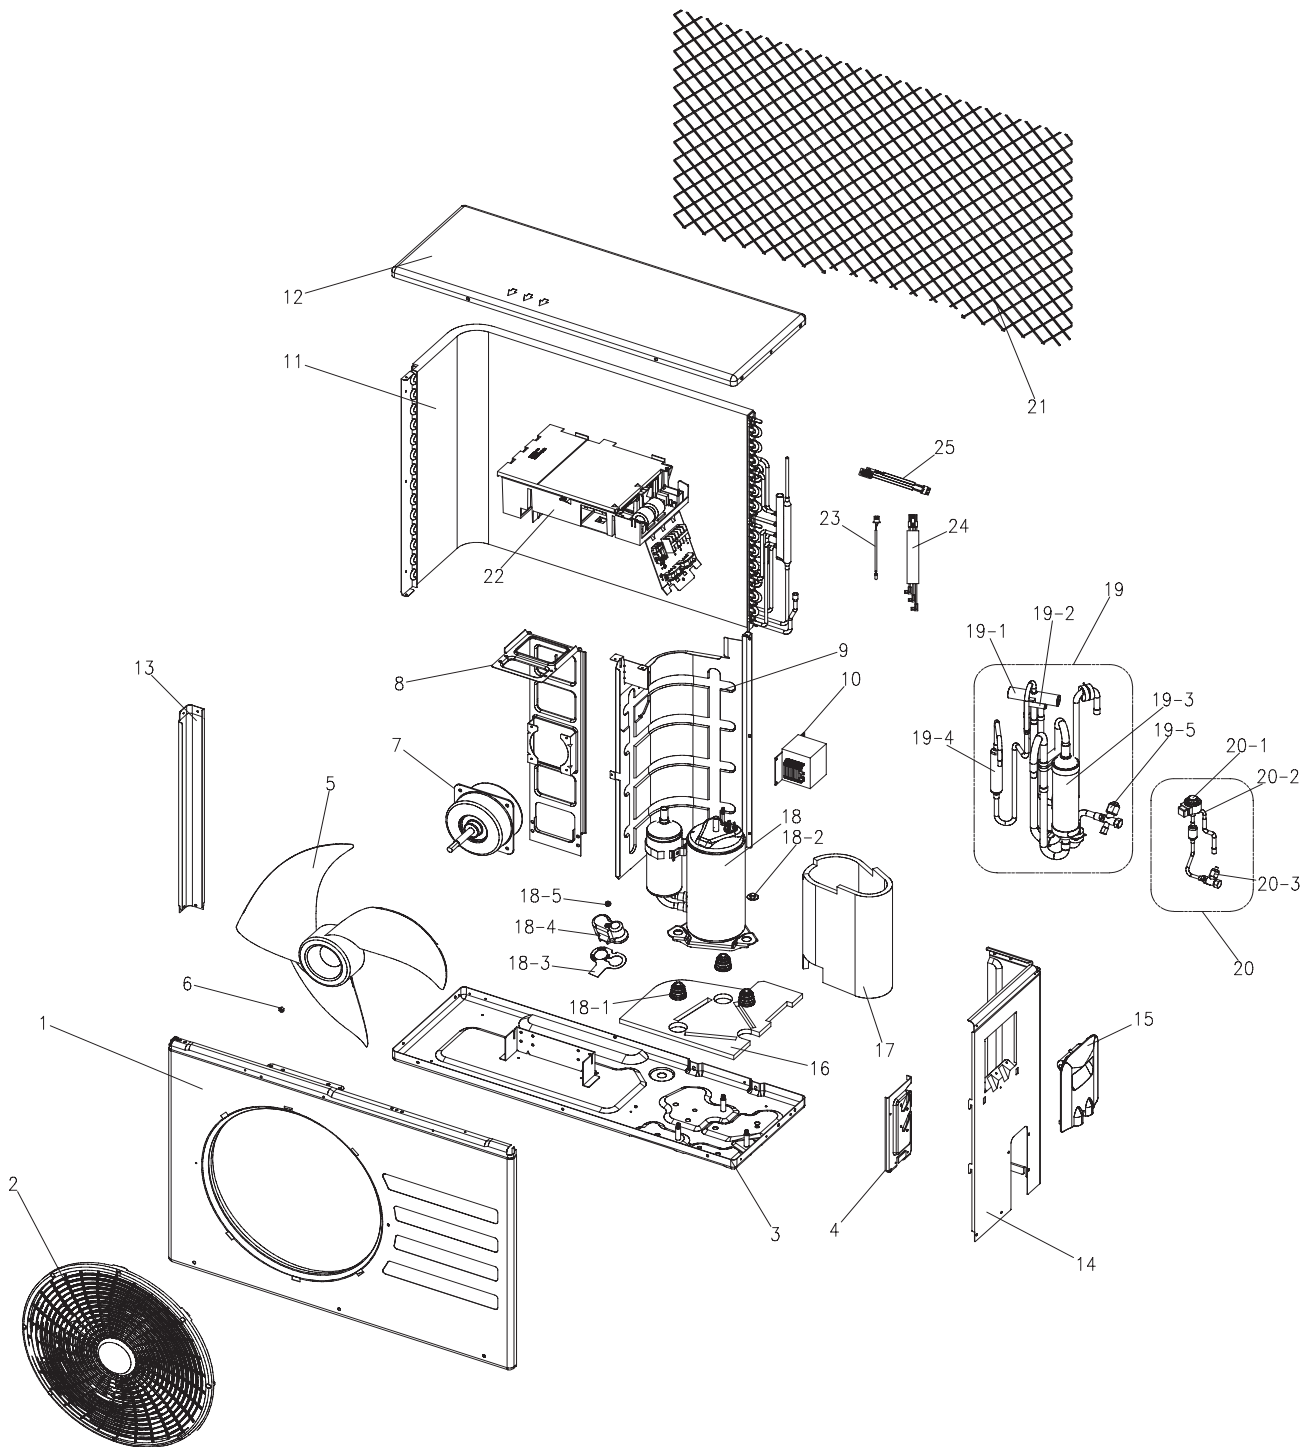

■ Parts List

No.	Code No.	Description	Specification	Q'TY		SA/SNA
				AQV18M*AX	AQV24M*AX	
1	DB90-01146D	ASS'Y CABI FRONT	ASS'Y, SC-94445T	1	1	SA
2	DB63-00838A	GUARD FAN	HIPS, SC-90073R	1	1	SA
3	DB90-00970T	ASS'Y BASE OUT	ASS'Y, SC-94445T	1	-	SA
	DB90-00970K			-	1	
4	DB61-01593A	BRACKET VALVE	SECC-P, SC-94445T	1	1	SA
5	DB67-00142A	FAN-PROPELLER	AS+G/F20%, Ø420	1	1	SA
6	DB60-30020A	NUT-HEXAGON	M6	1	1	SA
7	DB31-00264D	MOTOR FAN OUT	AC Motor	1	1	SA
8	DB61-00686A	BRACKET MOTOR	SGCC-M	1	1	SA
9	DB94-01210A	ASS'Y PARTITION	ASS'Y, SGCC-M	1	1	SA
10	DB27-00043A	REACTOR	PPS, 20A	1	1	SA
11	DB96-04087B	ASS'Y COND UNIT	ASS'Y	1	1	SA
12	DB90-10616G	ASS'Y CABI UP	ASS'Y, SC-94445T	1	1	SA
13	DB63-00692A	GUARD COND	SECC-P, SC-94445T	1	1	SA
14	DB90-01651B	ASS'Y CABINET SIDE RH	ASS'Y, SC-94445T	1	1	SA
15	DB90-40176B	COVER CONTROL	ABS, SC-90073R	1	1	SA
16	DB63-01718A	FELT COMP BASE	FELT+PVC Sheet	1	-	SA
	DB63-01719A			-	1	
17	DB63-01669A	FELT COMP SIDE	FELT+PVC Sheet	1	-	SA
	DB63-01668A			-	1	
18	G4B135LUA EH	COMPRESSOR	ROTARY, BLDC	1	-	SNA
	G8T260FUA EW			-	1	
18-1	DB63-00763A	GROMMET ISOLATOR	NR	3	-	SNA
	DB63-00815A			-	3	
18-2	DB60-30028A	SCREW HEX	M8	3	3	SNA
18-3	DB63-00817A	GASKET	EPDM	1	1	SNA
18-4	DB63-00816A	COVER TERMINAL	PBT (G/F 15%)	1	1	SNA
18-5	6021-001142	SCREW MACHINE	M5	1	1	SNA
19	DB99-00851A	ASS'Y VALVE 4WAY	ASS'Y	1	1	SA
	DB99-00852A					
19-1	DB62-02338A	4WAY VALVE	R410A, SANHUA	1	1	SNA
19-2	DB33-00002C	SOLENOID COIL	ASS'Y	1	1	SNA
19-3	DB67-00765A	ACCUMULATOR	STEEL ACCUM.	1	1	SNA
19-4	DB97-02054A	TUBE MUFFLER	C1220T-0	1	-	SNA
19-5	DB62-02285A	VALVE SERVICE	R410A, SANHUA, 1/2"	1	-	SNA
	DB62-02342A		R410A, SANHUA, 5/8"	-	1	
20	DB96-06744A	ASS'Y VALVE EEV		1	1	SA
20-1	DB62-03964A	VALVE EXPANSION COIL	FUJIKOKI	1	1	SNA
20-2	DB62-02863A	VALVE EXPANSION BODY	FUJIKOKI	1	1	SNA
20-3	DB62-02283A	VALVE SERVICE	R410A, SANHUA, 1/4"	1	1	SNA
21	DB61-03167A	GUIDE SCREEN	P.E.H 100%	1	1	SA
22	DB93-04268F	ASS'Y CONTROL OUT	ASS'Y	1	-	SA
	DB93-04268E	ASS'Y CONTROL OUT	ASS'Y	-	1	SA
23	DB32-00176A	THERMISTOR OUT/DIS	ASS'Y	1	1	SA
24	DB32-00175A	THERMISTOR COND	ASS'Y	1	1	SA
25	DB39-01301A	CONNECT WIRE COMP	ASS'Y	1	1	SA

5-3 Ass'y Control In : DB93-04492A

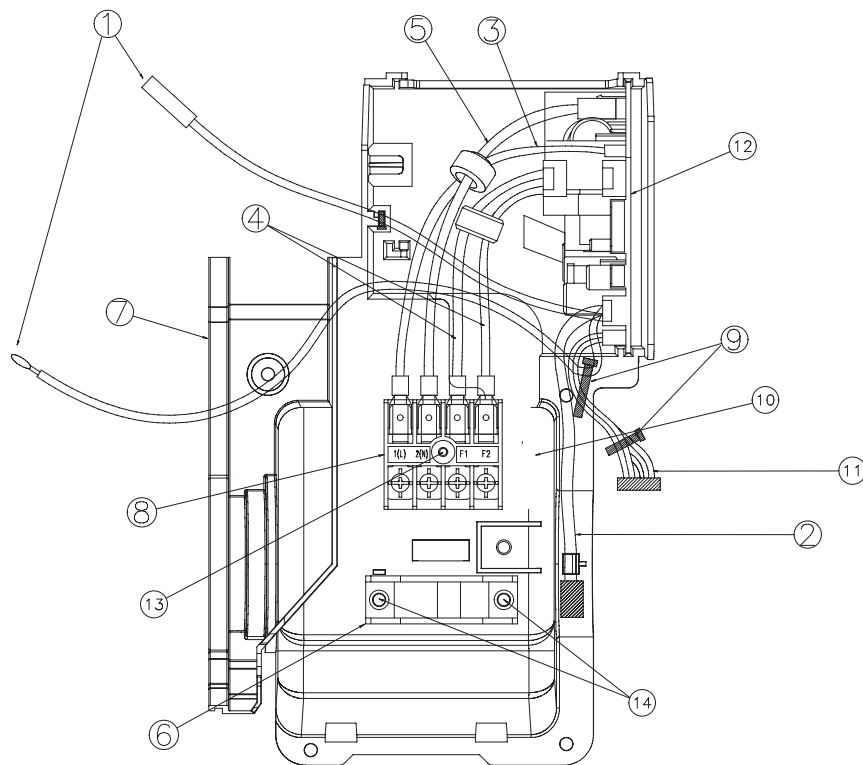


■ Parts List

No.	Code No.	Description	Specification	Q'ty	SA/SNA
1	DB32-00020H	THERMISTOR-WIRE	THERMISTOR	1	SA
2	DB93-04480A	ASSY CONNECTOR WIRE	AWG # 26	1	SNA
3	DB39-00765T	HARNESS POWER-L	AWG # 14	1	SNA
4	DB39-01210B	CONNECT WIRE-48SCOMM	AWG # 26	1	SNA
5	DB39-01193A	CONNECT WIRE-3P	AWG # 16	1	SNA
6	DB61-01097A	HOLDER-WIRE CLAMP	ABS	1	SNA
7	DB61-02935A	CASE CONTROL	ABS	1	SA
8	DB65-00004U	TERMINAL BLOCK	DAF-4P	1	SNA
9	DB65-10088D	CABLE-TIE	NYLON 66	2	SNA
10	DB61-02942A	PLATE-CONTROL IN	SGCC-M	1	SNA
11	DB93-04476A	ASSY CONNECTOR WIRE	ASS'Y	1	SNA
12	DB93-05620C	ASSY PCB MAIN	ASS'Y	1	SA
13	6001-000929	SCREW-MACHINE	M3xL22	1	SNA
14	6001-001054	SCREW-MACHINE	M4xL10	2	SNA

MEMO

5-4 Ass'y Control Out

■AQV18M*AX : DB93-04268F
AQV24M*AX : DB93-04268E

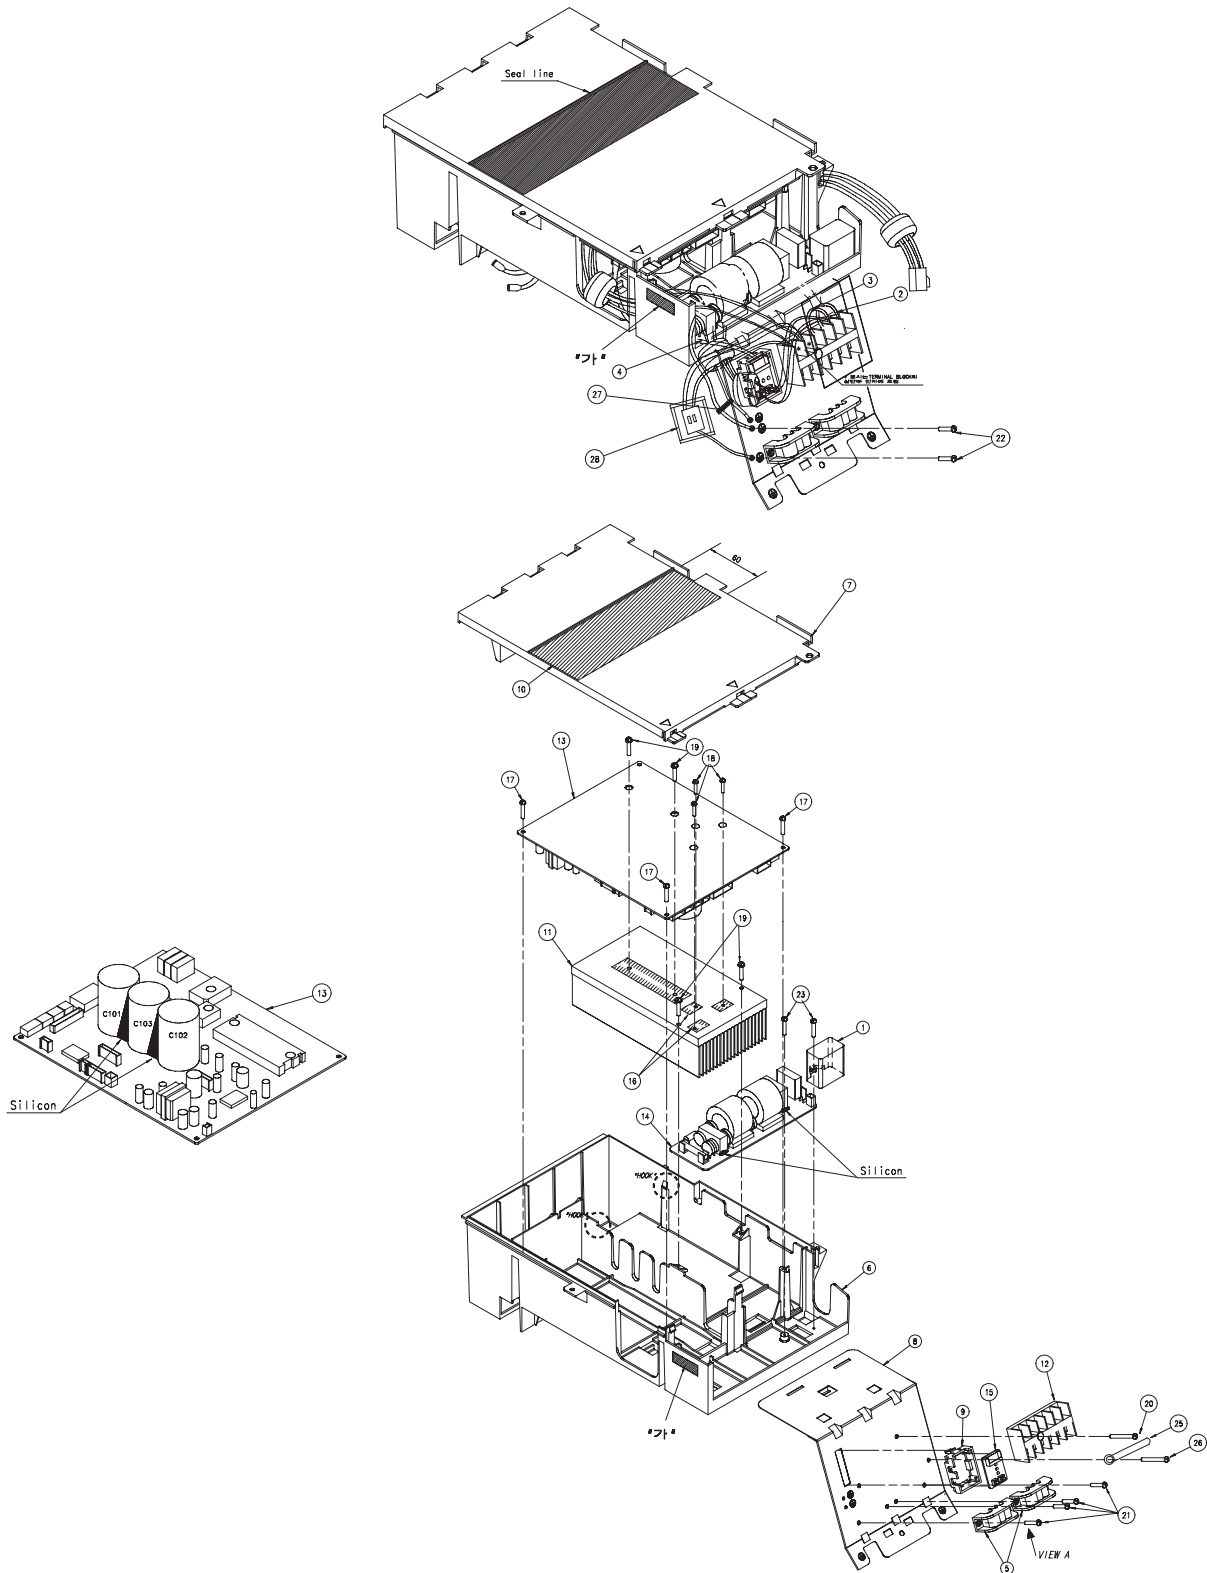

■ Parts List

No.	Code No.	Description	Specification	Q'ty		SA/SNA
				AQV18M*AX	AQV24M*AX	
1	2301-001378	C-FILM,LEAD-OTHER	3.5uF,450V	1	-	SA
	2301-001379	C-FILM,LEAD-OTHER	4.0uF,450V	-	1	SA
2	DB93-04339A	ASSY LEAD WIRE	SKYBLU	1	1	SNA
3	DB93-04339B	ASSY LEAD WIRE-POWER L	BRN	1	1	SNA
4	DB93-04337A	ASSY CONNECTOR WIRE	5P,MAIN TO DISPLAY	1	1	SNA
5	DB61-01097A	HOLDER-WIRE CLAMP	ABS,BLK	2	2	SA
6	DB61-02973A	CASE-CONTROL BASE	ABS V0,T2.0	1	1	SNA
7	DB61-02974A	CASE-CONTROL COVER	ABS V0,T2.0	1	1	SNA
8	DB61-02977A	PLATE-CONTROL OUT	SGCC_M,T0.6	1	1	SNA
9	DB61-02975A	CASE-DISPLAY PCB	ABS V0,T2.0	1	1	SNA
10	DB62-04566B	SEAL-COVER CONTROL	FOAM-LEX,T2,WHT	1	1	SNA
11	DB62-04626A	HEAT SINK	100mm,185mm,50mmm,AL	1	1	SNA
12	DB65-00181C	TERMINAL BLOCK	DAF-6P	1	1	SNA
13	DB93-04266B	ASSY PCB MAIN-OUT	PCB-2L	1	-	SA
	DB93-04266A	ASSY PCB MAIN-OUT	PCB-2L	-	1	SA
14	DB93-04267B	ASSY PCB SUB-EMI	PCB-2L	1	-	SA
	DB93-04267A	ASSY PCB SUB-EMI	PCB-2L	-	1	SA
15	DB93-04329A	ASSY PCB DISPLAY	PCB-1L	1	1	SA
16	DB98-17991A	ASSY-INSULATOR MICA	MICA	2	2	SNA
17	6002-000630	SCREW-TAPPING	PH+,M2,L8	3	3	SNA
18	DB91-00306A	ASSY-SCREW MACHINE	PH+,M3,L16	3	3	SNA
19	DB91-00307A	ASSY-SCREW MACHINE	PH+,M4,L16	4	4	SNA
20	6002-000555	SCREW-TAPPING	PH+,M4,L25	1	1	SNA
21	6001-001054	SCREW-MACHINE	TH+,M4,L10	4	4	SNA
22	6009-001001	SCREW-SPECIAL	TH+,M4,L8	1	1	SNA
23	6002-000536	SCREW-TAPPING	PH+,M4,L10	2	2	SNA
25	DB61-00206B	HOLDER-WIRE	SGCC_M,T0.5	1	1	SNA
26	6002-000231	SCREW-TAPPING	PH+,M4,L10	1	1	SNA
27	DB65-10088D	CABLE-TIE	NYLON66	1	1	SNA
28	DB95-01040C	ASSY NOISE ABSORBER	ASSY	1	1	SNA

6. Electrical Parts List

■ MAIN PCB : DB93-05620C

Location No.	Code No.	Description	Specification	Q'ty	SNA/SA
D701	0402-000012	DIODE-RECTIFIER	UF4007,1KV,1A,DO-41,TP	1	SNA
BD71	0402-001298	DIODE-BRIDGE	DF06S,600V,1A,SMD-4,TP	1	SNA
D101	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
ZD11	0403-000252	DIODE-ZENER	BZX84C3V6,3.4-3.8V,350MW,SOT-23,TP	1	SNA
ZD13	0403-000466	DIODE-ZENER	BZX84C4V3,4.3,225mW,SOT-23,TP	1	SNA
ZD12	0403-001285	DIODE-ZENER	BZX84-C11,10.4-11.6V,350mW,SOT-23,TP	1	SNA
CD11	0406-001086	DIODE-TVS	ST02D-200,185/200/215V,200W,DO-214	1	SNA
Q201	0501-000534	TR-SMALL SIGNAL	2SC2412K,NPN,200mW,SOT-23,TP,180-390	1	SNA
Q401	0501-000534	TR-SMALL SIGNAL	2SC2412K,NPN,200mW,SOT-23,TP,180-390	1	SNA
Q601	0501-000534	TR-SMALL SIGNAL	2SC2412K,NPN,200mW,SOT-23,TP,180-390	1	SNA
Q603	0501-000534	TR-SMALL SIGNAL	2SC2412K,NPN,200mW,SOT-23,TP,180-390	1	SNA
Q602	0501-002296	TR-SMALL SIGNAL	MMST2907A,PNP,200MW,SMT3,TP,100-300	1	SNA
Q101	0504-001064	TR-DIGITAL	DTC114EKA,NPN,200mW,10K/10K,SOT-23,TP	1	SNA
IC05	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC06	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC08	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
PC02	0604-001003	PHOTO-COUPLER	TR,50-150%,200mW,DIP-4,ST	1	SNA
PC01	0604-001038	PHOTO-COUPLER	TR,130-260%,200mW,DIP-4,ST	1	SNA
IC07	1003-001462	IC-SOURCE DRIVER	TD62783AFW,SOL,	1	SNA
IC09	1103-001175	IC-EEPROM	93LC56	1	SNA
IC02	1203-000429	IC-POS.FIXED REG.	78L05A,TO-92,3P,-,PLASTIC,4.6/	1	SNA
IC01	1203-002545	IC-PWM CONTROLLER	266,DIP,8P,300MIL,PLASTIC,-0.3/700V	1	SNA
IC59	1203-003334	IC-RESET	S-801,SOT-23,5P,2.9x1.6mm,PLASTIC	1	SNA
NTC	1404-001274	THERMISTOR-NTC	22ohm,1.4A,3100K,9.5mW/C,-,7.0,-	1	SNA
VA71	1405-000154	VARISTOR	460Vdc,2500A,17.5x7.5mm,TP	1	SNA
R103	2002-001104	R-COMPOSITION	12Mohm,5%,1/2W,AA,TP,3.4x9mm	1	SNA
R104	2002-001104	R-COMPOSITION	12Mohm,5%,1/2W,AA,TP,3.4x9mm	1	SNA
R405	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R406	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R412	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R607	2007-000077	R-CHIP	470ohm,5%,1/10W,TP,1608	1	SNA
R608	2007-000077	R-CHIP	470ohm,5%,1/10W,TP,1608	1	SNA
R210	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R211	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R401	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R402	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R404	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R409	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R503	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R602	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R604	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R610	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R611	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R606	2007-000084	R-CHIP	4.7Kohm,5%,1/10W,TP,1608	1	SNA
R909	2007-000084	R-CHIP	4.7Kohm,5%,1/10W,TP,1608	1	SNA

■ MAIN PCB : DB93-05620C(cont.)

Location No.	Code No.	Description	Specification	Q'ty	SNA/SA
R403	2007-000087	R-CHIP	6.8Kohm,5%,1/10W,TP,1608	1	SNA
R802	2007-000087	R-CHIP	6.8Kohm,5%,1/10W,TP,1608	1	SNA
R209	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R301	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R605	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R801	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R908	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R502	2007-000093	R-CHIP	20Kohm,5%,1/10W,TP,1608	1	SNA
R410	2007-000109	R-CHIP	1Mohm,5%,1/10W,TP,1608	1	SNA
R501	2007-000109	R-CHIP	1Mohm,5%,1/10W,TP,1608	1	SNA
R609	2007-000119	R-CHIP	560ohm,5%,1/10W,TP,1608	1	SNA
R101	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R102	2007-000493	R-CHIP	2.2Kohm,5%,1/8W,TP,2012	1	SNA
R106	2007-000872	R-CHIP	4.7Kohm,5%,1/8W,TP,2012	1	SNA
R105	2007-000931	R-CHIP	470ohm,5%,1/8W,TP,2012	1	SNA
R201	2007-000944	R-CHIP	47Kohm,5%,1/4W,TP,3216	1	SNA
R202	2007-000944	R-CHIP	47Kohm,5%,1/4W,TP,3216	1	SNA
R203	2007-000944	R-CHIP	47Kohm,5%,1/4W,TP,3216	1	SNA
R204	2007-000944	R-CHIP	47Kohm,5%,1/4W,TP,3216	1	SNA
R205	2007-000944	R-CHIP	47Kohm,5%,1/4W,TP,3216	1	SNA
R206	2007-000944	R-CHIP	47Kohm,5%,1/4W,TP,3216	1	SNA
R207	2007-000944	R-CHIP	47Kohm,5%,1/4W,TP,3216	1	SNA
R208	2007-000944	R-CHIP	47Kohm,5%,1/4W,TP,3216	1	SNA
R504	2007-000962	R-CHIP	5.1Kohm,1%,1/10W,TP,1608	1	SNA
R407	2007-001068	R-CHIP	6.8Kohm,1%,1/10W,TP,1608	1	SNA
R408	2007-001068	R-CHIP	6.8Kohm,1%,1/10W,TP,1608	1	SNA
R411	2007-001068	R-CHIP	6.8Kohm,1%,1/10W,TP,1608	1	SNA
C107	2201-000987	C-CERAMIC,DISC	2.2NF,20%,400V,Y5U,BK,12.5X6MM,10	1	SNA
C108	2201-000987	C-CERAMIC,DISC	2.2NF,20%,400V,Y5U,BK,12.5X6MM,10	1	SNA
C109	2201-002193	C-CERAMIC,DISC	0.082nF,±10%,3000V,SL,-8.5 X 3,5	1	SNA
C502	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C503	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C504	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C505	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C506	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C507	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C508	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C509	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C510	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C102	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C201	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C202	2203-000257	C-CER,CHIP	10nF,10%,50V,X7R,1608	1	SNA
C203	2203-000257	C-CER,CHIP	10nF,10%,50V,X7R,1608	1	SNA
C204	2203-000257	C-CER,CHIP	10nF,10%,50V,X7R,1608	1	SNA
C401	2203-000440	C-CER,CHIP	1nF,10%,50V,X7R,1608	1	SNA

MAIN PCB : DB93-05620C(cont.)

Location No.	Code No.	Description	Specification	Q'ty	SNA/SA
C405	2203-000440	C-CER,CHIP	1nF,10%,50V,X7R,1608	1	SNA
C406	2203-000440	C-CER,CHIP	1nF,10%,50V,X7R,1608	1	SNA
C104	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
C106	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
C402	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
C403	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
C407	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
C501	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
C801	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
C901	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
XC71	2301-001220	C-FILM,LEAD-PPF	100nF,10%,275V,BK,18x6x12,15	1	SNA
XC72	2301-001220	C-FILM,LEAD-PPF	100nF,10%,275V,BK,18x6x12,15	1	SNA
CR71	2301-001363	C-FILM,LEAD-PPF	2000nF,+10-5%,450V,BK,38x18x30mm,33	1	SNA
C105	2401-000037	C-AL	470uF,20%,16V,GP,TP,8x11.5,5	1	SNA
C103	2401-000151	C-AL	1000uF,20%,25V,GP,TP,10x20,5	1	SNA
C601	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C101	2401-003895	C-AL	15uF,20%,450V,GP,TP,12.5x20mm,5	1	SNA
XTAL51	2802-001179	RESONATOR-CERAMIC	4MHZ,0.5%,BK,8X3X5.5MM	1	SNA
BZ61	3002-001129	BUZZER-PIEZO	85DB,-,-,2KHZ,-	1	SNA
SS71	3502-000115	SSR	12Vdc,-,2A,1mS,1mS	1	SNA
F701_1	3601-000263	FUSE-CARTRIDGE	250V,3.15A,TIME-LAG,GLASS,5x20mm	1	SNA
F702	3601-001209	FUSE-RADIAL LEAD	250V,1A,TIME-LAG,-,8.5x8mm	1	SNA
CN72	3711-000262	HEADER-BOARD TO CABLE	1WALL,3P,1R,7.92MM,STRAIGHT,SN,WHT	1	SNA
CN44	3711-000879	HEADER-BOARD TO CABLE	BOX,3P,1R,2.5mm,STRAIGHT,SN,BLU	1	SNA
CN71	3711-003404	HEADER-BOARD TO CABLE	1WALL,2P,1R,7.92mm,STRAIGHT,SN,BLU	1	SNA
CN80	3711-000941	HEADER-BOARD TO CABLE	SMW250-04 YEL	1	SNA
	3711-004352	CONNECTOR-HEADER	SMW200-15 NTR	1	SNA
CN43	3711-004379	HEADER-BOARD TO CABLE	BOX,4P,1R,2mm,STRAIGHT,SN,NTR	1	SNA
CN61	3711-004484	HEADER-BOARD TO CABLE	BOX,5P,1R,2mm,STRAIGHT,SN,NTR	1	SNA
AC_L	3712-001139	CONNECTOR-TERMINAL	TAB,MALE,-,6.35X0.8MM	1	SNA
ST11	DB26-00015A	TRANS SWITCHING	JT1916-09,	1	SNA
FT71	DB27-00017A	COIL CHOKE	USAV-07153,UU1116,15.0mH	1	SNA
CN21	DB39-01194A	CONNECT WIRE-15P	26 AWG,-,15,140,WHT	1	SNA
PCB	DB41-00526A	PCB MAIN	CEM-3,2,1.0,T 1.6mm,160*140mm	1	SNA
F701	DB61-00924A	HOLDER-FUSE	-,FH-51B,-,-,-,SSEC	1	SNA
IC04	DB91-00374A	ASSY-MICOM	INV-Forte2,MB90F823, 80P, ROM 128K bytes	1	SNA
CN21	DB93-04257A	ASSY PCB SUB	COMM 485	1	SA

INDOOR SUB PCB : DB93-04257A

Location No.	Code No.	Description	Specification	Q'ty	SNA/SA
CD312	0406-001204	DIODE-TVS	SMBJ5.0CA,6.4/-7.07V,600W,SMB	1	SNA
IC31	0604-001003	PHOTO-COUPLER	TR,50-150%,200mW,DIP-4,ST	1	SNA
IC20	0801-000393	IC-CMOS LOGIC	74HC86,OR GATE,SOP,14P,1	1	SNA
IC18	1006-001325	IC-BUS TRANSCEIVER	1487,SO,8P	1	SNA
R204	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R205	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R206	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R201	2007-000084	R-CHIP	4.7Kohm,5%,1/10W,TP,1608	1	SNA
R202	2007-000084	R-CHIP	4.7Kohm,5%,1/10W,TP,1608	1	SNA
R203	2007-000084	R-CHIP	4.7Kohm,5%,1/10W,TP,1608	1	SNA
R315	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R302	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R303	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R304	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R305	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R350	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R309	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R310	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R311	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R312	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
C302	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C303	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C304	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C305	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C306	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C307	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C316	2203-005249	C-CER,CHIP	100nF,10%,50V,X7R,1608	1	SNA
RY01	3501-001248	RELAY-MINIATURE	12V,-,11.7MA,DPDT,4MS,4MS	1	SNA
CN31	3711-000015	HEADER-BOARD TO CABLE	BOX,2P,1R,2.5MM,STRAIGHT,SN,WHT	1	SNA
CN12	3711-003847	HEADER-BOARD TO CABLE	BOX,12P,1R,2mm,ANGLE,SN	1	SNA
CN11	3711-006040	HEADER-BOARD TO BOARD	NOWALL,10P,2R,2.54mm,ANGLE,AU,BLK	1	SNA
PCB	DB41-00528A	PCB SUB	CEM-3,2,1.0,1.6T,50*33,-,9,-,COMM 485	1	SNA

OUTDOOR MAIN PCB : DB93-04266K (AQV18M*AX)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
D102	0402-000351	DIODE-RECTIFIER	1N4937,600V,1A,DO-41,TP	1	SNA
D401	0402-000351	DIODE-RECTIFIER	1N4937,600V,1A,DO-41,TP	1	SNA
D402	0402-000351	DIODE-RECTIFIER	1N4937,600V,1A,DO-41,TP	1	SNA
D403	0402-000351	DIODE-RECTIFIER	1N4937,600V,1A,DO-41,TP	1	SNA
D103	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
D104	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
D105	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
D106	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
ZD72	0403-000258	DIODE-ZENER	BZX84C5V6,5.2-6V,225mW,SOT-23,TP	1	SNA
CD31	0406-001109	DIODE-TVS	SAC5.0,7.6/-/-V,500W,DO-15	1	SNA
CD32	0406-001109	DIODE-TVS	SAC5.0,7.6/-/-V,500W,DO-15	1	SNA
D201	0407-000123	DIODE-ARRAY	DAN202K,80V,100mA,CA2-3,SOT-23,TP	1	SNA
D451	0407-000123	DIODE-ARRAY	DAN202K,80V,100mA,CA2-3,SOT-23,TP	1	SNA
Q904	0504-000001	TR-DIGITAL	DTA114EKA,PNP,200mW,10K/10K,SOT-23,TP	1	SNA
Q905	0504-000001	TR-DIGITAL	DTA114EKA,PNP,200mW,10K/10K,SOT-23,TP	1	SNA
Q906	0504-000001	TR-DIGITAL	DTA114EKA,PNP,200mW,10K/10K,SOT-23,TP	1	SNA
Q907	0504-000001	TR-DIGITAL	DTA114EKA,PNP,200mW,10K/10K,SOT-23,TP	1	SNA
Q801	0504-000127	TR-DIGITAL	FJV3102RMTF,NPN,200MW,10K/10K,SOT-23,TP	1	SNA
IC51	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC52	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC53	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC54	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC55	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC72	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
Q803	0508-001154	TR-IGBT	-,600V,80A,-,195W,TO-3P	1	SNA
IC31	0604-001003	PHOTO-COUPLER	TR,50-150%,200mW,DIP-4,ST	1	SNA
IC12	0604-001172	PHOTO-COUPLER	TR,100-300,200mW,SOP,TP	1	SNA
IC61	0604-001172	PHOTO-COUPLER	TR,100-300,200mW,SOP,TP	1	SNA
IC62	0604-001172	PHOTO-COUPLER	TR,100-300,200mW,SOP,TP	1	SNA
IC30	0801-000393	IC-CMOS LOGIC	74HC86,OR GATE,SOP,14P	1	SNA
IC20	1006-001325	IC-BUS TRANSCEIVER	1487,SO,8P	1	SNA
IC701	1103-001175	IC-EEPROM	93LC56,128x16,SOP,8P	1	SNA
IC41	1201-000166	IC-OP AMP	LM358,SOP,ST,8P	1	SNA
IC21	1202-000104	IC-VOLTAGE COMP.	393,SOP,8P	1	SNA
IC42	1202-000104	IC-VOLTAGE COMP.	393,SOP,9P	1	SNA
IC16	1203-000274	IC-POS.FIXED REG.	7805,TO-220,3P	1	SNA
IC19	1203-000274	IC-POS.FIXED REG.	7805,TO-220,3P	1	SNA
IC13	1203-002948	IC-POSI.ADJUST REG.	TL431ACD,SOP,8P	1	SNA
IC59	1203-003334	IC-RESET	S-801,SOT-23,5P	1	SNA
IC702	1203-003334	IC-RESET	S-801,SOT-23,5P	1	SNA
IC11	1203-003527	IC-PWM CONTROLLER	TOP243,DIP,7P	1	SNA
R107	2003-000708	R-METAL OXIDE(S)	47ohm,5%,1W	1	SNA
R101	2003-000855	R-METAL OXIDE(S)	47Kohm,5%,3W	1	SNA
R001	2006-001080	R-CEMENT(S)	200ohm,5%,5W	1	SNA
R421	2006-001131	R-CEMENT	0.017ohm,5%,15W	1	SNA
R301	2007-000023	R-CHIP	120ohm,5%,1/8W,TP,2012	1	SNA
R504	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R505	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R506	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R507	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R508	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R513	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R518	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R519	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R520	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R521	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R522	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R523	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R701	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA

OUTDOOR MAIN PCB : DB93-4266K (AQV18M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
R702	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R724	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R512	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R704	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R509	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R709	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R710	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R711	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R712	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R713	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R510	2007-000109	R-CHIP	1Mohm,5%,1/10W,TP,1608	1	SNA
R703	2007-000109	R-CHIP	1Mohm,5%,1/10W,TP,1608	1	SNA
R106	2007-000263	R-CHIP	1.82Kohm,1%,1/8W,TP,2012	1	SNA
R203	2007-000263	R-CHIP	1.82Kohm,1%,1/8W,TP,2012	1	SNA
R204	2007-000263	R-CHIP	1.82Kohm,1%,1/8W,TP,2012	1	SNA
R401	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R402	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R403	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R404	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R405	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R406	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R425	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R426	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R302	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R303	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R304	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R305	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R306	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R315	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R805	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R916	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R917	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R115	2007-000385	R-CHIP	14.3Kohm,1%,1/4W,TP,3216	1	SNA
R103	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R427	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R601	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R604	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R706	2007-000512	R-CHIP	2.4Kohm,5%,1/10W,TP,1608	1	SNA
R707	2007-000512	R-CHIP	2.4Kohm,5%,1/10W,TP,1608	1	SNA
R708	2007-000512	R-CHIP	2.4Kohm,5%,1/10W,TP,1608	1	SNA
R420	2007-000515	R-CHIP	2.7Kohm,1%,1/8W,TP,2012	1	SNA
R423	2007-000546	R-CHIP	20Kohm,5%,1/8W,TP,2012	1	SNA
R807	2007-000553	R-CHIP	20ohm,5%,1/4W,TP,3216	1	SNA
R722	2007-000613	R-CHIP	24Kohm,1%,1/8W,TP,2012	1	SNA
R307	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R308	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R311	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R312	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R205	2007-000671	R-CHIP	2Kohm,5%,1/8W,TP,2012	1	SNA
R208	2007-000671	R-CHIP	2Kohm,5%,1/8W,TP,2012	1	SNA
R104	2007-000686	R-CHIP	3.3Kohm,5%,1/8W,TP,2012	1	SNA
R602	2007-000766	R-CHIP	330ohm,5%,1/8W,TP,2012	1	SNA
R603	2007-000766	R-CHIP	330ohm,5%,1/8W,TP,2012	1	SNA
R408	2007-000781	R-CHIP	33ohm,5%,1/8W,TP,2012	1	SNA
R409	2007-000781	R-CHIP	33ohm,5%,1/8W,TP,2012	1	SNA
R410	2007-000781	R-CHIP	33ohm,5%,1/8W,TP,2012	1	SNA
R424	2007-000868	R-CHIP	4.7Kohm,1%,1/8W,TP,2012	1	SNA
R407	2007-000872	R-CHIP	4.7Kohm,5%,1/8W,TP,2012	1	SNA
R112	2007-000924	R-CHIP	470Kohm,1%,1/4W,TP,3216	1	SNA
R113	2007-000924	R-CHIP	470Kohm,1%,1/4W,TP,3216	1	SNA

OUTDOOR MAIN PCB : DB93-4266K (AQV18M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
R114	2007-000924	R-CHIP	470Kohm,1%,1/4W,TP,3216	1	SNA
R412	2007-000928	R-CHIP	470ohm,1%,1/8W,TP,2012	1	SNA
R808	2007-000931	R-CHIP	470ohm,5%,1/8W,TP,2012	1	SNA
R422	2007-000938	R-CHIP	47Kohm,1%,1/8W,TP,2012	1	SNA
R806	2007-000950	R-CHIP	47ohm,5%,1/4W,TP,3216	1	SNA
R910	2007-000964	R-CHIP	5.1Kohm,5%,1/8W,TP,2012	1	SNA
R911	2007-000964	R-CHIP	5.1Kohm,5%,1/8W,TP,2012	1	SNA
R912	2007-000964	R-CHIP	5.1Kohm,5%,1/8W,TP,2012	1	SNA
R511	2007-000965	R-CHIP	5.1Kohm,5%,1/10W,TP,1608	1	SNA
R705	2007-000965	R-CHIP	5.1Kohm,5%,1/10W,TP,1608	1	SNA
R102	2007-001074	R-CHIP	6.8ohm,5%,1/8W,TP,2012	1	SNA
R907	2007-001179	R-CHIP	8.2Kohm,5%,1/10W,TP,1608	1	SNA
R908	2007-001179	R-CHIP	8.2Kohm,5%,1/10W,TP,1608	1	SNA
R909	2007-001179	R-CHIP	8.2Kohm,5%,1/10W,TP,1608	1	SNA
R900	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R901	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R902	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R903	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R904	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R905	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R906	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R201	2007-002667	R-CHIP	90.9Kohm,1%,1/4W,TP,3216	1	SNA
R202	2007-002667	R-CHIP	90.9Kohm,1%,1/4W,TP,3216	1	SNA
R206	2007-002667	R-CHIP	90.9Kohm,1%,1/4W,TP,3216	1	SNA
R207	2007-002667	R-CHIP	90.9Kohm,1%,1/4W,TP,3216	1	SNA
R500	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R501	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R502	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R515	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R516	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R517	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R524	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R525	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R526	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R527	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R416	2007-000254	R-CHIP	1.62Kohm,1%,1/10W,TP,2012	1	SNA
R503	2007-007237	R-CHIP	24.3Kohm,1%,1/10W,TP,1608	1	SNA
R514	2007-007237	R-CHIP	24.3Kohm,1%,1/10W,TP,1608	1	SNA
R723	2007-007237	R-CHIP	24.3Kohm,1%,1/10W,TP,1608	1	SNA
R105	2007-007445	R-CHIP	9.09Kohm,1%,1/10W,TP,1608	1	SNA
R721	2007-007454	R-CHIP	332ohm,1%,1/10W,TP,1608	1	SNA
R417	2007-008562	R-CHIP	30.1OHM,1%,1/10W,TP,2012	1	SNA
R116	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R117	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R118	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R413	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R414	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R415	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R429	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R430	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R431	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R418	2007-009114	R-CHIP	110Kohm,1%,1/2W,TP,5025	1	SNA
R419	2007-009114	R-CHIP	110Kohm,1%,1/2W,TP,5025	1	SNA
R432	2007-009114	R-CHIP	110Kohm,1%,1/2W,TP,5025	1	SNA
C307	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV,Y5P,TP,20X5MM,7.5	1	SNA
C308	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV,Y5P,TP,20X5MM,7.5	1	SNA
C309	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV,Y5P,TP,20X5MM,7.5	1	SNA
C310	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV,Y5P,TP,20X5MM,7.5	1	SNA
C105	2201-000322	C-CERAMIC,DISC	2.2NF,10%,2KV,Y5P,TP,13X5MM,10	1	SNA
C106	2201-000322	C-CERAMIC,DISC	2.2NF,10%,2KV,Y5P,TP,13X5MM,10	1	SNA

OUTDOOR MAIN PCB : DB93-4266K (AQV18M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
C411	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C412	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C413	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C414	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C415	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C416	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C202	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C505	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C506	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C507	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C508	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C509	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C510	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C511	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C512	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C513	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C701	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C702	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C703	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C704	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C705	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C707	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C708	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C710	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C711	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C713	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C715	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C722	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C109	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C112	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C116	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C117	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C121	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C302	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C303	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C304	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C305	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C306	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C404	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C405	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C406	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C407	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C408	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C409	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C410	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C417	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C418	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C429	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C430	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C501	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C502	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C503	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C504	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C517	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C518	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C519	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C520	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C521	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C522	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA

OUTDOOR MAIN PCB : DB93-4266K (AQV18M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
C523	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C524	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C706	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C721	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C423	2203-000495	C-CER,CHIP	2.2nF,10%,50V,X7R,2012	1	SNA
C425	2203-000495	C-CER,CHIP	2.2nF,10%,50V,X7R,2012	1	SNA
C419	2203-000609	C-CER,CHIP	22nF,10%,50V,X7R,TP,2012	1	SNA
C420	2203-000609	C-CER,CHIP	22nF,10%,50V,X7R,TP,2012	1	SNA
C426	2203-000818	C-CER,CHIP	0.033nF,5%,50V,C0G,2012	1	SNA
C424	2203-000891	C-CER,CHIP	4.7nF,10%,50V,X7R,2012	1	SNA
C108	2203-001414	C-CER,CHIP	330nF,10%,50V,X7R,2012	1	SNA
C201	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C203	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C204	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C205	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C301	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C427	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C602	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C603	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C801	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C900	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C901	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C902	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C907	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C908	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C113	2203-005261	C-CER,CHIP	1000nF,10%,25V,X7R,3216	1	SNA
C122	2203-005261	C-CER,CHIP	1000nF,10%,25V,X7R,3216	1	SNA
C802	2203-005261	C-CER,CHIP	1000nF,10%,25V,X7R,3216	1	SNA
C008	2301-000141	C-FILM,LEAD-PEF	10nF,10%,630V,TP,16x11x7.5mm,5	1	SNA
C422	2306-000123	C-FILM,LEAD-PPF	100nF,5%,630V,BK,26x16.5x8.5,2	1	SNA
C803	2306-000123	C-FILM,LEAD-PPF	100nF,5%,630V,BK,26x16.5x8.5,2	1	SNA
C123	2401-000303	C-AL	100uF,20%,25V,GP,TP,6.3x11,5	1	SNA
C104	2401-000470	C-AL	10uF,20%,450V,GP,TP,13x20mm,5m	1	SNA
C110	2401-000832	C-AL	220uF,20%,25V,GP,TP,8x11.5,5	1	SNA
C114	2401-000832	C-AL	220uF,20%,25V,GP,TP,8x11.5,5	1	SNA
C119	2401-000832	C-AL	220uF,20%,25V,GP,TP,8x11.5,5	1	SNA
C805	2401-000832	C-AL	220uF,20%,25V,GP,TP,8x11.5,5	1	SNA
C107	2401-001552	C-AL	47uF,20%,35V,GP,TP,6.3x11,2,5	1	SNA
C428	2401-001552	C-AL	47uF,20%,35V,GP,TP,6.3x11,2,5	1	SNA
C714	2401-001552	C-AL	47uF,20%,35V,GP,TP,6.3x11,2,5	1	SNA
C421	2401-002274	C-AL	220uF,20%,35V,WT,TP,10x12.5,5	1	SNA
C118	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C401	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C402	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C403	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C709	2401-003036	C-AL	100uF,20%,16V,GP,TP,5X11mm,5mm	1	SNA
C101	2401-003740	C-AL	560uF,20%,400V,WT,BK,35x50mm,10	1	SNA
C102	2401-003740	C-AL	560uF,20%,400V,WT,BK,35x50mm,10	1	SNA
C103	2401-003740	C-AL	560uF,20%,400V,WT,BK,35x50mm,10	1	SNA
XTAL01	2802-001179	RESONATOR-CERAMIC	4MHZ,0.5%,BK,8X3X5.5MM	1	SNA
XTAL51	2802-001179	RESONATOR-CERAMIC	4MHZ,0.5%,BK,8X3X5.5MM	1	SNA
RY03	3501-001154	RELAY-MINIATURE	12Vdc,200mW,3000mA,1FormA,10mS,10mS	1	SNA
RY04	3501-001154	RELAY-MINIATURE	12Vdc,200mW,3000mA,1FormA,10mS,10mS	1	SNA
RY05	3501-001154	RELAY-MINIATURE	12Vdc,200mW,3000mA,1FormA,10mS,10mS	1	SNA
RY01	3501-001169	RELAY-POWER	12VDC,0.9W,20000MA,SPST,20MS,10MS	1	SNA
RY31	3501-001248	RELAY-MINIATURE	12V,-,11.7MA,DPDT,4MS,4MS	1	SNA
CN30	3711-001031	HEADER-BOARD TO CABLE	BOX,6P,1R,2.5MM,ANGLE,SN,WHT	1	SNA
CN61	3711-004484	HEADER-BOARD TO CABLE	BOX,5P,1R,2mm,STRAIGHT,SN,NTR	1	SNA
PT02	DB26-00075A	TRANS SWITCHING	PT-50	1	SNA
PCB	DB41-00530A	PCB MAIN	CEM-3,2,1.0,1.6T,180*220	1	SNA

OUTDOOR MAIN PCB : DB93-4266K (AQV18M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
IC70	DB91-00381A	ASSY-MICOM	MB90F823 INV	1	SNA
IC50	DB91-00386A	ASSY-MICOM	MB90F824 MAIN	1	SNA
C/W COMM	DB93-04333B	L/W COMM 485	5TURN	1	SNA
C/W REACTOR	DB93-04334A	C/W REACTOR	C/W REACTOR	1	SNA
C/W COMP	DB93-04335A	COMP	C/W COMP	1	SNA
C/W FAN	DB93-04338A	FAN -MOTOR	YEL,BLU ,RED	1	SNA
C/W EARTH	DB93-04344A	EARTH	L/W EARTH	1	SNA
C/W 4WAY	DB93-04349A	4WAY	C/W 4 WAY	1	SNA
L/W POWER L	DB93-04351A	L/W POWER L	L/W POWER L	1	SNA
L/W POWER R	DB93-04351B	L/W POWER R	L/W POWER R	1	SNA
IC81	DB95-00595A	ASSY-PHOTO COUPLER	TLP250	1	SNA
IPM	DB95-00954A	ASSY-IPM	PS21267-P	1	SNA
BD01	DB98-16586A	ASSY-DIODE	GS1B2560	1	SNA
D101	DB98-16591A	ASSY-DIODE RECTIFIER	FEP30JP	1	SNA
LED2	DB98-16600A	ASSY-LED GREEN	ASSY-LED GREEN	1	SNA
LED1	DB98-16601A	ASSY-LED RED	ASSY-LED RED	1	SNA
LED3	DB98-16602A	ASSY-LED YEL	ASSY-LED YEL	1	SNA
CN51	DB98-22298A	ASSY-HOOK WHT	SMAW250A-04	1	SNA
CN50	DB98-22299A	ASSY-HOOK WHT	SMAW250A-04	1	SNA

OUTDOOR MAIN PCB : DB93-4266J (AQV24M*AX)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
D102	0402-000351	DIODE-RECTIFIER	1N4937,600V,1A,DO-41,TP	1	SNA
D401	0402-000351	DIODE-RECTIFIER	1N4937,600V,1A,DO-41,TP	1	SNA
D402	0402-000351	DIODE-RECTIFIER	1N4937,600V,1A,DO-41,TP	1	SNA
D403	0402-000351	DIODE-RECTIFIER	1N4937,600V,1A,DO-41,TP	1	SNA
D103	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
D104	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
D105	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
D106	0402-001427	DIODE-RECTIFIER	ES1D,200V,1A,DO-214AC,TP	1	SNA
ZD72	0403-000258	DIODE-ZENER	BZX84C5V6,5.2-6V,225mW,SOT-23,TP	1	SNA
CD31	0406-001109	DIODE-TVS	SAC5.0,7.6/-/-V,500W,DO-15	1	SNA
CD32	0406-001109	DIODE-TVS	SAC5.0,7.6/-/-V,500W,DO-15	1	SNA
D201	0407-000123	DIODE-ARRAY	DAN202K,80V,100mA,CA2-3,SOT-23,TP	1	SNA
D451	0407-000123	DIODE-ARRAY	DAN202K,80V,100mA,CA2-3,SOT-23,TP	1	SNA
Q904	0504-000001	TR-DIGITAL	DTA114EKA,PNP,200mW,10K/10K,SOT-23,TP	1	SNA
Q905	0504-000001	TR-DIGITAL	DTA114EKA,PNP,200mW,10K/10K,SOT-23,TP	1	SNA
Q906	0504-000001	TR-DIGITAL	DTA114EKA,PNP,200mW,10K/10K,SOT-23,TP	1	SNA
Q907	0504-000001	TR-DIGITAL	DTA114EKA,PNP,200mW,10K/10K,SOT-23,TP	1	SNA
Q801	0504-000127	TR-DIGITAL	FJV3102RMTF,NPN,200MW,10K/10K,SOT-23,TP	1	SNA
IC51	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC52	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC53	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC54	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC55	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
IC72	0506-000175	TR-ARRAY	2003,NPN,7,1W,SOP-16,ST,1000	1	SNA
Q803	0508-001154	TR-IGBT	-,600V,80A,-,195W,TO-3P	1	SNA
IC31	0604-001003	PHOTO-COUPLER	TR,50-150%,200mW,DIP-4,ST	1	SNA
IC12	0604-001172	PHOTO-COUPLER	TR,100-300,200mW,SOP,TP	1	SNA
IC61	0604-001172	PHOTO-COUPLER	TR,100-300,200mW,SOP,TP	1	SNA
IC62	0604-001172	PHOTO-COUPLER	TR,100-300,200mW,SOP,TP	1	SNA
IC30	0801-000393	IC-CMOS LOGIC	74HC86,OR GATE,SOP,14P	1	SNA
IC20	1006-001325	IC-BUS TRANSCEIVER	1487,SO,8P	1	SNA
IC701	1103-001175	IC-EEPROM	93LC56,128x16,SOP,8P	1	SNA
IC41	1201-000166	IC-OP AMP	LM358,SOP,ST,8P	1	SNA
IC21	1202-000104	IC-VOLTAGE COMP.	393,SOP,8P	1	SNA
IC42	1202-000104	IC-VOLTAGE COMP.	393,SOP,9P	1	SNA
IC16	1203-000274	IC-POSI.FIXED REG.	7805,TO-220,3P	1	SNA
IC19	1203-000274	IC-POSI.FIXED REG.	7805,TO-220,3P	1	SNA
IC13	1203-002948	IC-POSI.ADJUST REG.	TL431ACD,SOP,8P	1	SNA
IC59	1203-003334	IC-RESET	S-801,SOT-23,5P	1	SNA
IC702	1203-003334	IC-RESET	S-801,SOT-23,5P	1	SNA
IC11	1203-003527	IC-PWM CONTROLLER	TOP243,DIP,7P	1	SNA
R107	2003-000708	R-METAL OXIDE(S)	47ohm,5%,1W	1	SNA
R101	2003-000855	R-METAL OXIDE(S)	47Kohm,5%,3W	1	SNA
R001	2006-001080	R-CEMENT(S)	200ohm,5%,5W	1	SNA
R421	2006-001145	R-CEMENT	0.01ohm,5%,15W	1	SNA
R301	2007-000023	R-CHIP	120ohm,5%,1/8W,TP,2012	1	SNA
R504	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R505	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R506	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R507	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R508	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R513	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R518	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R519	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R520	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R521	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R522	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R523	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R701	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R702	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA

OUTDOOR MAIN PCB : DB93-4266J (AQV24M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
R724	2007-000076	R-CHIP	330ohm,5%,1/10W,TP,1608	1	SNA
R512	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R704	2007-000078	R-CHIP	1Kohm,5%,1/10W,TP,1608	1	SNA
R509	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R709	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R710	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R711	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R712	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R713	2007-000090	R-CHIP	10Kohm,5%,1/10W,TP,1608	1	SNA
R510	2007-000109	R-CHIP	1Mohm,5%,1/10W,TP,1608	1	SNA
R703	2007-000109	R-CHIP	1Mohm,5%,1/10W,TP,1608	1	SNA
R106	2007-000263	R-CHIP	1.82Kohm,1%,1/8W,TP,2012	1	SNA
R203	2007-000263	R-CHIP	1.82Kohm,1%,1/8W,TP,2012	1	SNA
R204	2007-000263	R-CHIP	1.82Kohm,1%,1/8W,TP,2012	1	SNA
R401	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R402	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R403	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R404	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R405	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R406	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R425	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R426	2007-000290	R-CHIP	100ohm,5%,1/8W,TP,2012	1	SNA
R302	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R303	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R304	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R305	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R306	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R315	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R805	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R916	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R917	2007-000300	R-CHIP	10Kohm,5%,1/8W,TP,2012	1	SNA
R115	2007-000385	R-CHIP	14.3Kohm,1%,1/4W,TP,3216	1	SNA
R103	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R427	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R601	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R604	2007-000468	R-CHIP	1Kohm,5%,1/8W,TP,2012	1	SNA
R706	2007-000512	R-CHIP	2.4Kohm,5%,1/10W,TP,1608	1	SNA
R707	2007-000512	R-CHIP	2.4Kohm,5%,1/10W,TP,1608	1	SNA
R708	2007-000512	R-CHIP	2.4Kohm,5%,1/10W,TP,1608	1	SNA
R420	2007-000515	R-CHIP	2.7Kohm,1%,1/8W,TP,2012	1	SNA
R423	2007-000546	R-CHIP	20Kohm,5%,1/8W,TP,2012	1	SNA
R807	2007-000553	R-CHIP	20ohm,5%,1/4W,TP,3216	1	SNA
R722	2007-000613	R-CHIP	24Kohm,1%,1/8W,TP,2012	1	SNA
R307	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R308	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R311	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R312	2007-000656	R-CHIP	27Kohm,5%,1/4W,TP,3216	1	SNA
R205	2007-000671	R-CHIP	2Kohm,5%,1/8W,TP,2012	1	SNA
R208	2007-000671	R-CHIP	2Kohm,5%,1/8W,TP,2012	1	SNA
R104	2007-000686	R-CHIP	3.3Kohm,5%,1/8W,TP,2012	1	SNA
R602	2007-000766	R-CHIP	330ohm,5%,1/8W,TP,2012	1	SNA
R603	2007-000766	R-CHIP	330ohm,5%,1/8W,TP,2012	1	SNA
R408	2007-000781	R-CHIP	33ohm,5%,1/8W,TP,2012	1	SNA
R409	2007-000781	R-CHIP	33ohm,5%,1/8W,TP,2012	1	SNA
R410	2007-000781	R-CHIP	33ohm,5%,1/8W,TP,2012	1	SNA
R424	2007-000868	R-CHIP	4.7Kohm,1%,1/8W,TP,2012	1	SNA
R407	2007-000872	R-CHIP	4.7Kohm,5%,1/8W,TP,2012	1	SNA
R112	2007-000924	R-CHIP	470Kohm,1%,1/4W,TP,3216	1	SNA
R113	2007-000924	R-CHIP	470Kohm,1%,1/4W,TP,3216	1	SNA
R114	2007-000924	R-CHIP	470Kohm,1%,1/4W,TP,3216	1	SNA
R412	2007-000928	R-CHIP	470ohm,1%,1/8W,TP,2012	1	SNA

OUTDOOR MAIN PCB : DB93-4266J (AQV24M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
R808	2007-000931	R-CHIP	470ohm,5%,1/8W,TP,2012	1	SNA
R422	2007-000938	R-CHIP	47Kohm,1%,1/8W,TP,2012	1	SNA
R806	2007-000950	R-CHIP	47ohm,5%,1/4W,TP,3216	1	SNA
R910	2007-000964	R-CHIP	5.1Kohm,5%,1/8W,TP,2012	1	SNA
R911	2007-000964	R-CHIP	5.1Kohm,5%,1/8W,TP,2012	1	SNA
R912	2007-000964	R-CHIP	5.1Kohm,5%,1/8W,TP,2012	1	SNA
R511	2007-000965	R-CHIP	5.1Kohm,5%,1/10W,TP,1608	1	SNA
R705	2007-000965	R-CHIP	5.1Kohm,5%,1/10W,TP,1608	1	SNA
R102	2007-001074	R-CHIP	6.8ohm,5%,1/8W,TP,2012	1	SNA
R907	2007-001179	R-CHIP	8.2Kohm,5%,1/10W,TP,1608	1	SNA
R908	2007-001179	R-CHIP	8.2Kohm,5%,1/10W,TP,1608	1	SNA
R909	2007-001179	R-CHIP	8.2Kohm,5%,1/10W,TP,1608	1	SNA
R900	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R901	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R902	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R903	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R904	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R905	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R906	2007-001318	R-CHIP	1Kohm,5%,1/4W,TP,3216	1	SNA
R201	2007-002667	R-CHIP	90.9Kohm,1%,1/4W,TP,3216	1	SNA
R202	2007-002667	R-CHIP	90.9Kohm,1%,1/4W,TP,3216	1	SNA
R206	2007-002667	R-CHIP	90.9Kohm,1%,1/4W,TP,3216	1	SNA
R207	2007-002667	R-CHIP	90.9Kohm,1%,1/4W,TP,3216	1	SNA
R500	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R501	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R502	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R515	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R516	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R517	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R524	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R525	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R526	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R527	2007-002903	R-CHIP	18.2Kohm,1%,1/10W,TP,1608	1	SNA
R416	2007-000254	R-CHIP	1.62Kohm,1%,1/10W,TP, 2012	1	SNA
R503	2007-007237	R-CHIP	24.3Kohm,1%,1/10W,TP,1608	1	SNA
R514	2007-007237	R-CHIP	24.3Kohm,1%,1/10W,TP,1608	1	SNA
R723	2007-007237	R-CHIP	24.3Kohm,1%,1/10W,TP,1608	1	SNA
R105	2007-007445	R-CHIP	9.09Kohm,1%,1/10W,TP,1608	1	SNA
R721	2007-007454	R-CHIP	332ohm,1%,1/10W,TP,1608	1	SNA
R417	2007-008562	R-CHIP	30.1OHM,1%,1/10W,TP, 2012	1	SNA
R116	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R117	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R118	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R413	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R414	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R415	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R429	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R430	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R431	2007-008261	R-CHIP	150KOHM,1%,1/2W,TP,5025	1	SNA
R418	2007-009114	R-CHIP	110Kohm,1%,1/2W,TP,5025	1	SNA
R419	2007-009114	R-CHIP	110Kohm,1%,1/2W,TP,5025	1	SNA
R432	2007-009114	R-CHIP	110Kohm,1%,1/2W,TP,5025	1	SNA
C307	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV,Y5P,TP,20X5MM,7.5	1	SNA
C308	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV,Y5P,TP,20X5MM,7.5	1	SNA
C309	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV,Y5P,TP,20X5MM,7.5	1	SNA
C310	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV,Y5P,TP,20X5MM,7.5	1	SNA
C105	2201-000322	C-CERAMIC,DISC	2.2NF,10%,2KV,Y5P,TP,13X5MM,10	1	SNA
C106	2201-000322	C-CERAMIC,DISC	2.2NF,10%,2KV,Y5P,TP,13X5MM,10	1	SNA
C411	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C412	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C413	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA

OUTDOOR MAIN PCB : DB93-4266J (AQV24M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
C414	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C415	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C416	2203-000126	C-CER,CHIP	1.2nF,10%,50V,X7R,TP,2012	1	SNA
C202	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C505	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C506	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C507	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C508	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C509	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C510	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C511	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C512	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C513	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C701	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C702	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C703	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C704	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C705	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C707	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C708	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C710	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C711	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C713	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C715	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C722	2203-000189	C-CER,CHIP	100nF,+80-20%,25V,Y5V,1608	1	SNA
C109	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C112	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C116	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C117	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C121	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C302	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C303	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C304	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C305	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C306	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C404	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C405	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C406	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C407	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C408	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C409	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C410	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C417	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C418	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C429	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C430	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C501	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C502	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C503	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C504	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C517	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C518	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C519	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C520	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C521	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C522	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C523	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C524	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C706	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C721	2203-000192	C-CER,CHIP	100nF,+80-20%,50V,Y5V,2012	1	SNA
C423	2203-000495	C-CER,CHIP	2.2nF,10%,50V,X7R,2012	1	SNA

■ OUTDOOR MAIN PCB : DB93-4266J (AQV24M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
C425	2203-000495	C-CER,CHIP	2.2nF,10%,50V,X7R,2012	1	SNA
C419	2203-000609	C-CER,CHIP	22nF,10%,50V,X7R,TP,2012	1	SNA
C420	2203-000609	C-CER,CHIP	22nF,10%,50V,X7R,TP,2012	1	SNA
C426	2203-000818	C-CER,CHIP	0.033nF,5%,50V,C0G,2012	1	SNA
C424	2203-000891	C-CER,CHIP	4.7nF,10%,50V,X7R,2012	1	SNA
C108	2203-001414	C-CER,CHIP	330nF,10%,50V,X7R,2012	1	SNA
C201	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C203	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C204	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C205	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C301	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C427	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C602	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C603	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C801	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C900	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C901	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C902	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C907	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C908	2203-001562	C-CER,CHIP	10nF,+80-20%,50V,Y5V,2012	1	SNA
C113	2203-005261	C-CER,CHIP	1000nF,10%,25V,X7R,3216	1	SNA
C122	2203-005261	C-CER,CHIP	1000nF,10%,25V,X7R,3216	1	SNA
C802	2203-005261	C-CER,CHIP	1000nF,10%,25V,X7R,3216	1	SNA
C008	2301-000141	C-FILM,LEAD-PEF	10nF,10%,630V,TP,16x11x7.5mm,5	1	SNA
C422	2306-000123	C-FILM,LEAD-PPF	100nF,5%,630V,BK,26x16.5x8.5,2	1	SNA
C803	2306-000123	C-FILM,LEAD-PPF	100nF,5%,630V,BK,26x16.5x8.5,2	1	SNA
C123	2401-000303	C-AL	100uF,20%,25V,GP,TP,6.3x11,5	1	SNA
C104	2401-000470	C-AL	10uF,20%,450V,GP,TP,13x20mm,5m	1	SNA
C110	2401-000832	C-AL	220uF,20%,25V,GP,TP,8x11.5,5	1	SNA
C114	2401-000832	C-AL	220uF,20%,25V,GP,TP,8x11.5,5	1	SNA
C119	2401-000832	C-AL	220uF,20%,25V,GP,TP,8x11.5,5	1	SNA
C805	2401-000832	C-AL	220uF,20%,25V,GP,TP,8x11.5,5	1	SNA
C107	2401-001552	C-AL	47uF,20%,35V,GP,TP,6.3x11,2.5	1	SNA
C428	2401-001552	C-AL	47uF,20%,35V,GP,TP,6.3x11,2.5	1	SNA
C714	2401-001552	C-AL	47uF,20%,35V,GP,TP,6.3x11,2.5	1	SNA
C421	2401-002274	C-AL	220uF,20%,35V,WT,TP,10x12.5,5	1	SNA
C118	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C401	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C402	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C403	2401-002300	C-AL	47?F,20%,50V,GP,TP,6.3x11,5mm	1	SNA
C709	2401-003036	C-AL	100uF,20%,16V,GP,TP,5X11mm,5mm	1	SNA
C101	2401-003740	C-AL	560uF,20%,400V,WT,BK,35x50mm,10	1	SNA
C102	2401-003740	C-AL	560uF,20%,400V,WT,BK,35x50mm,10	1	SNA
C103	2401-003740	C-AL	560uF,20%,400V,WT,BK,35x50mm,10	1	SNA
XTAL01	2802-001179	RESONATOR-CERAMIC	4MHZ,0.5%,BK,8X3X5.5MM	1	SNA
XTAL51	2802-001179	RESONATOR-CERAMIC	4MHZ,0.5%,BK,8X3X5.5MM	1	SNA
RY03	3501-001154	RELAY-MINIATURE	12Vdc,200mW,3000mA,1FormA,10mS,10mS	1	SNA
RY04	3501-001154	RELAY-MINIATURE	12Vdc,200mW,3000mA,1FormA,10mS,10mS	1	SNA
RY05	3501-001154	RELAY-MINIATURE	12Vdc,200mW,3000mA,1FormA,10mS,10mS	1	SNA
RY01	3501-001169	RELAY-POWER	12VDC,0.9W,20000MA,SPST,20MS,10MS	1	SNA
RY31	3501-001248	RELAY-MINIATURE	12V,-,11.7MA,DPDT,4MS,4MS	1	SNA
CN30	3711-001031	HEADER-BOARD TO CABLE	BOX,6P,1R,2.5MM,ANGLE,SN,WHT	1	SNA
CN61	3711-004484	HEADER-BOARD TO CABLE	BOX,5P,1R,2mm,STRAIGHT,SN,NTR	1	SNA
PT02	DB26-00075A	TRANS SWITCHING	PT-50	1	SNA
PCB	DB41-00530A	PCB MAIN	CEM-3,2,1.0,1.6T,180*220	1	SNA
IC70	DB91-00381A	ASSY-MICOM	MB90F823 INV	1	SNA
IC50	DB91-00386A	ASSY-MICOM	MB90F824 MAIN	1	SNA
C/W COMM	DB93-04333C	L/W COMM 485	4TURN	1	SNA
C/W REACTOR	DB93-04334A	C/W REACTOR	C/W REACTOR	1	SNA
C/W COMP	DB93-04335A	COMP	C/W COMP	1	SNA
C/W FAN	DB93-04338A	FAN -MOTOR	YEL,BLU ,RED	1	SNA

OUTDOOR MAIN PCB : DB93-4266J (AQV24M*AX)(cont.)

Code No.	Location No.	Description	Specification	Q'ty	SNA/SA
C/W EARTH	DB93-04344A	EARTH	L/W EARTH	1	SNA
C/W 4WAY	DB93-04349A	4WAY	C/W 4 WAY	1	SNA
L/W POWER L	DB93-04351A	L/W POWER L	L/W POWER L	1	SNA
L/W POWER R	DB93-04351B	L/W POWER R	L/W POWER R	1	SNA
IC81	DB95-00595A	ASSY-PHOTO COUPLER	TLP250	1	SNA
IPM	DB95-00954A	ASSY-IPM	PS21267-P	1	SNA
BD01	DB98-16586A	ASSY-DIODE	GS1B2560	1	SNA
D101	DB98-16591A	ASSY-DIODE RECTIFIER	FEP30JP	1	SNA
LED2	DB98-16600A	ASSY-LED GREEN	ASSY-LED GREEN	1	SNA
LED1	DB98-16601A	ASSY-LED RED	ASSY-LED RED	1	SNA
LED3	DB98-16602A	ASSY-LED YEL	ASSY-LED YEL	1	SNA
CN51	DB98-22298A	ASSY-HOOK WHT	SMAW250A-04	1	SNA
CN50	DB98-22299A	ASSY-HOOK WHT	SMAW250A-04	1	SNA

OUTDOOR EMI PCB : DB93-04267B (AQV18M*AX)

Location No.	Code No.	Description	Specification	Q'ty	SNA/SA	Remark
VA01	1405-000154	VARISTOR	460Vdc,2500A	1	SNA	
VA02	1405-000154	VARISTOR	460Vdc,2500A	1	SNA	
VA03	1405-000154	VARISTOR	460Vdc,2500A	1	SNA	
VA05	1405-000154	VARISTOR	460Vdc,2500A	1	SNA	
R002	2001-001150	R-CARBON(S)	470KOHM,5%,1/2W	1	SNA	
R003	2001-001150	R-CARBON(S)	470KOHM,5%,1/2W	1	SNA	
C004	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV	1	SNA	
C005	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV	1	SNA	
C009	2201-000540	C-CERAMIC,DISC	4.7NF,20%,2KV	1	SNA	
C010	2201-000540	C-CERAMIC,DISC	4.7NF,20%,2KV	1	SNA	
C003	2301-001285	C-FILM,LEAD-PPF	680NF,10%,275V	1	SNA	
C007	2301-001285	C-FILM,LEAD-PPF	680NF,10%,275V	1	SNA	
FUSE	3601-001159	FUSE-CARTRIDGE	250V,20A	1	SNA	
FUSE CLIP	3602-001038	FUSE-CLIP	250V,30A,10mohm	2	SNA	
L	3712-001139	CONNECTOR-TERMINAL	TAB,MALE,-,6.35X0.8MM	1	SNA	
N	3712-001139	CONNECTOR-TERMINAL	TAB,MALE,-,6.35X0.8MM	1	SNA	
DSA	4715-001093	SURGE ABSORBER	3600V,20%,2000A,-,AXIAL	1	SNA	
FT00	DB27-00040A	COIL CHOKE	SSC3120030B,3.0mH,	1	SNA	
FT01	DB27-00040A	COIL CHOKE	SSC3120030B,3.0mH,	1	SNA	
PCB	DB41-00531A	PCB SUB	FORTE,CEM-3,2,1.0,1.6T,160*140	1	SNA	
C/W POWER	DB93-05058A	ASSY CONNECTOR WIRE	WIRE	1	SNA	

OUTDOOR EMI PCB :DB93-04267A (AQV24M*AX)


Location No.	Code No.	Description	Specification	Q'ty	SNA/SA	Remark
VA01	1405-000154	VARISTOR	460Vdc,2500A	1	SNA	
VA02	1405-000154	VARISTOR	460Vdc,2500A	1	SNA	
VA03	1405-000154	VARISTOR	460Vdc,2500A	1	SNA	
VA05	1405-000154	VARISTOR	460Vdc,2500A	1	SNA	
R002	2001-001150	R-CARBON(S)	470KOHM,5%,1/2W	1	SNA	
R003	2001-001150	R-CARBON(S)	470KOHM,5%,1/2W	1	SNA	
C004	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV	1	SNA	
C005	2201-000154	C-CERAMIC,DISC	10NF,+80-20%,2KV	1	SNA	
C009	2201-000540	C-CERAMIC,DISC	4.7NF,20%,2KV	1	SNA	
C010	2201-000540	C-CERAMIC,DISC	4.7NF,20%,2KV	1	SNA	
C003	2301-001285	C-FILM,LEAD-PPF	680NF,10%,275V	1	SNA	
C007	2301-001285	C-FILM,LEAD-PPF	680NF,10%,275V	1	SNA	
FUSE	3601-001381	FUSE-CARTRIDGE	250V,30A	1	SNA	
FUSE CLIP	3602-001038	FUSE-CLIP	250V,30A,10mohm	2	SNA	
L	3712-001139	CONNECTOR-TERMINAL	TAB,MALE,-,6.35X0.8MM	1	SNA	
N	3712-001139	CONNECTOR-TERMINAL	TAB,MALE,-,6.35X0.8MM	1	SNA	
DSA	4715-001093	SURGE ABSORBER	3600V,20%,2000A,-,AXIAL	1	SNA	
FT00	DB27-00040A	COIL CHOKE	SSC3120030B,3.0mH,	1	SNA	
FT01	DB27-00040A	COIL CHOKE	SSC3120030B,3.0mH,	1	SNA	
PCB	DB41-00531A	PCB SUB	FORTE,CEM-3,2,1.0,1.6T,160*140	1	SNA	
C/W POWER	DB93-05058A	ASSY CONNECTOR WIRE	WIRE	1	SNA	

OUTDOOR DISPLAY PCB : DB93-04329A


Location No.	Code No.	Description	Specification	Q'ty	SNA/SA
D901	0401-000005	DIODE-SWITCHING	1N4148,75V,150mA,DO-35,TP	1	SNA
LED93	0601-001373	LED	ROUND,RED,3MM`,630NM	1	SNA
LED92	0601-001375	LED	ROUND,GRN,3mm,570nm,3.8x5.3mm	1	SNA
LED91	0601-001377	LED	ROUND,YEL,3mm,585nm,3.8x5.3mm	1	SNA
K1	3404-001220	SWITCH-TACT	12V,50mA,160gf,6.1x6.1x5.0mm,SPST	1	SNA
CN953	3711-004068	HEADER-BOARD TO CABLE	BOX,5P,1R,2MM,ANGLE,SN,WHT	1	SNA
PCB	DB41-00545A	PCB MAIN-DISPLAY	AQV12JAKCV,FR-1,1,1.0,1.6T,-,Q,30,-,-	1	SNA

7. Wiring Diagram

7-1 Indoor Unit

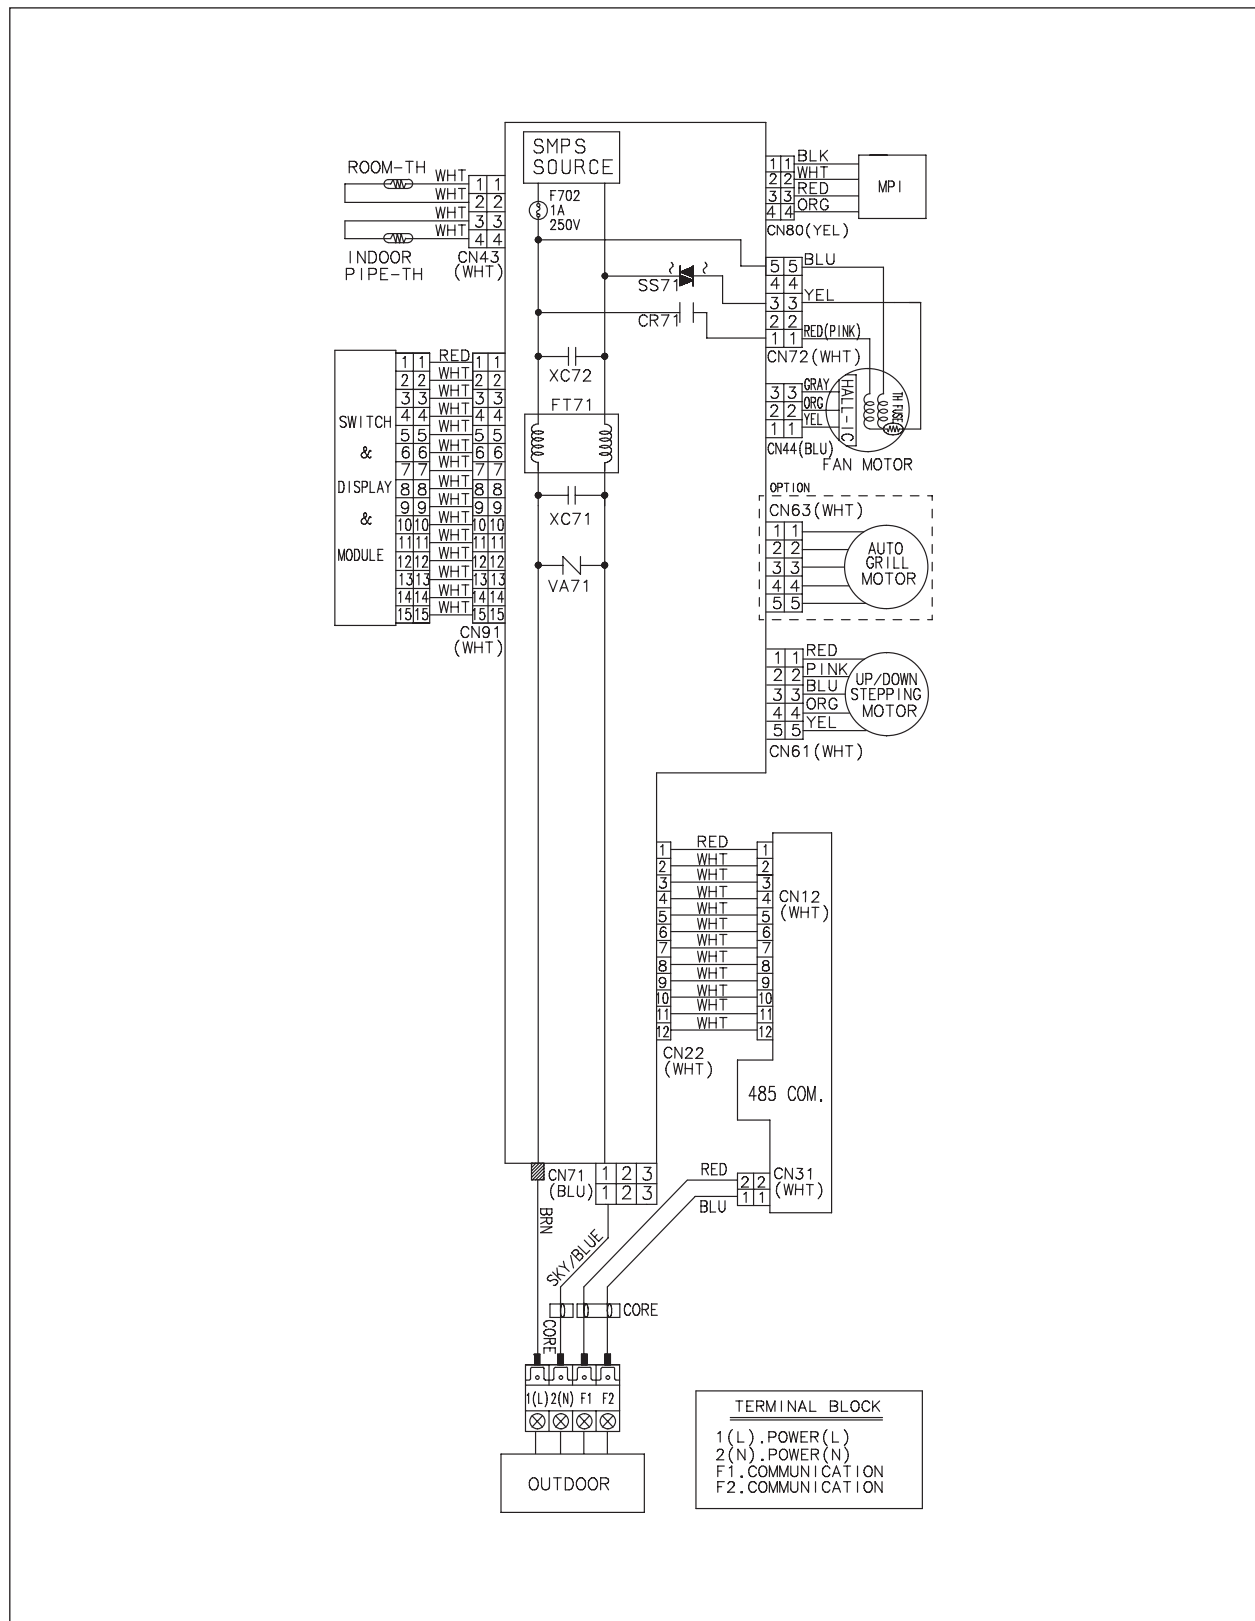


This Document can not be used without Samsung's authorization.

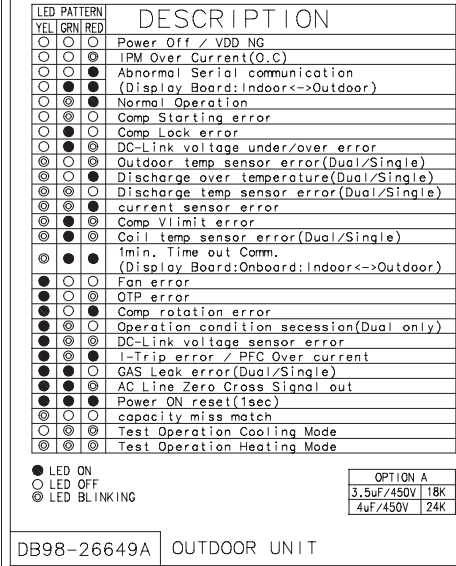


MEMO

8. Schematic Diagram

8-1 Indoor Unit

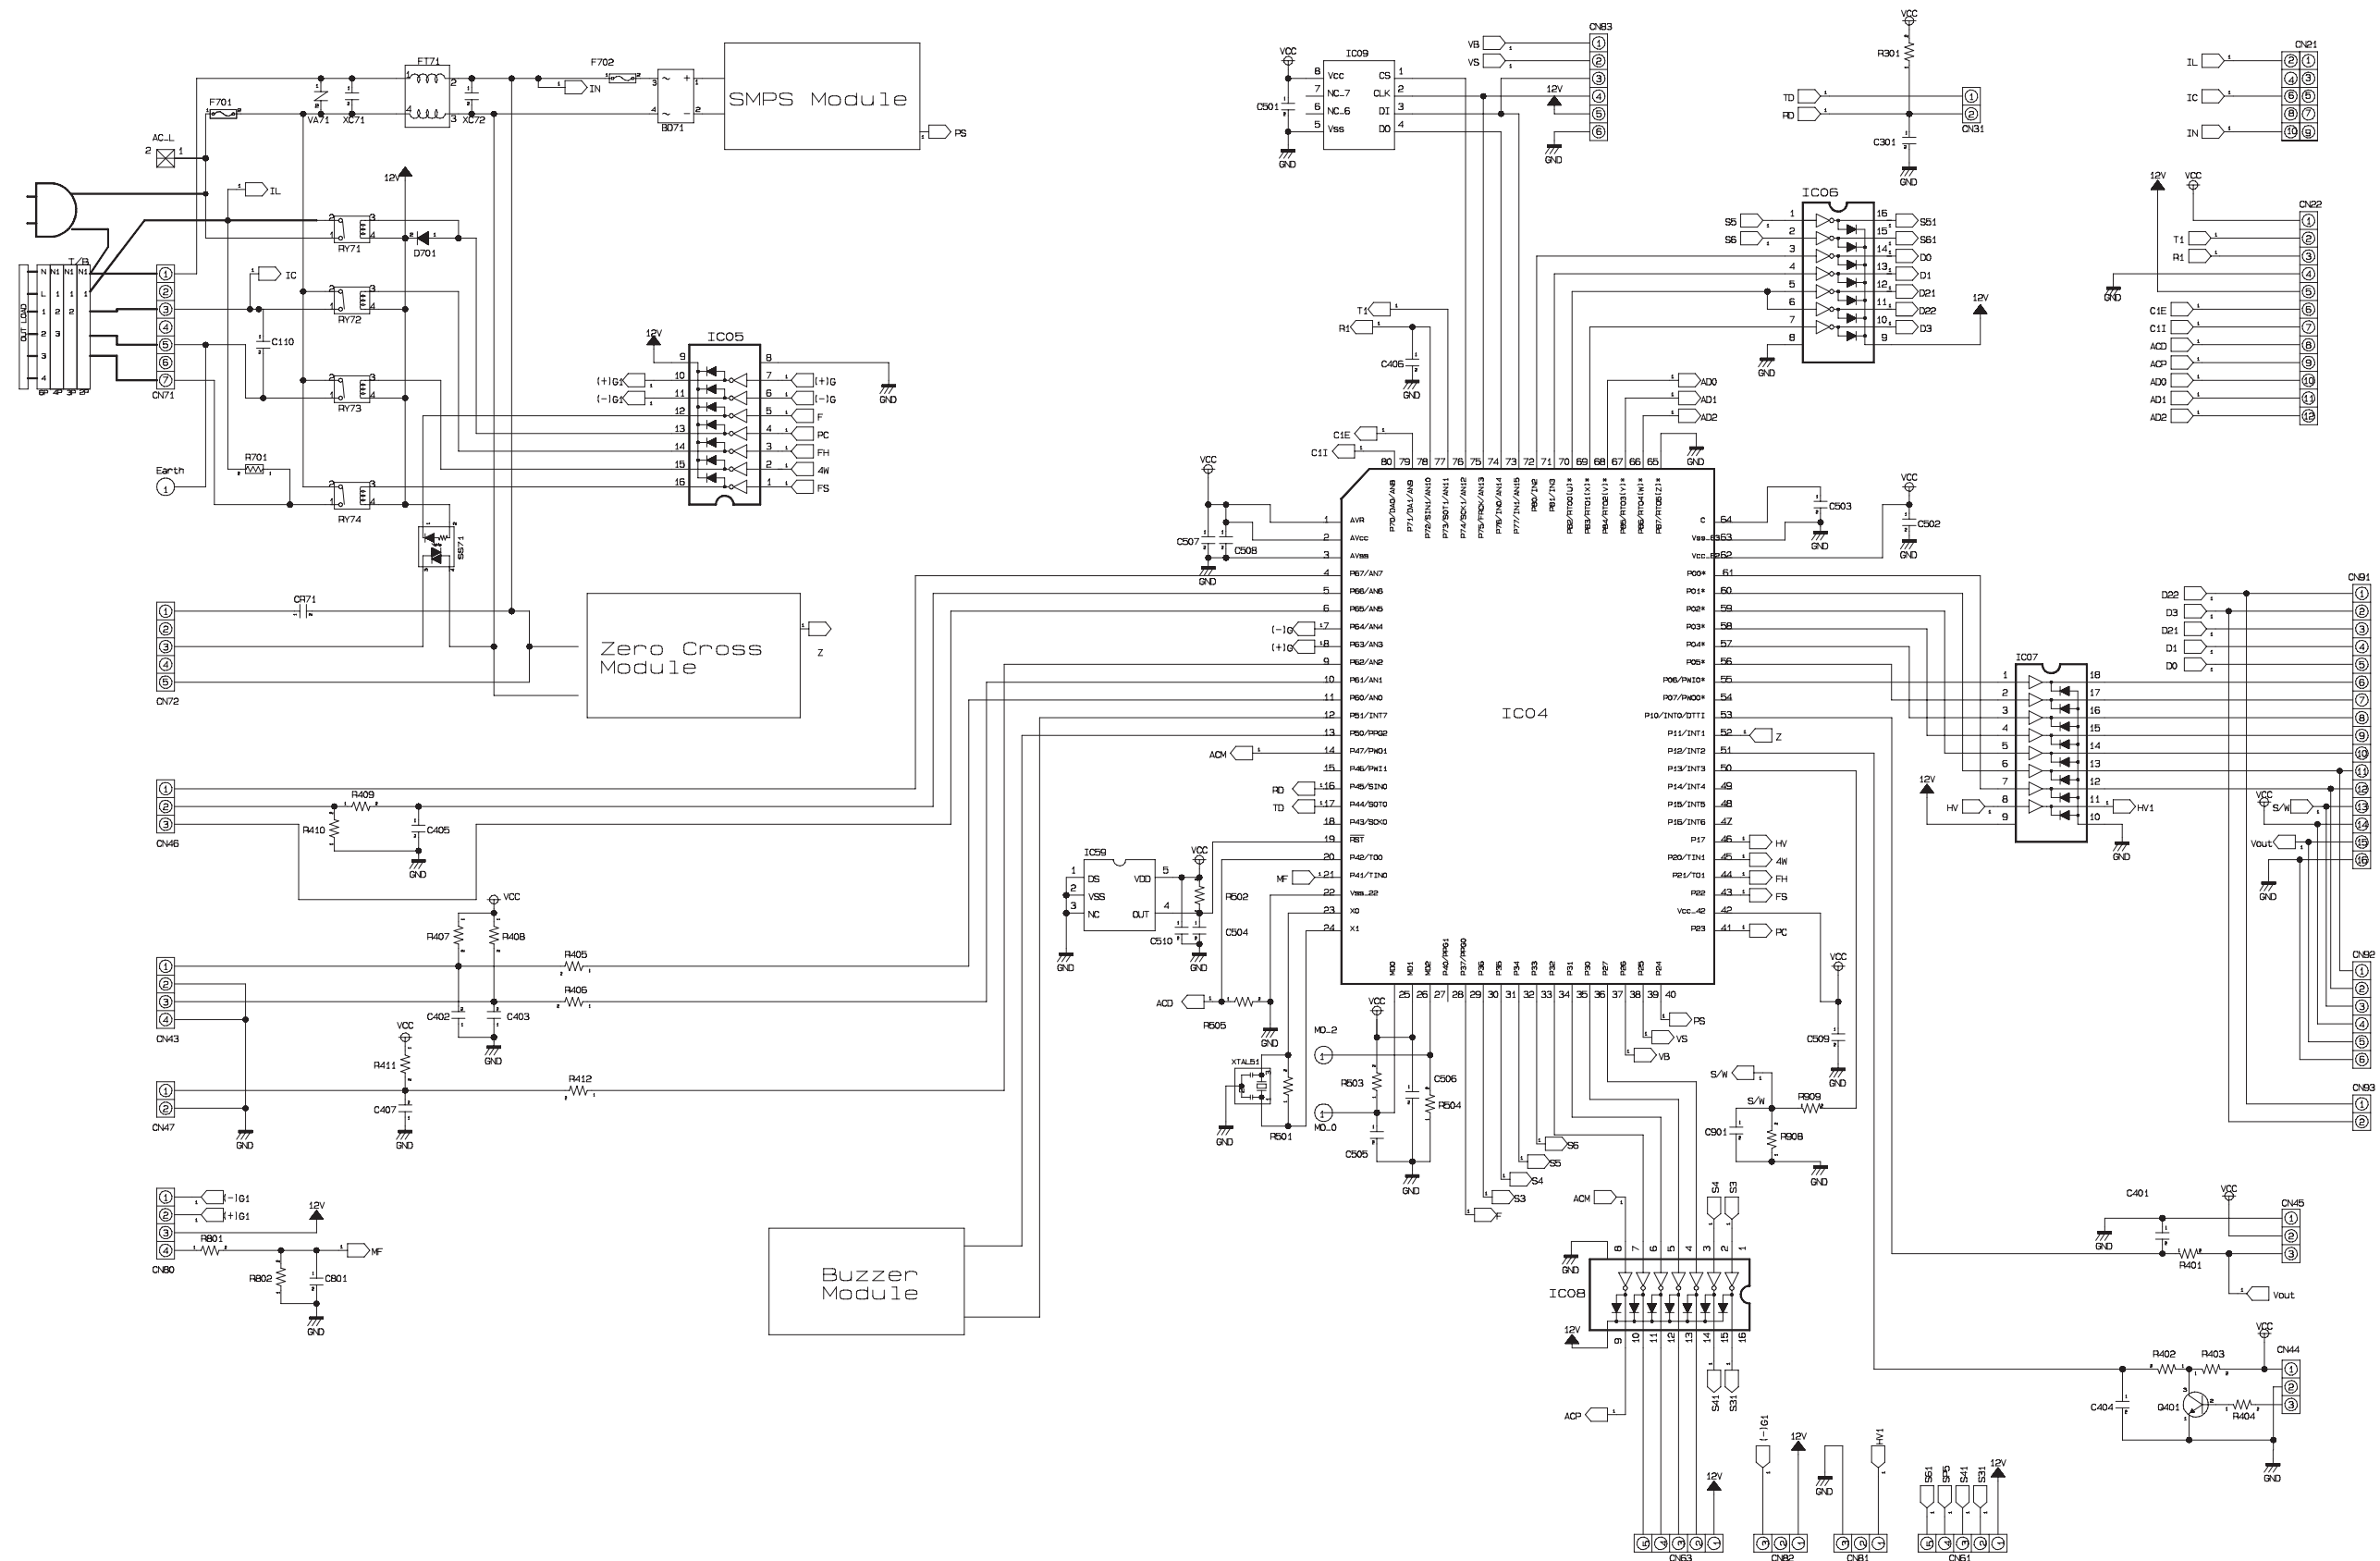

This Document can not be used without Samsung's authorization.

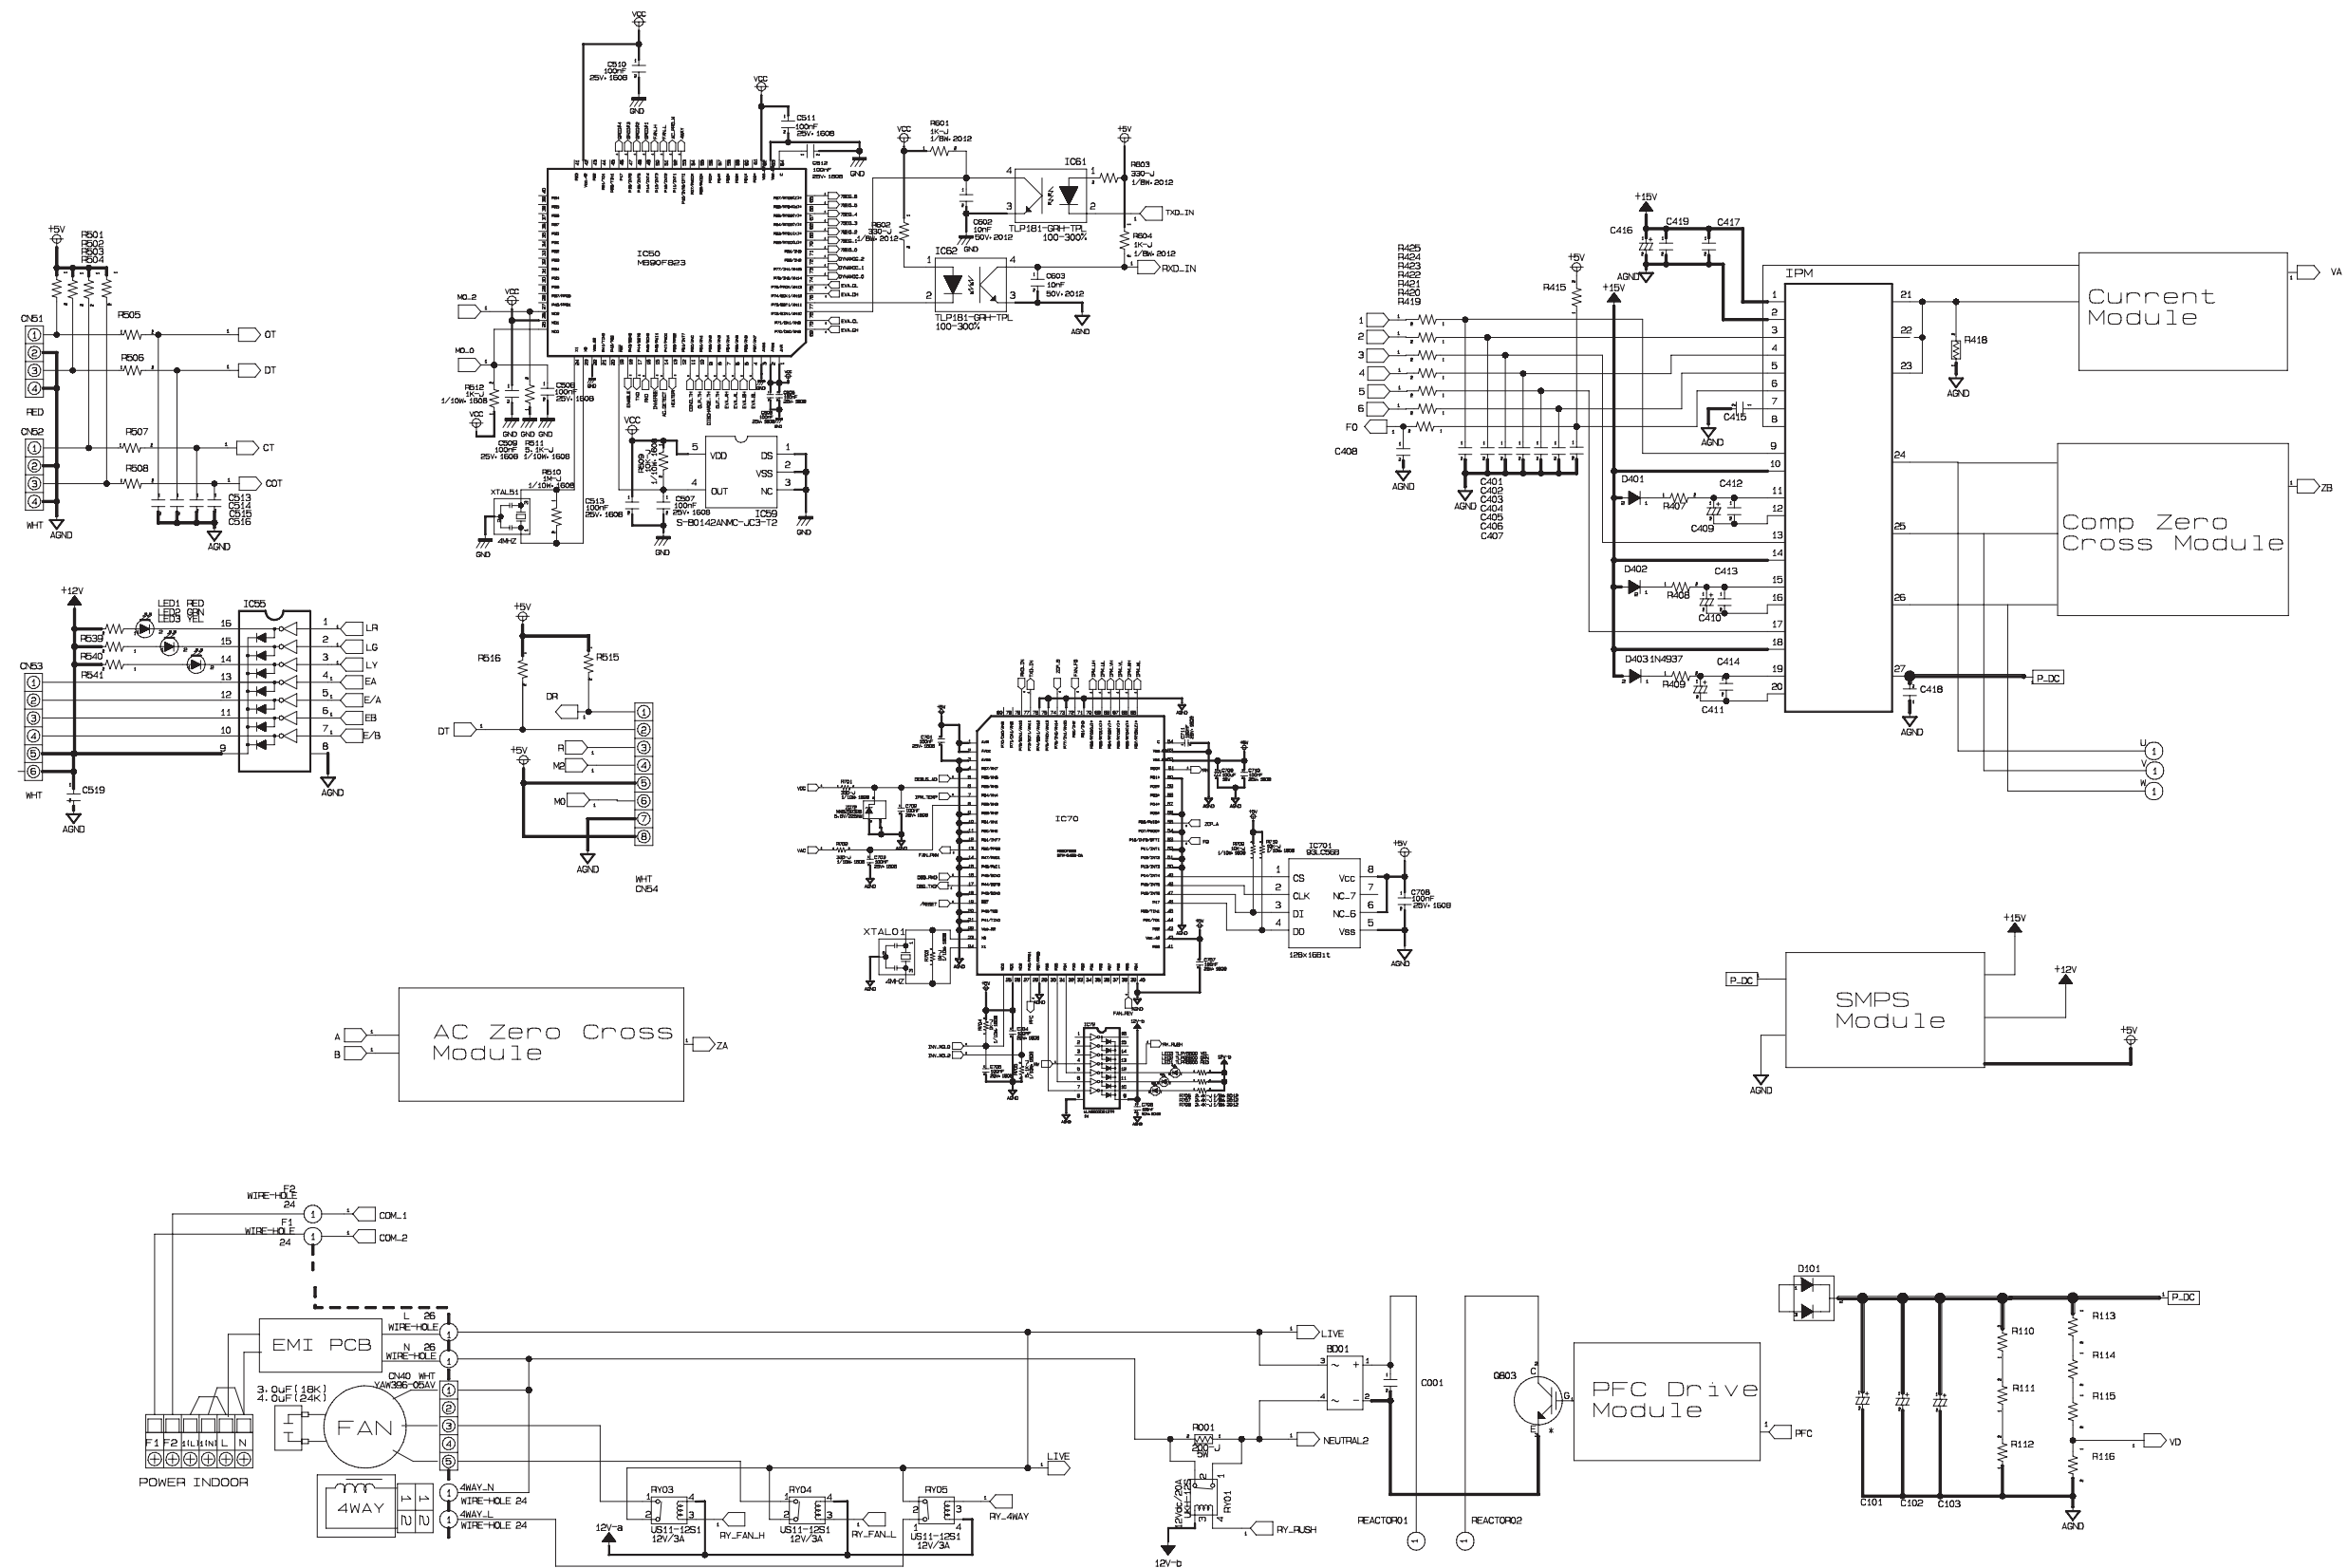


This Document can not be used without Samsung's authorization.

9. Circuit Descriptions


9-1 PCB Circuit Descriptions

9-1-1 Indoor Unit

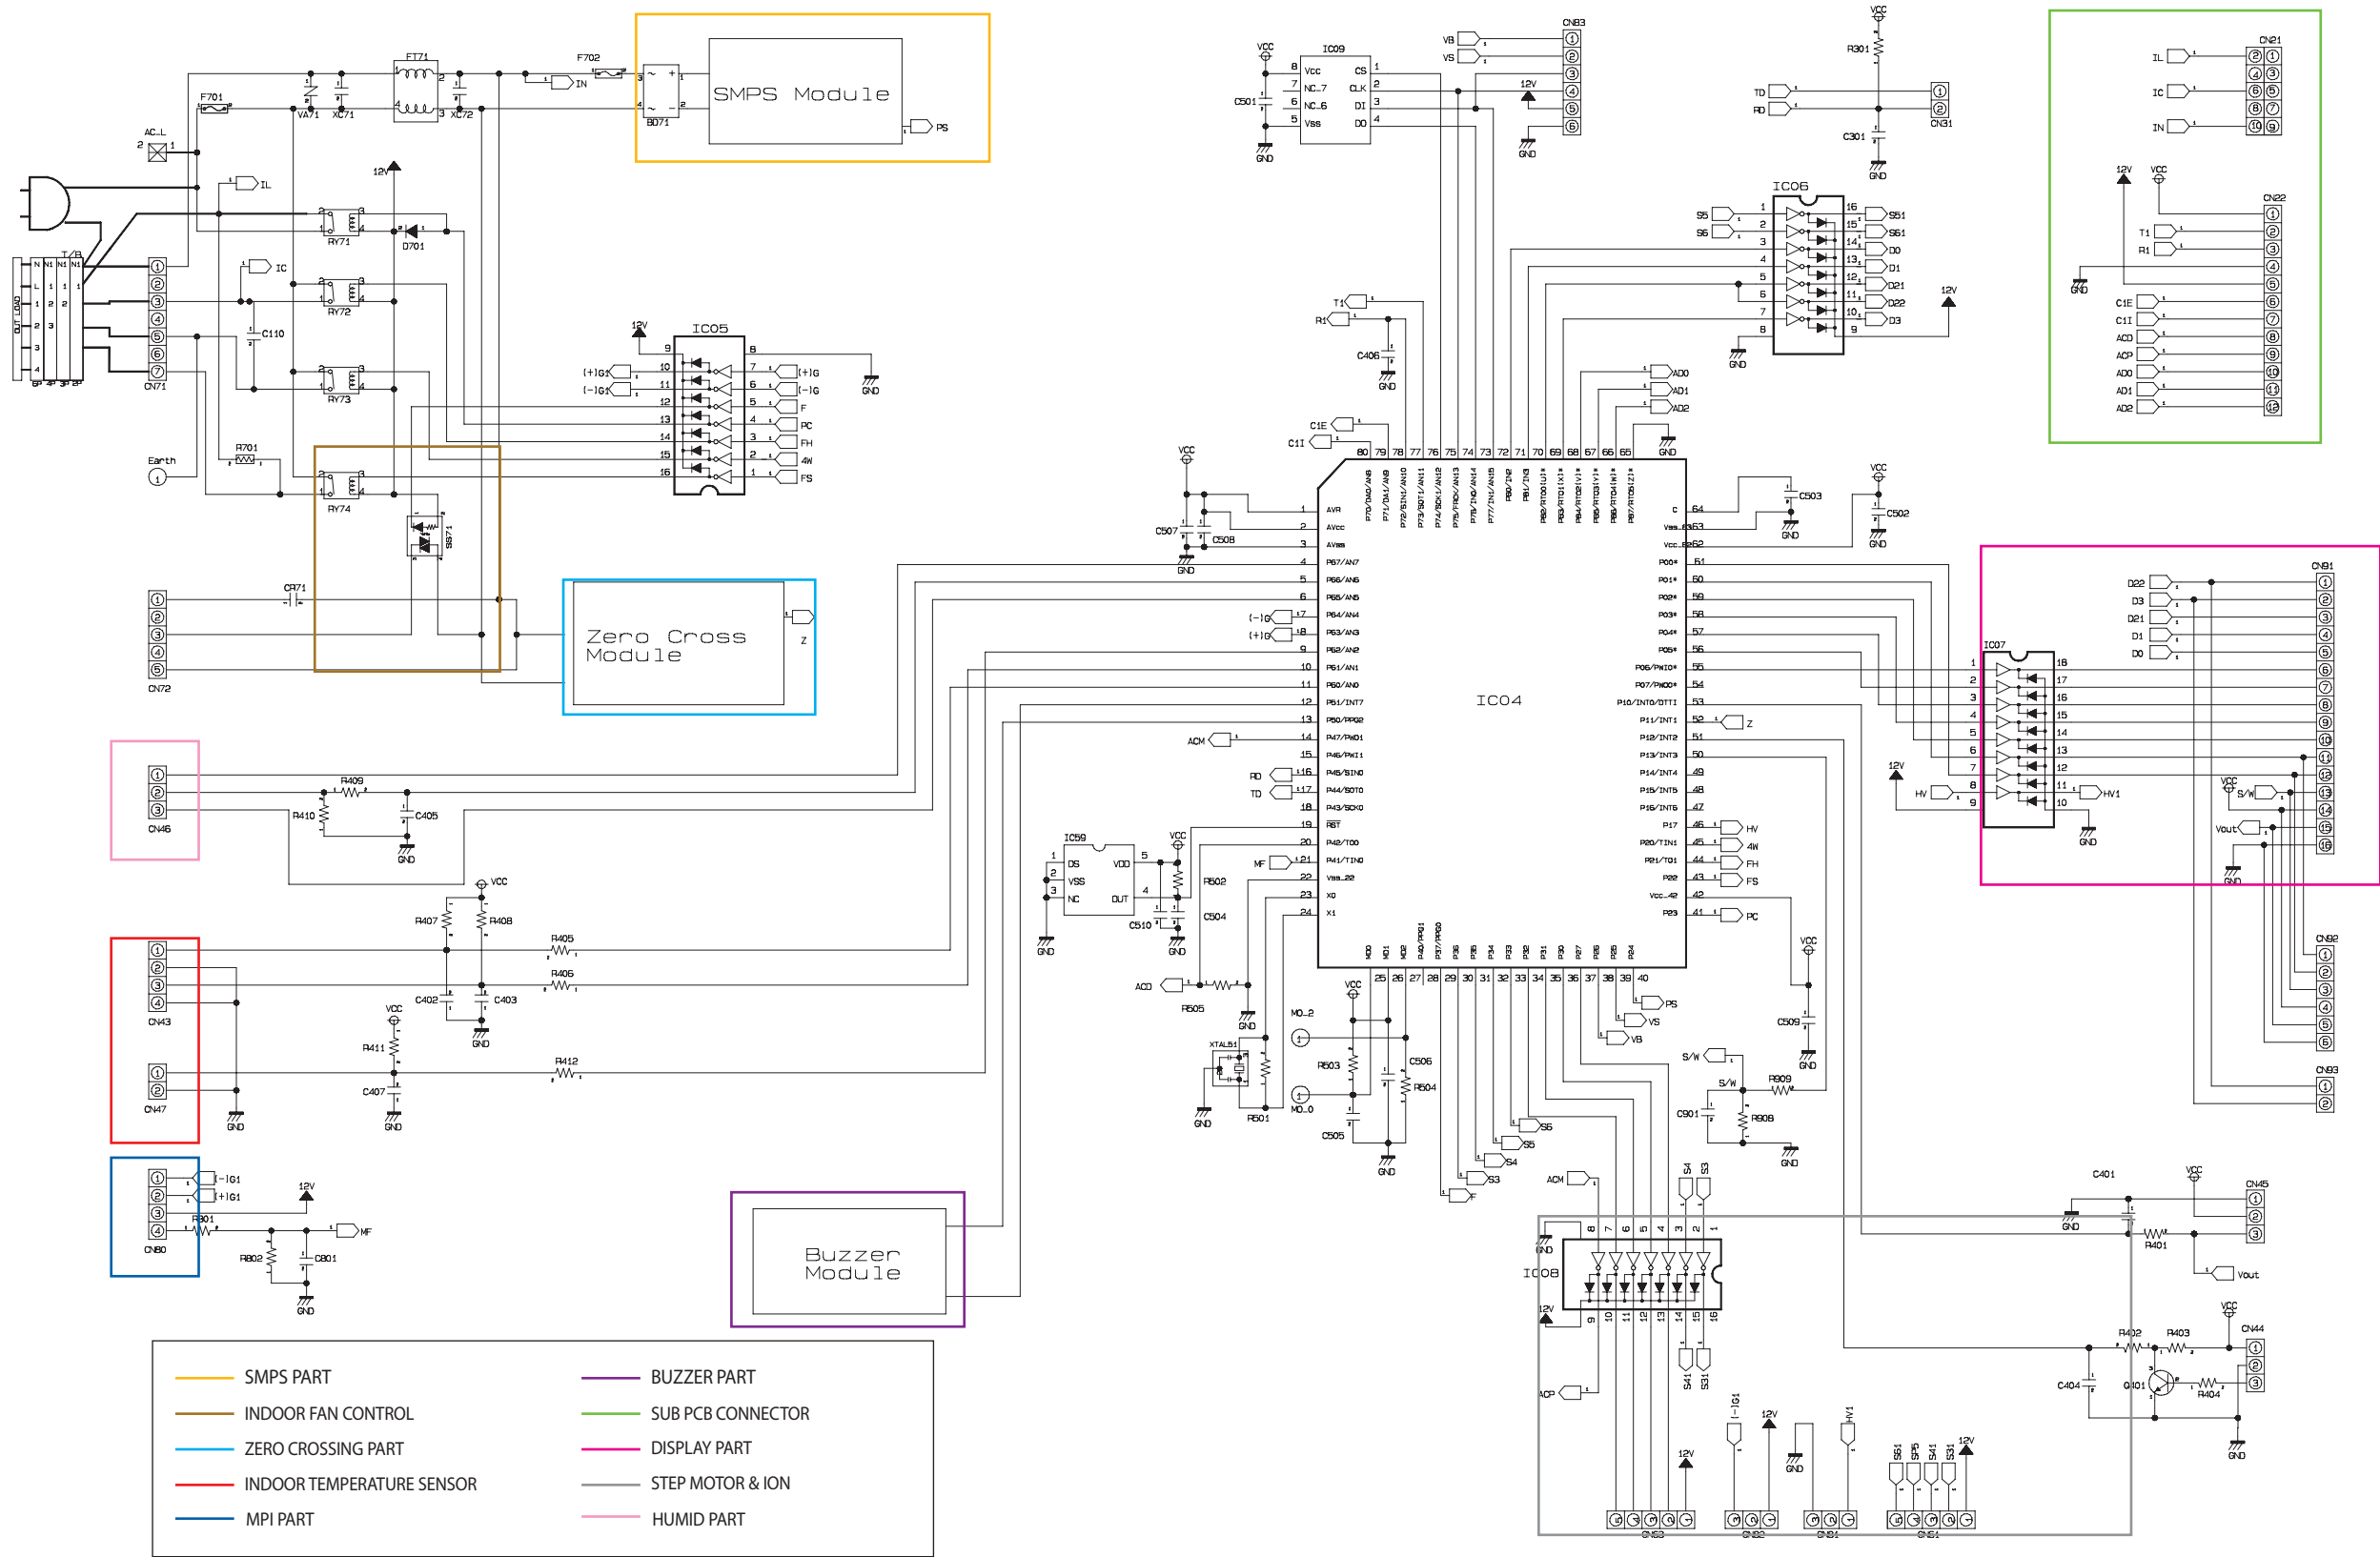


This Document can not be used without Samsung's authorization.

9-1-2 Outdoor Unit

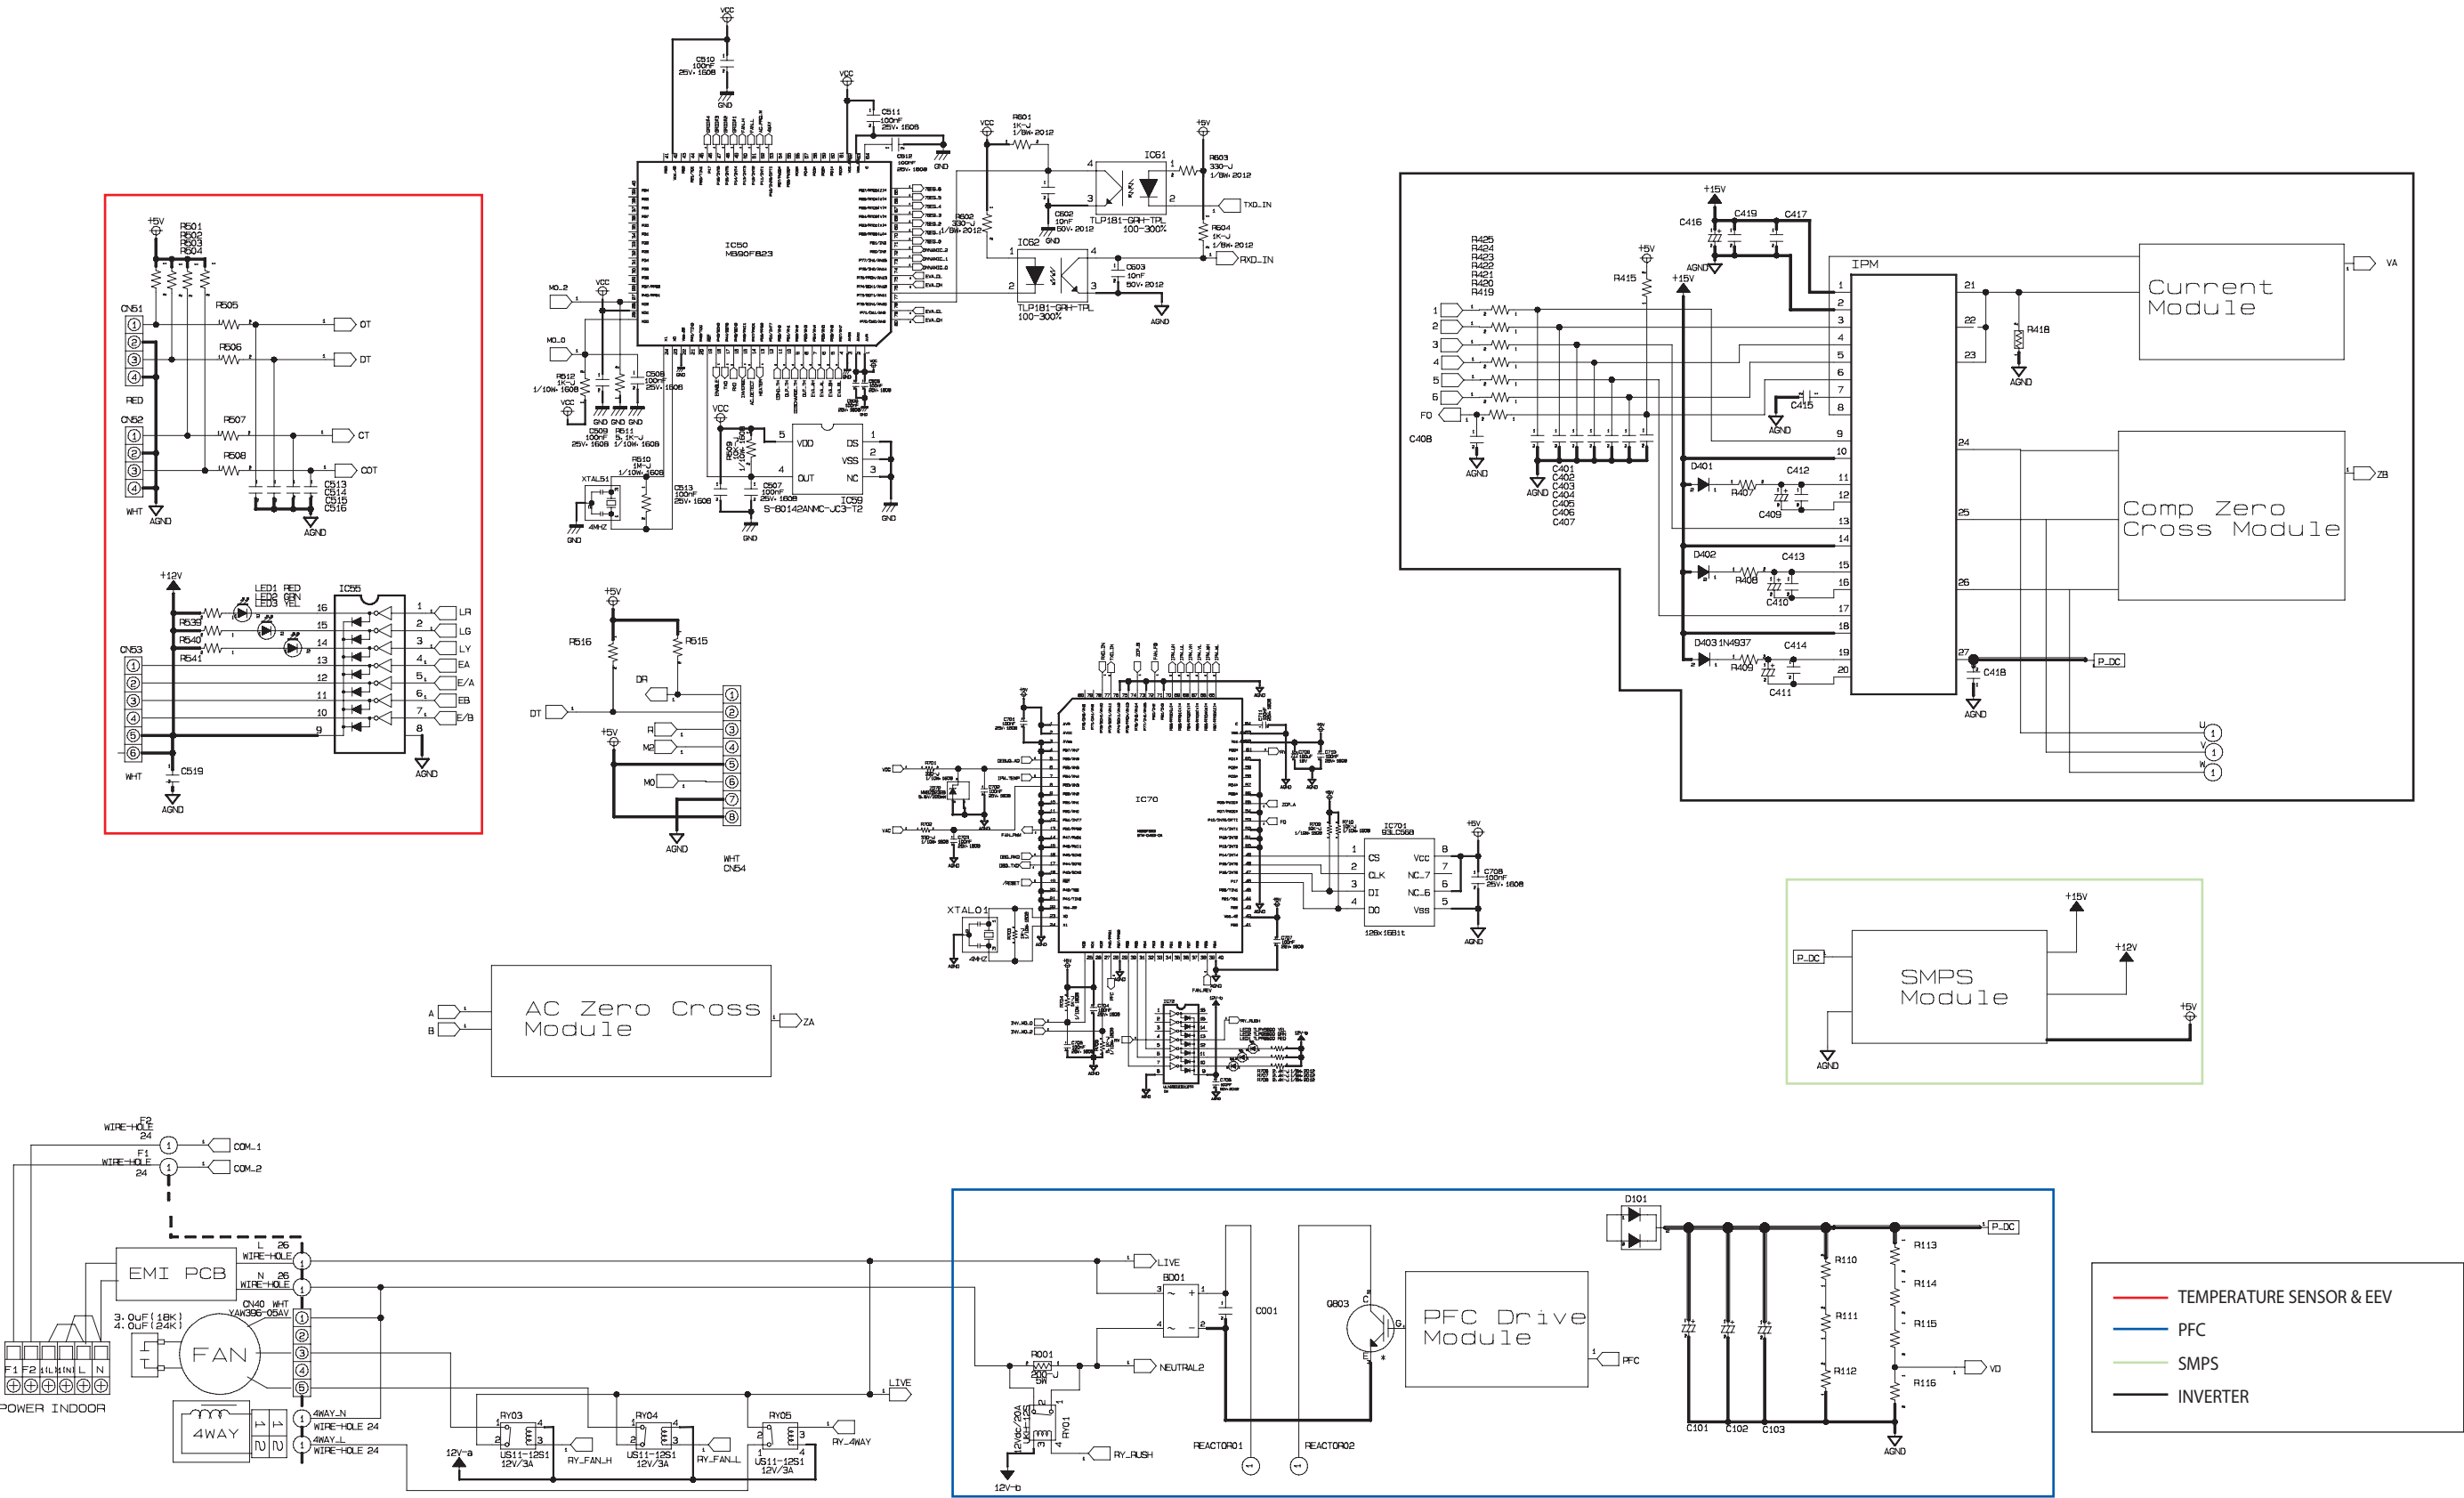

This Document can not be used without Samsung's authorization.


9-2 Refrigerating Cycle Diagram

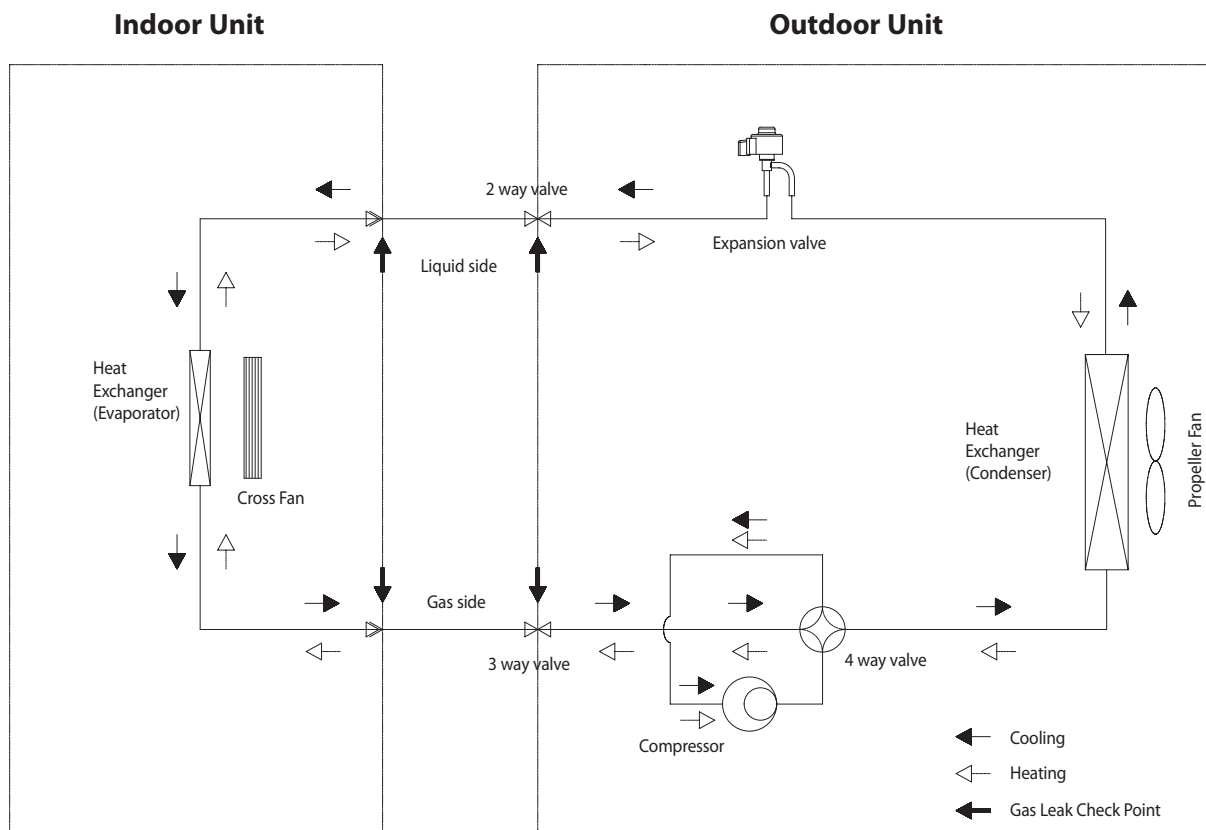

10. PCB Diagram


10-1 Indoor PCB

⚠ The red number connector is not used.

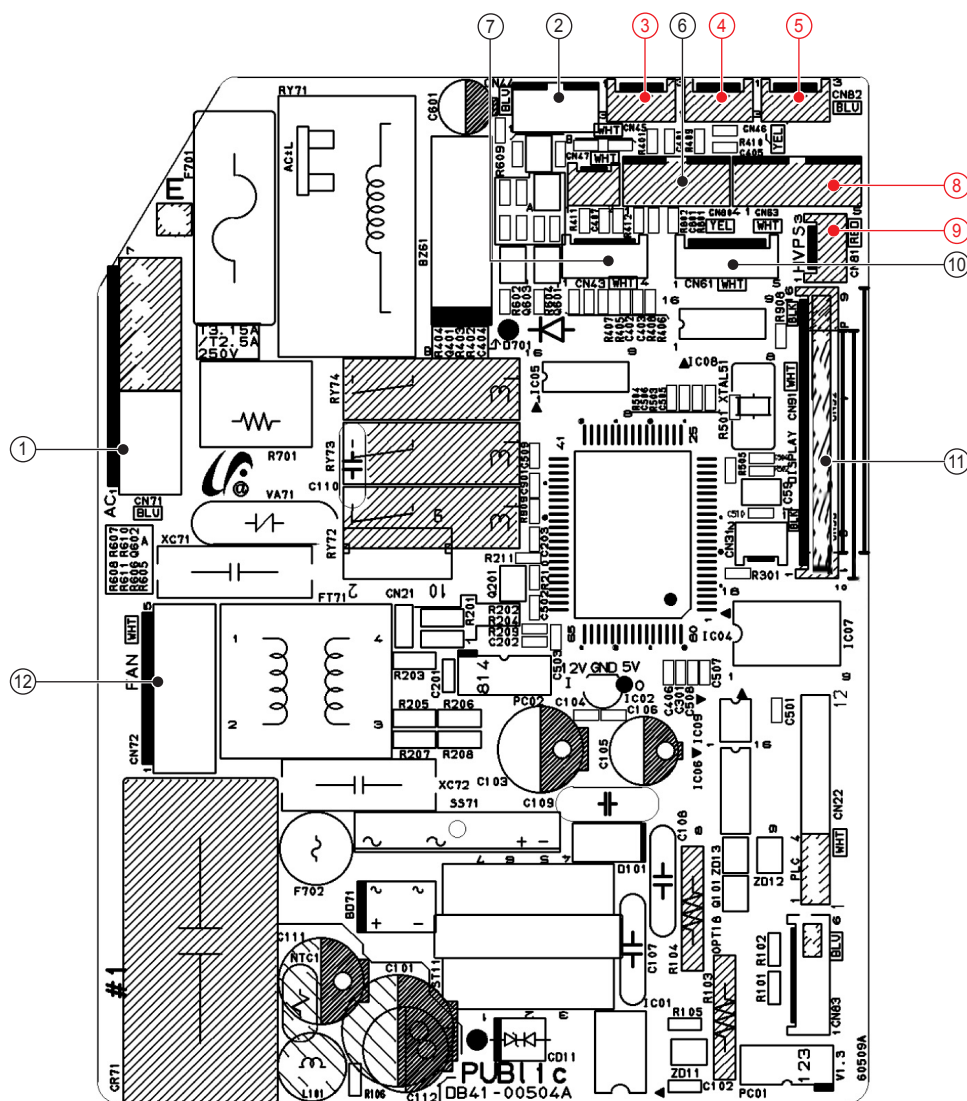

①	Power	⑦	Temperature Sensor
②	Motor RPM Feedback	⑧	Auto Grill
③	Remocon Module	⑨	HVPS(High voltage Generator)
④	Humidity Sensor	⑩	BLADE-H Step Motor
⑤	Anions	⑪	Display
⑥	MPI	⑫	Indoor Fan Motor

 The red number connector is not used.

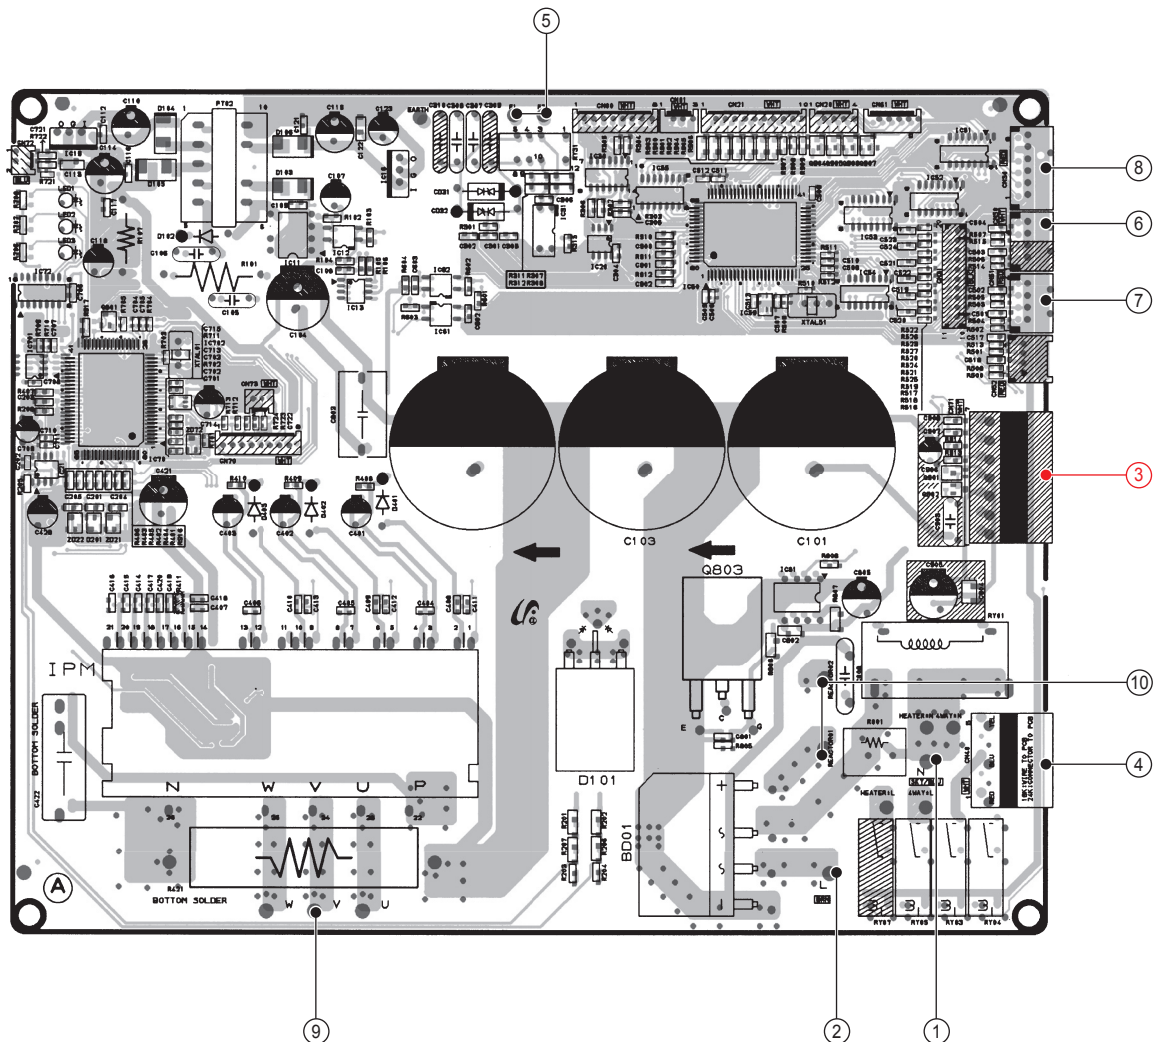


①	Power N	⑥	COND/OLP Temperature Sensor
②	Power L	⑦	DIS/OUT Temperature Sensor
③	BLDC FAN	⑧	EEV Connector
④	AC FAN	⑨	Comp. Connector Wire
⑤	Communication 485	⑩	Reactor Connector Wire

11. Operating Instructions


11-1 Name of Each Part

11-1-1 Indoor Unit


The design and shape are subject to change according to the model.

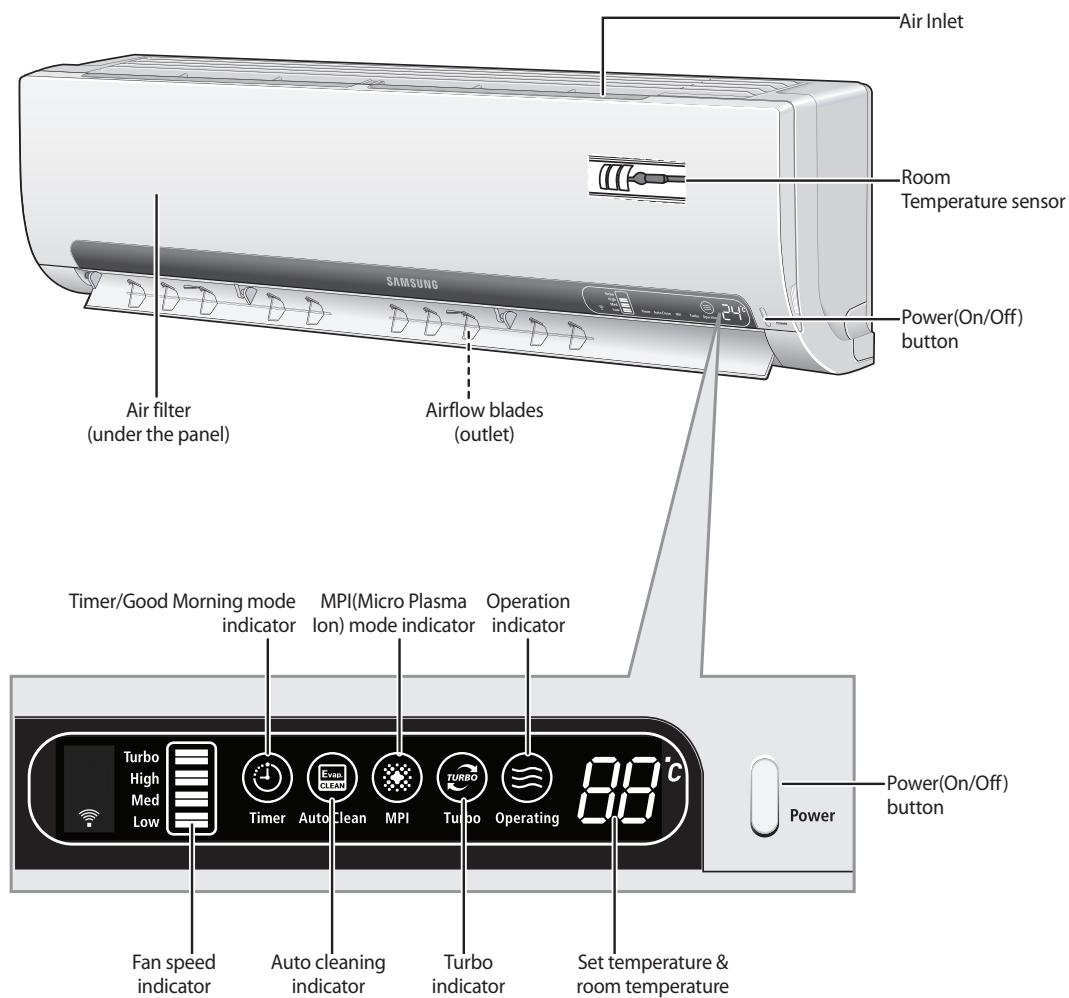

11-1-2 Outdoor Unit



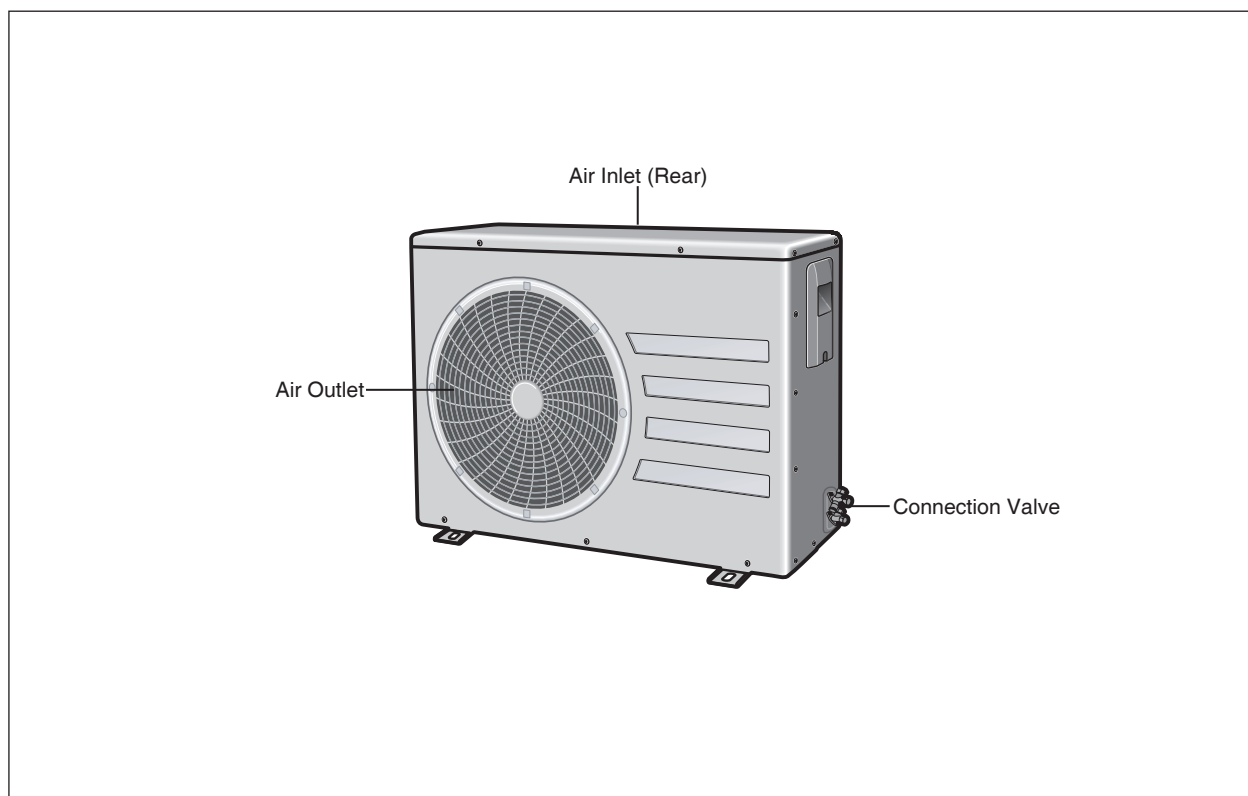


11-2 Wireless Remote Control-Buttons and Display


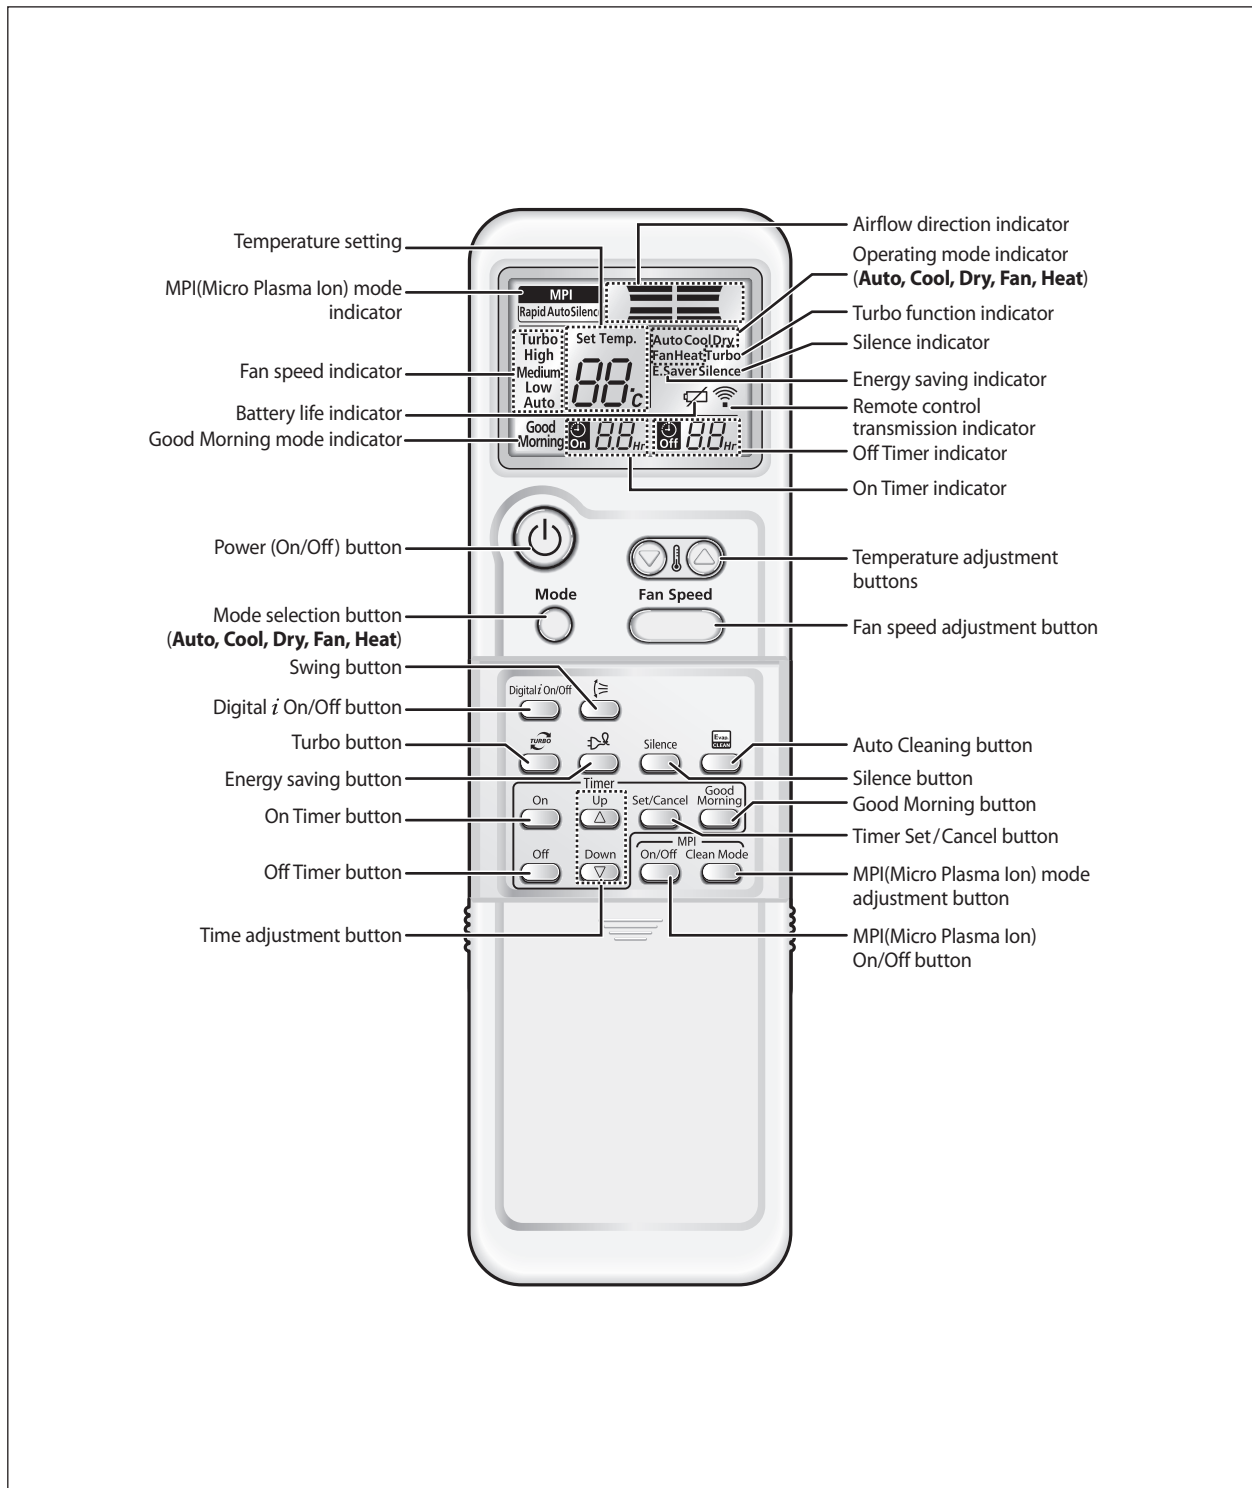


11-3 Main Function



11-3-1 Basic Function

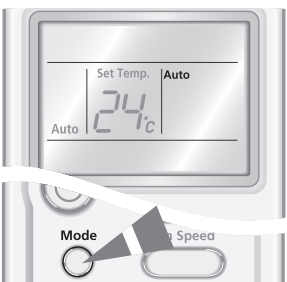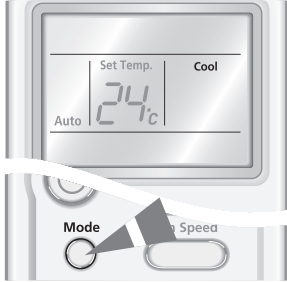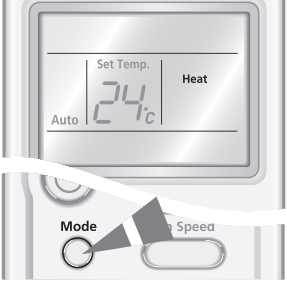Mode	Explanation	Remark
Auto Mode	Press the  button on the remote control until Auto is displayed.	
Cool Mode	Press the  button on the remote control until Cool is displayed. Press the  button to select the fan speed until the required setting is displayed. Auto → Low → Medium → High	 
Heat Mode	Press the  button on the remote control until Heat is displayed. Press the  button to select the fan speed until the required setting is displayed. Auto → Low → Medium → High	 

Basic Function(cont.)

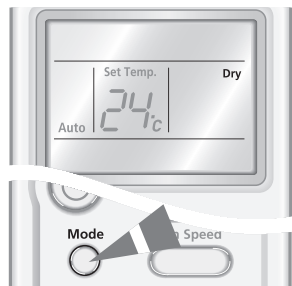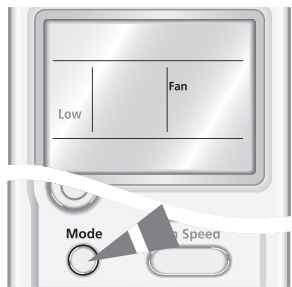Mode	Explanation	Remark
Dry Mode	Press the  button on the remote control until Dry is displayed.	
Fan Mode	Press the  button on the remote control until Fan is displayed.	

11-3-2 Applied Function

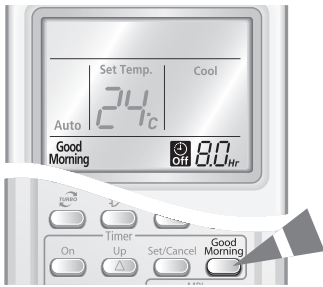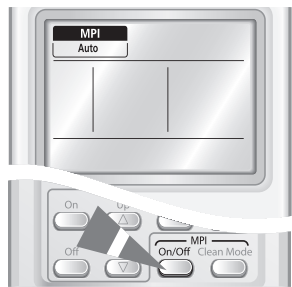Mode	Explanation	Remark
Good Morning Mode	Press the  button. ◆ The timer indicator is displayed. ◆ The Off timer is blinking on the remote control.	
Silence Mode	Press the  button.	
MPI Mode	Press the  button. ◆ The air conditioner starts up in MPI-Auto mode automatically. ◆ The MPI mode also runs when the air conditioner is turned on. ◆ By pressing the  button again, the MPI mode is canceled.	

12. Troubleshooting

12-1 Items to be checked first

1. The input voltage should be rating voltage $\pm 10\%$ range.
The air conditioner may not operate properly if the voltage is out of this range.
2. Is the link cable linking the indoor unit and the outdoor unit linked properly?
The indoor unit and the outdoor unit shall be linked by 5 cables.
Check the terminals if the indoor unit and outdoor unit are properly linked by the same number of cables.
Otherwise the air conditioner may not operate properly.
3. When a problem occurs due to the contents illustrated in the table below it is a symptom not related to the malfunction of the air conditioner.

No	Operation of air conditioner	Explanation
1	The OPERATION indication LED(BLUE) blinks when a power plug of the indoor unit is plugged in for the first time.	It indicates power is on. The LED stops blinking if the operation ON/OFF button on the remote control unit is pushed.
2	In a COOL operation mode, the compressor does not operate at a room temperature higher than the setting temperature that the INDOOR FAN should operate. [In case of heat pump model] In a HEAT operation mode, the compressor does not operate at a room temperature lower than the setting temperature that indoor fan should operate.	In happens after a delay of 3 minutes when the compressor is reoperated. The same phenomenon occurs when a power is on. As a phenomenon that the compressor is reoperated after a delay of 3 minutes, the indoor fan is adjusted automatically with reference to a temperature of the air blew.
3	Fan speed setting is not allowed in DRY mode.	The speed of the indoor fan is set to LL in DRY mode. Fan speed is selected automatically in AUTO mode.
4	Compressor stops operation intermittently in DRY mode.	Compressor operation is controlled automatically in DRY mode depending on the room temperature and humidity.
5	Timer LED(ORANGE) of the indoor unit lights up and the air conditioner does not operate.	Timer is being activated and the unit is in ready mode. The unit operates normally if the timer operation is cancelled.
6	The compressor stops intermittently in a COOL mode or DRY mode, and fan speed of the indoor unit decreases.	The compressor stops intermittently or the fan speed of the indoor unit decreases to prevent inside/outside air frozen depending on the inside/outside air temperature.
7	[In case of heat pump model] Compressor of the outdoor unit is operating although it is turned off in a HEAT mode.	When the unit is turned off while de-ice is activated, the compressor continues operation for up to 9 minutes(maximum) until the deice is completed.
8	[In case of heat pump model] The compressor and indoor fan stop intermittently in HEAT mode.	The compressor and indoor fan stop intermittently if room temperature exceeds a setting temperature in order to protect the compressor from overheated air in a HEAT mode.
9	[In case of heat pump model] Indoor fan and outdoor fan stop operation intermittently in a HEAT mode.	The compressor operates in a reverse cycle to remove exterior ice in a HEAT mode, and indoor fan and outdoor fan do not operate intermittently for within 20% of the total heater operation


12-2 Fault Diagnosis by Symptom

12-2-1 No Power (completely dead)-Initial diagnosis

1. Checklist :

- 1) Is input voltage normal?
- 2) Is AC power linked correctly?
- 3) Is input voltage of DC regulator IC KA7805 (IC02) normal? (11VDC-12.5VDC)
- 4) Is output voltage of DC regulator IC KA7805 (IC02) normal? (4.5VDC-5.5VDC)

2. Troubleshooting procedure

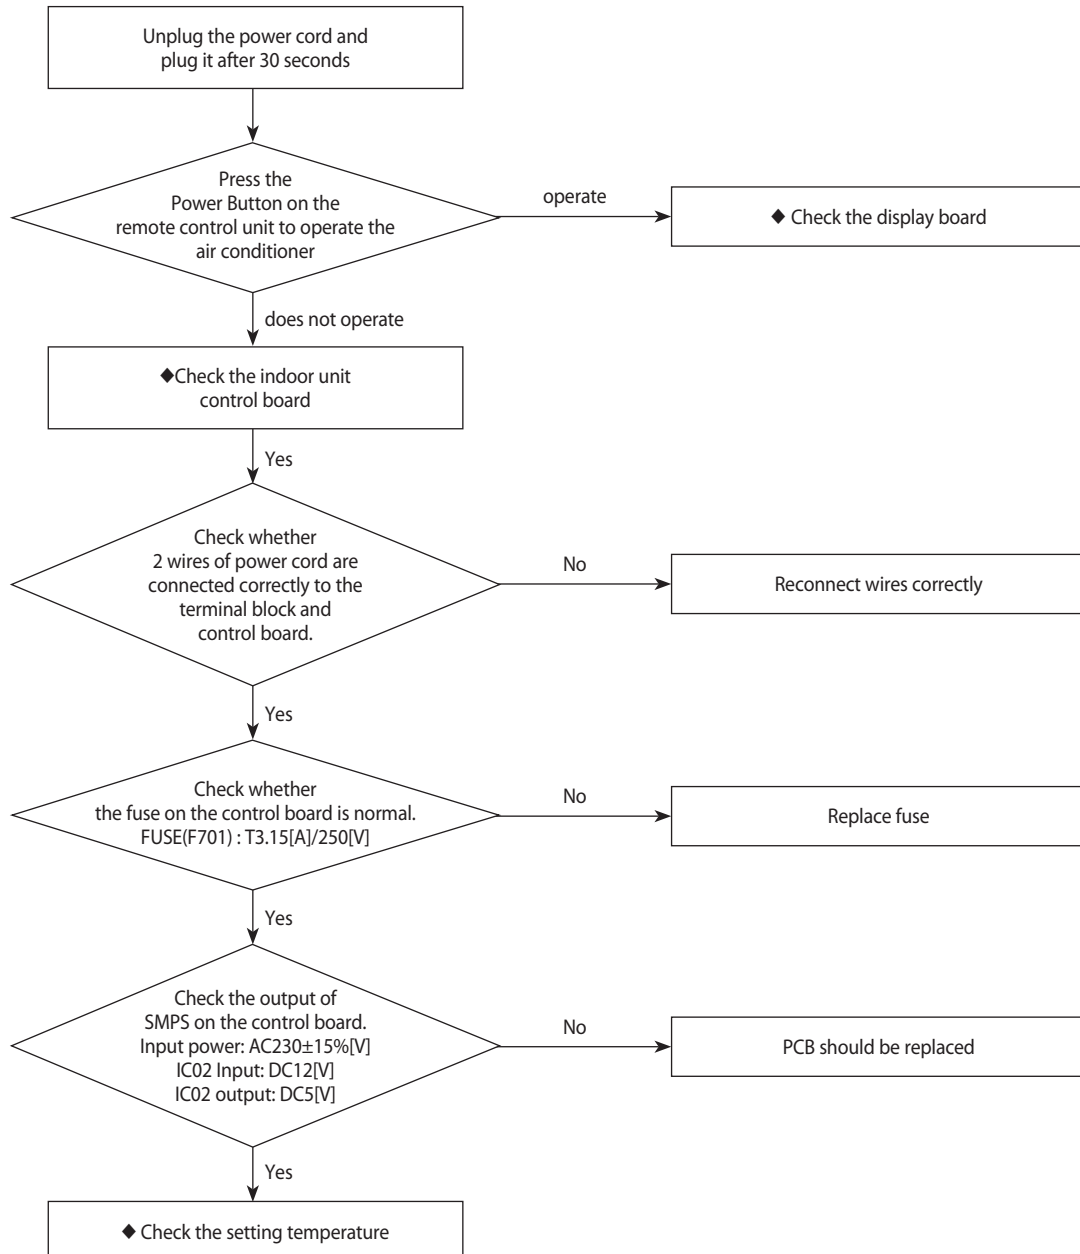


12-2-2 The Outdoor unit power supply error

1. Checklist :


- 1) Are the input power voltage and the power connection correct?
- 2) Is there no Fuse short in the indoor unit and outdoor unit?
- 3) Is the cable connected correctly between the indoor unit and outdoor unit in order.
- 4) Is the wire connected correctly to the terminal block of the indoor unit and outdoor unit?

2. Troubleshooting procedure

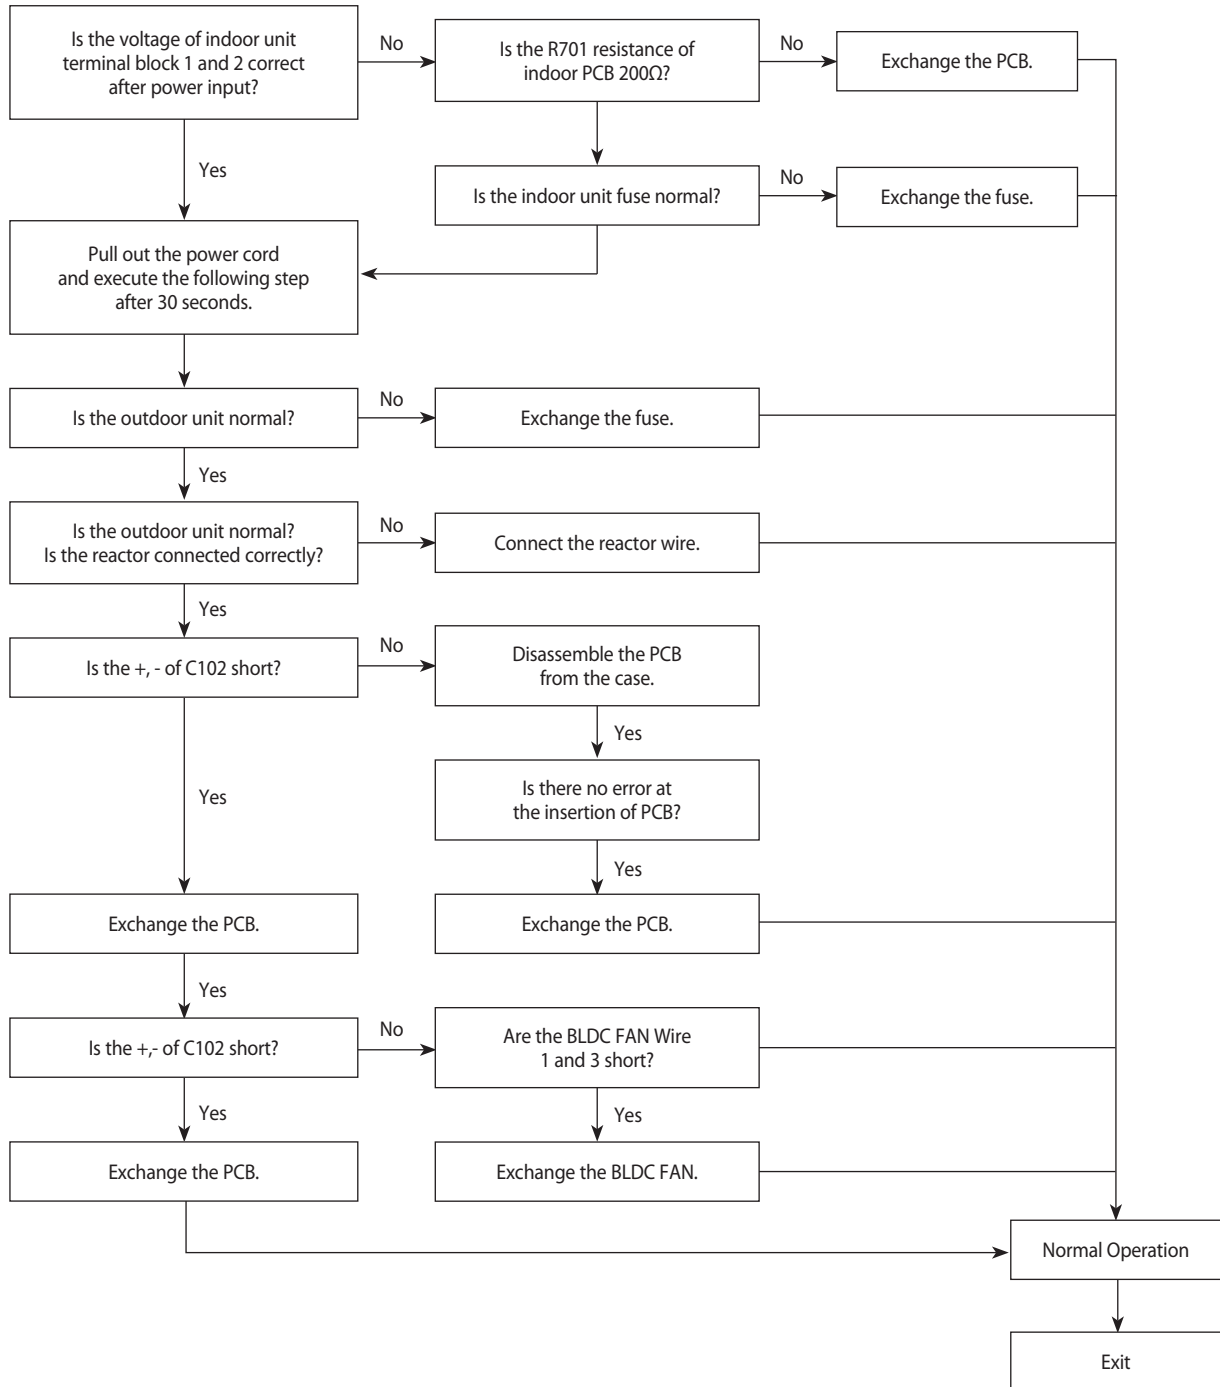

12-2-3 When the Up/Down Louver Motor Does Not Operate. (Initial Diagnosis)

1. Checklist :
 - 1) Is input voltage normal?
 - 2) Is the Up/Down louver motor properly connected with the connector (CN61)?
2. Troubleshooting procedure

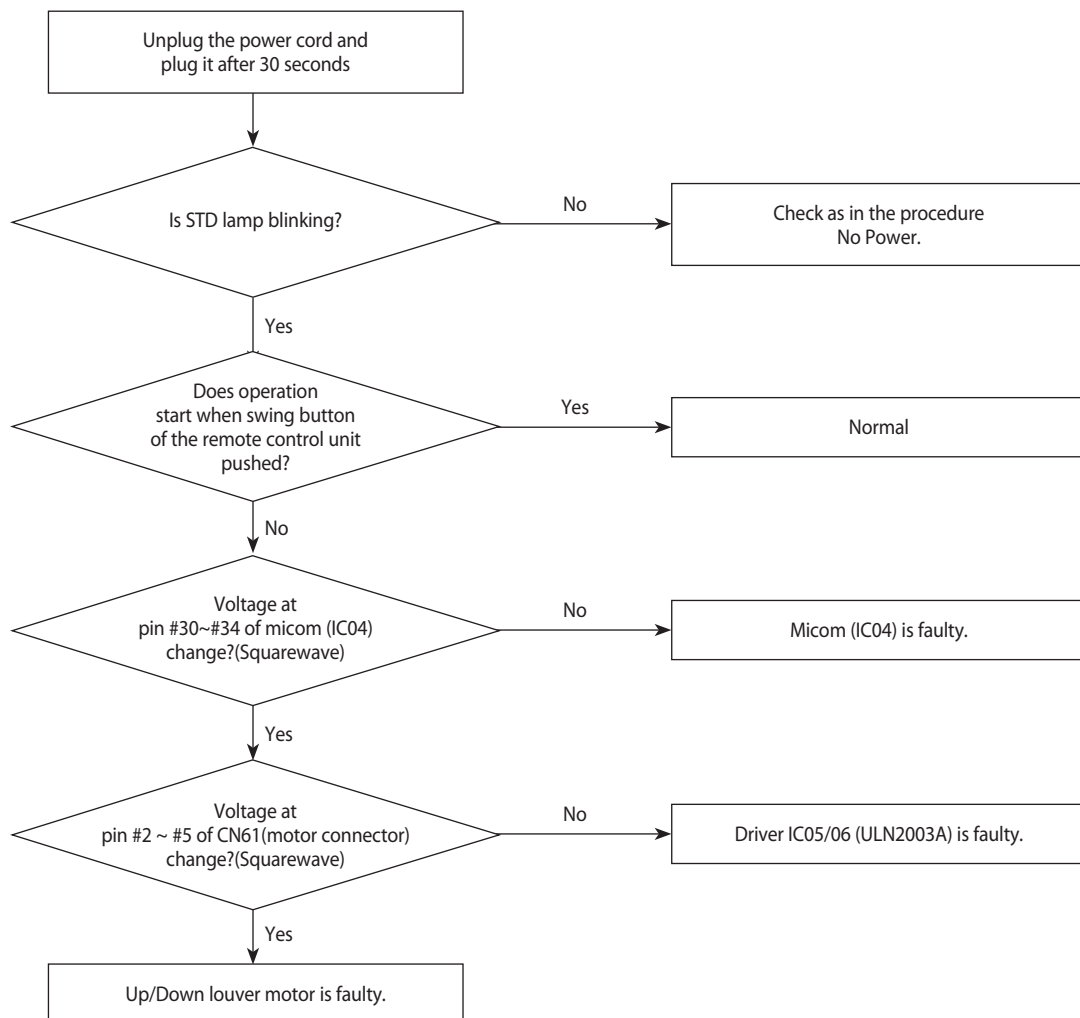


12-2-4 The Outdoor unit Fan error

1. Checklist :

- 1) Are the input power voltage and the power connection correct?
- 2) Is the motor wire connected to the outdoor PCB correctly?
- 3) Is there no assembly error or none-assembly in the terminal of motor wire connector?
- 4) Is there no obstacle at the surrounding of motor and propeller?

2. Troubleshooting procedure

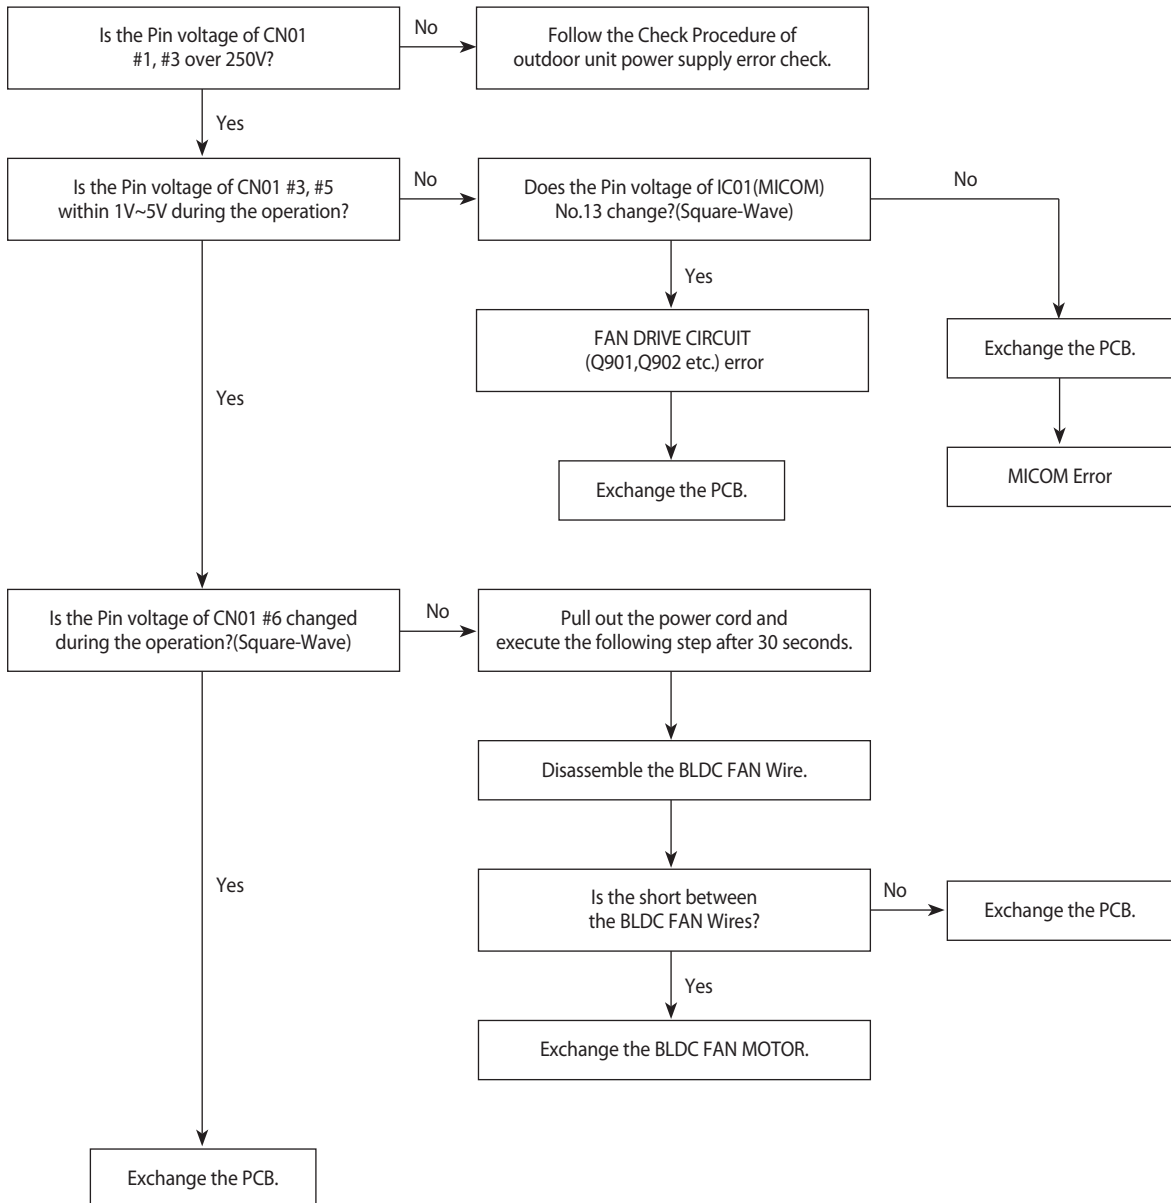


12-2-5 Total current Trip error

1. Checklist :


- 1) Is the input power voltage proper?
- 2) Is the refrigerant charged properly?
- 3) Does the compressor rotate normally? (Reverse rotation, Locking etc.)
- 4) Does the outdoor fan operate normally? (Fan propeller loss, Motor error etc.)
- 5) Is the installation condition of outdoor unit good? (Piping, Space etc.)
- 6) Is there no ventilation obstruction at the surrounding of outdoor? (Outdoor unit cover, Fan front obstruction etc.)

2. Troubleshooting procedure

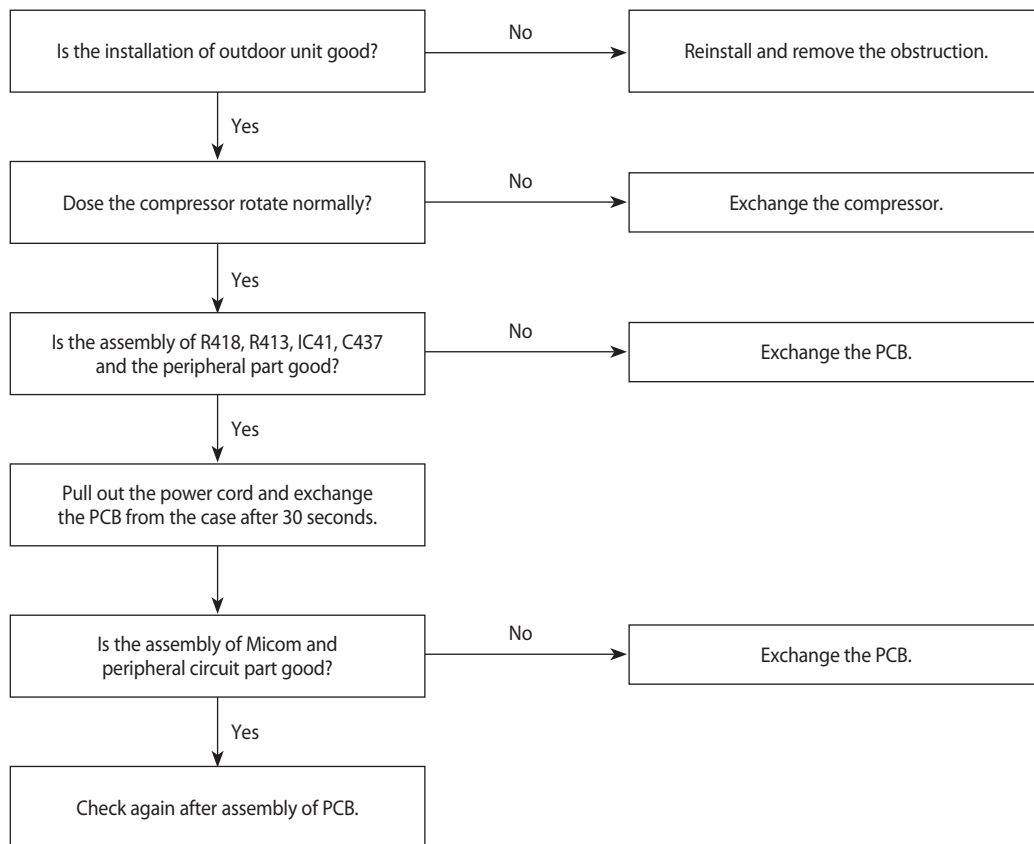


12-2-6 In case of heating at the cooling mode or cooling at the heating mode

1. Troubleshooting procedure

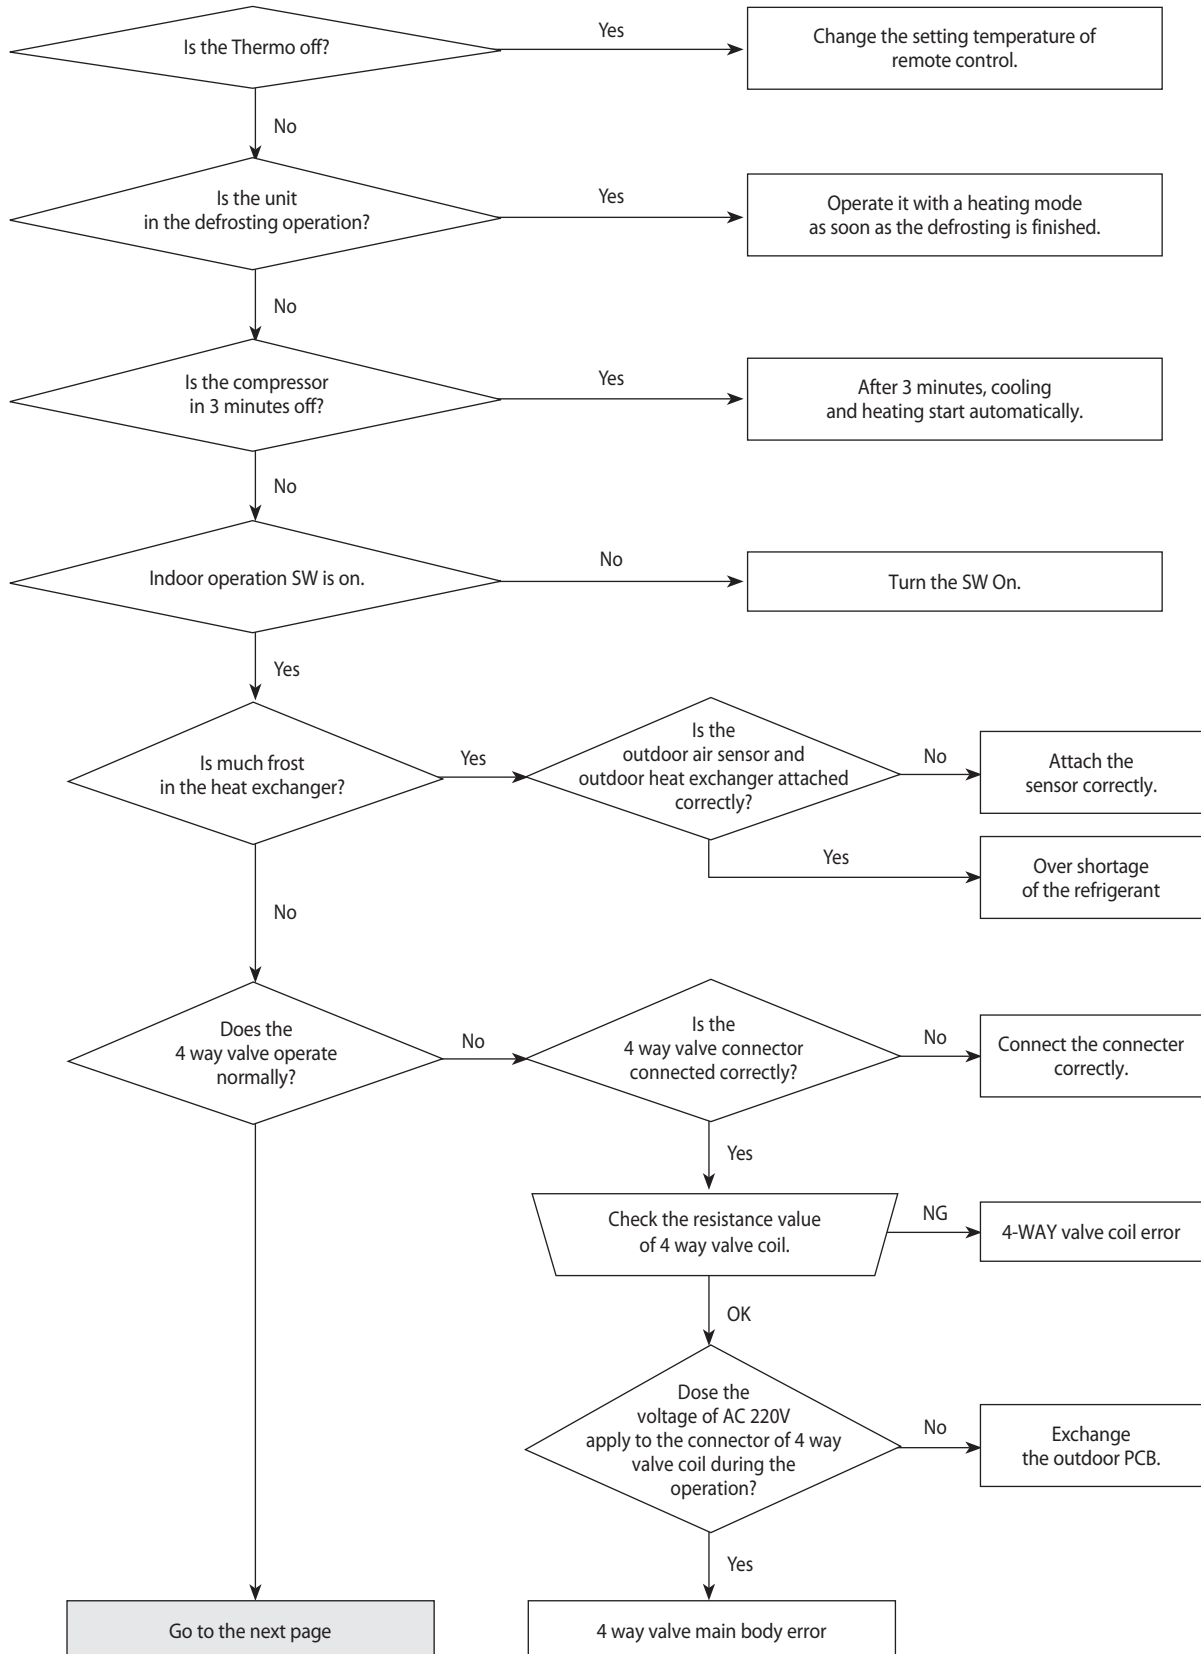

In case of heating at the cooling mode or cooling at the heating mode(cont.)


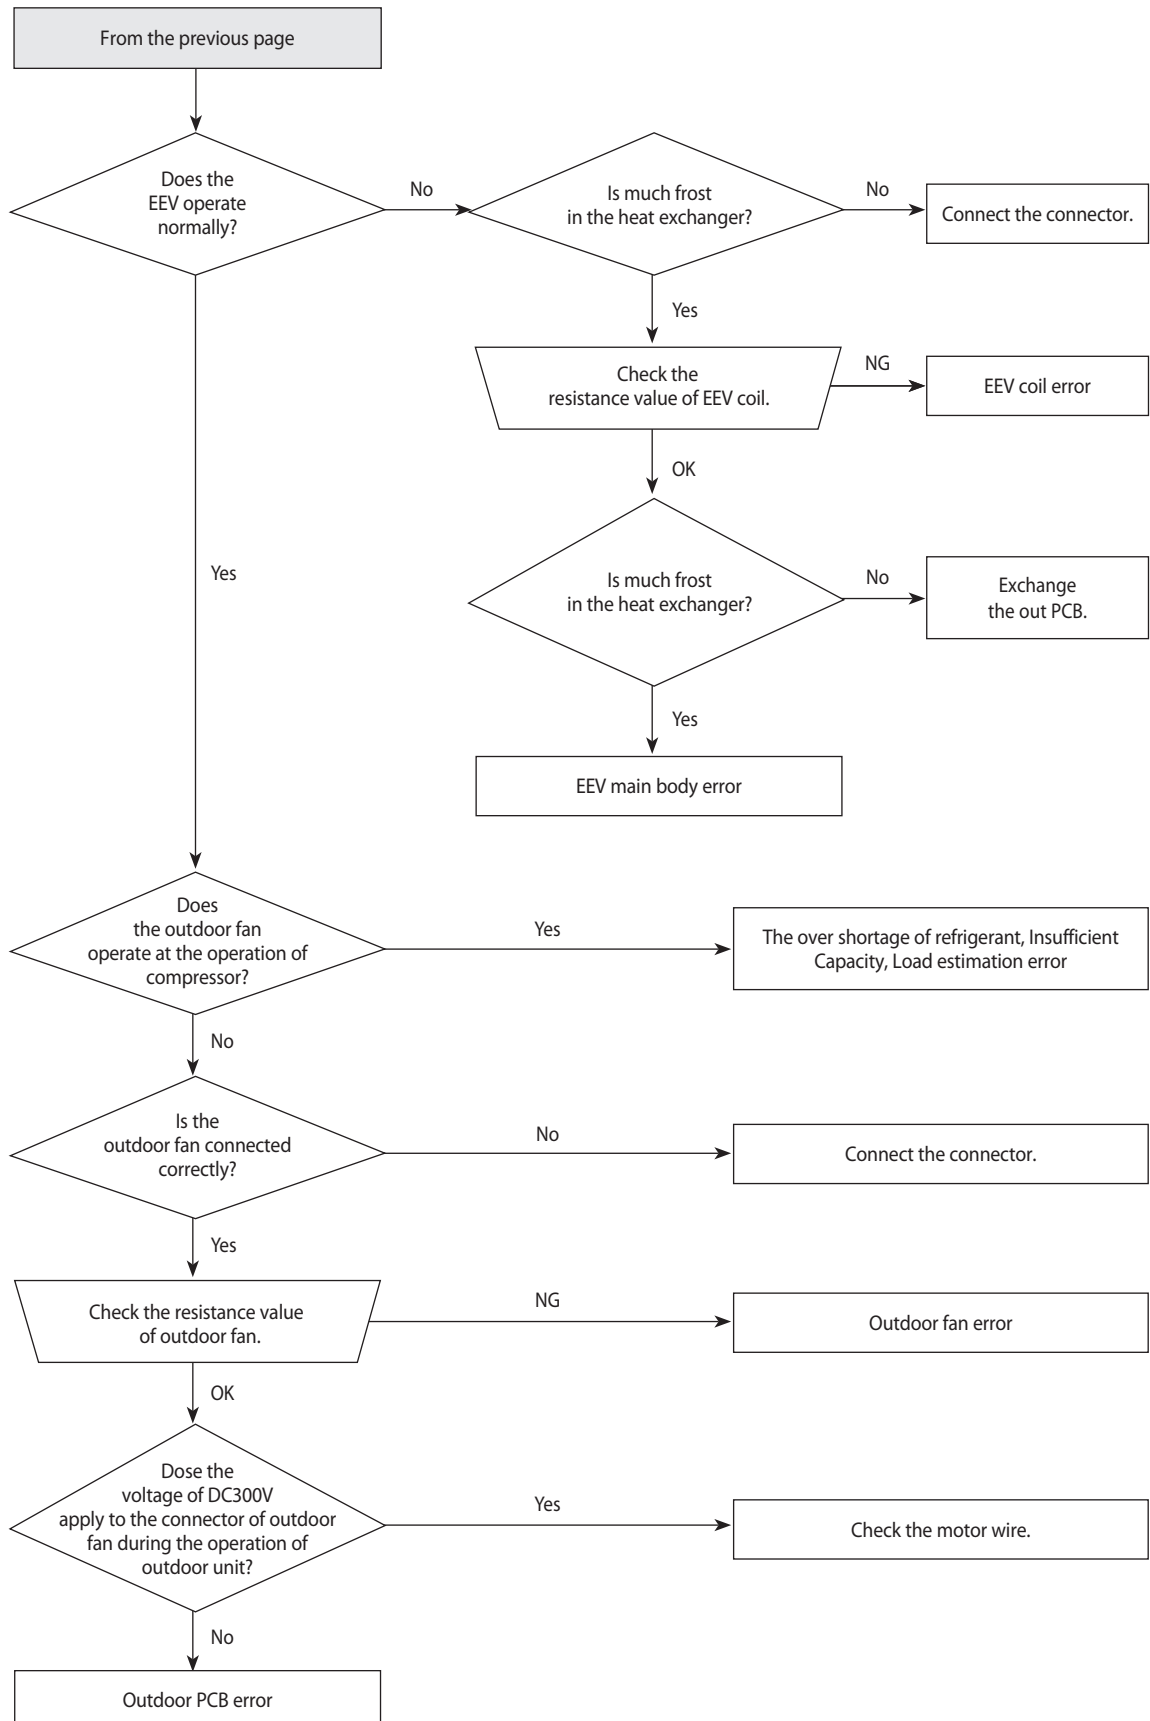


12-2-7 Outdoor temperature sensor error

1. Checklist :

- 1) Is the sensor connector connected correctly?
- 2) Is the sensor placed correctly?
- 3) Does the both terminal of sensor satisfy the resistance value in accordance with temperature?
- 4) Is the resistance value of sensor connection pull_up correct?

2. Troubleshooting procedure

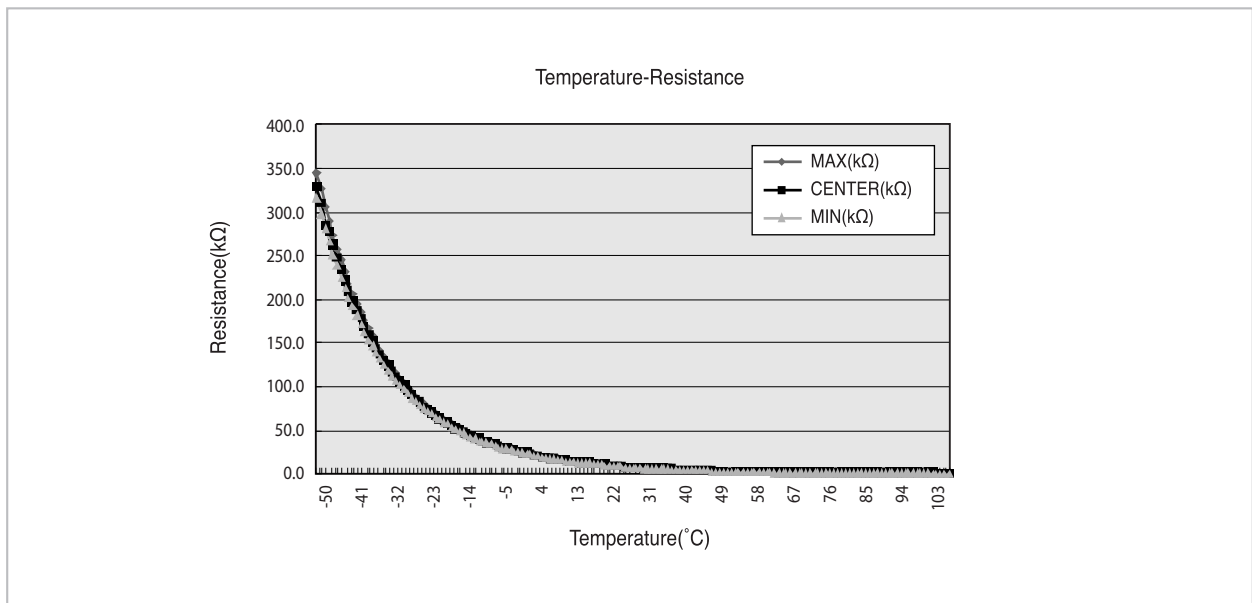
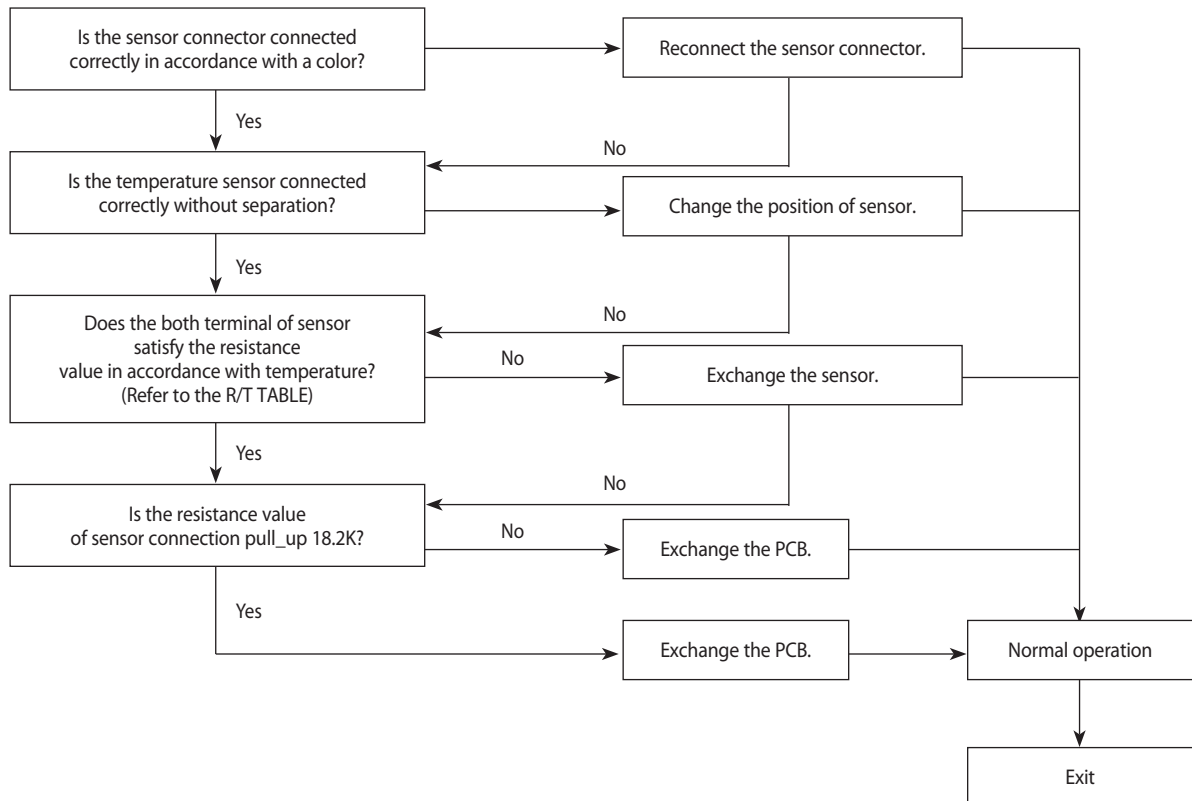


12-2-8 Discharge temperature sensor error

1. Checklist :

- 1) Is the sensor connector connected correctly?
- 2) Is the sensor placed correctly?
- 3) Does the both terminal of sensor satisfy the resistance value in accordance with temperature?
- 4) Is the resistance value of sensor connection pull_up correct?

2. Troubleshooting procedure

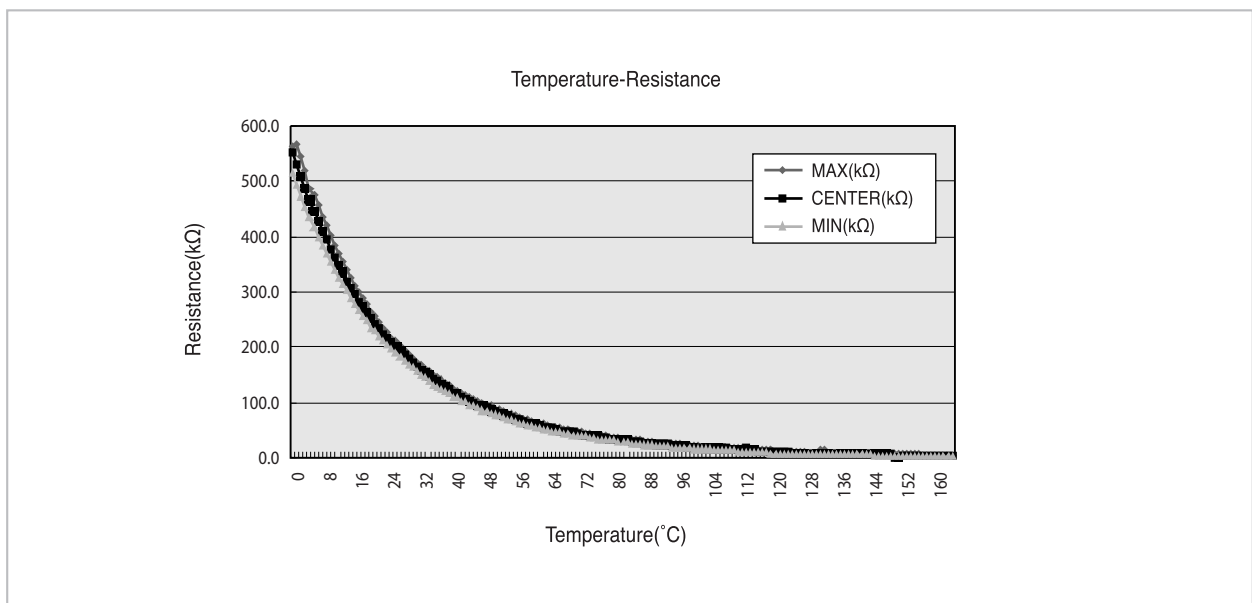
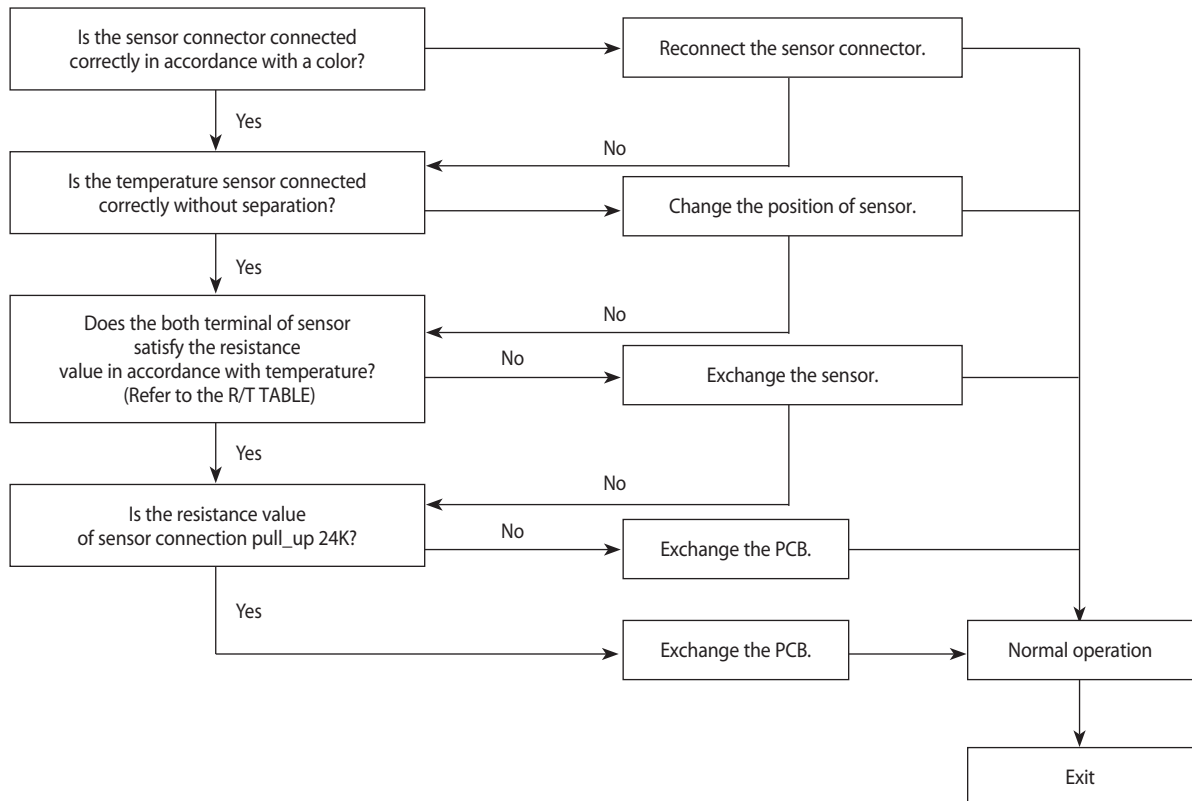


12-2-9 Coil temperature sensor error

1. Checklist :

- 1) Is the sensor connector connected correctly?
- 2) Is the sensor placed correctly?
- 3) Does the both terminal of sensor satisfy the resistance value in accordance with temperature?
- 4) Is the resistance value of sensor connection pull_up 18.2K?

2. Troubleshooting procedure

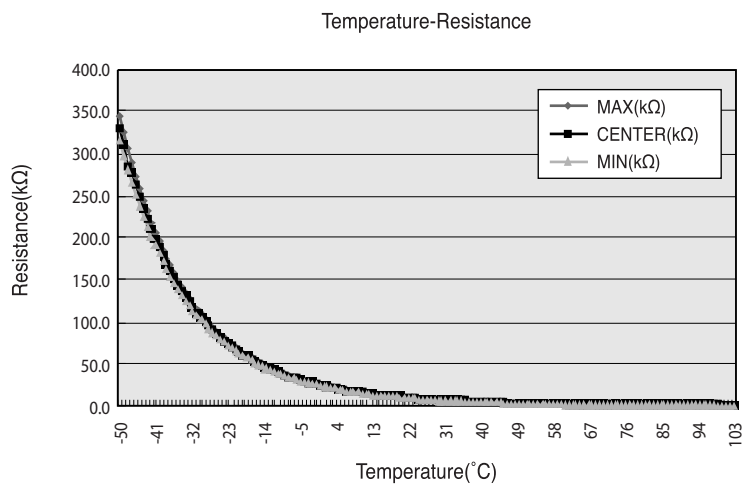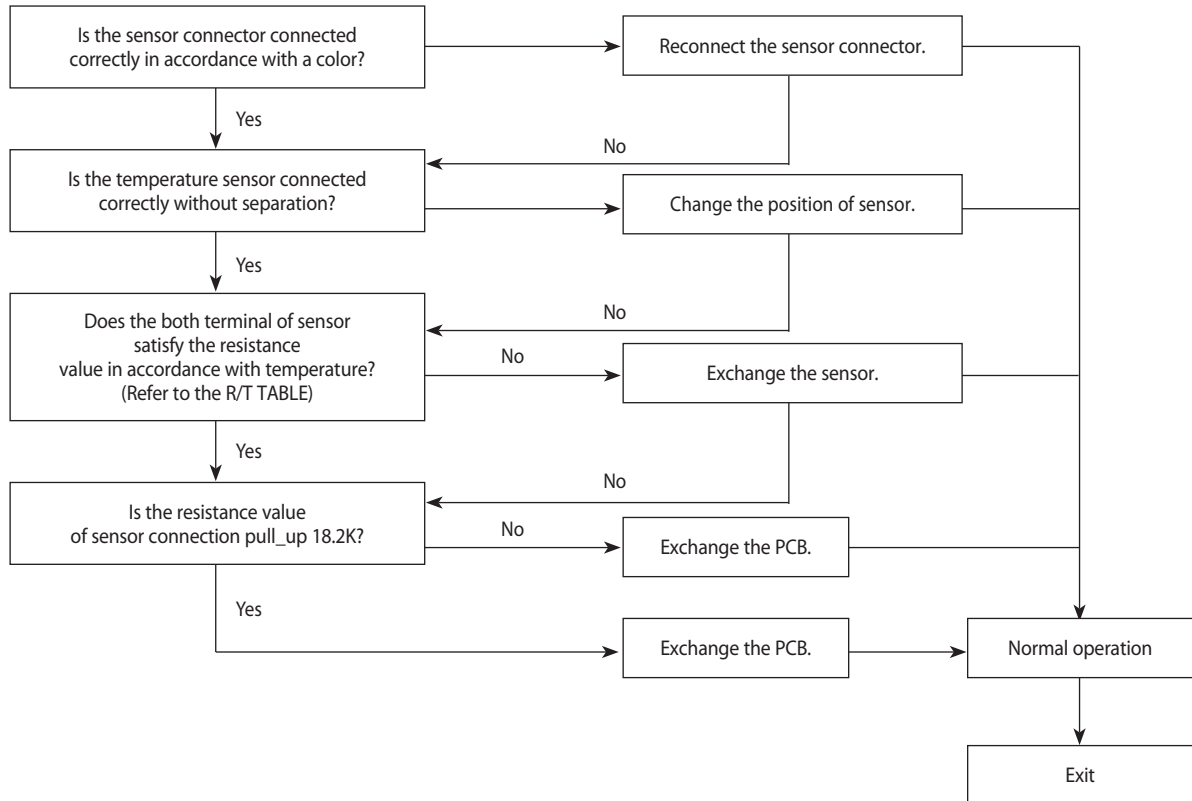


12-2-10 Fan error

1. Checklist :

- 1) Isn't the fan locked?
- 2) Is the sensor placed correctly?
- 3) Does the both terminal of sensor satisfy the resistance value in accordance with temperature?
- 4) Is the resistance value of sensor connection pull_up correct?

2. Troubleshooting procedure

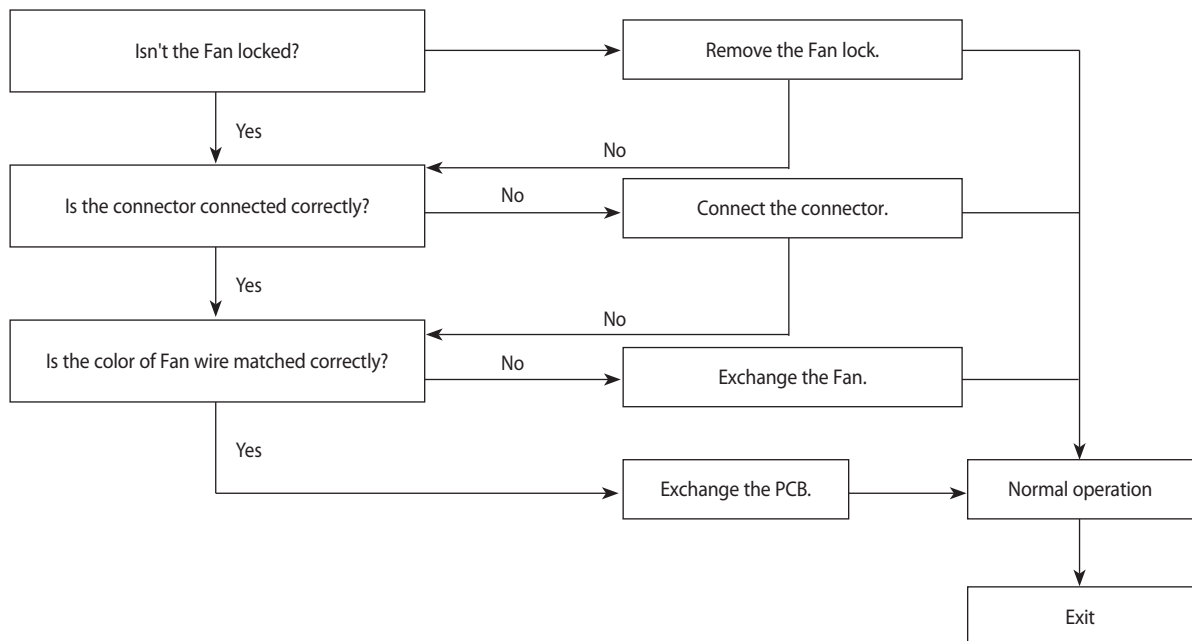


12-2-11 DC-Link voltage sensor error

1. Checklist :

- 1) Is the voltage of indoor unit terminal block 1, 2 correct after power supply?
- 2) Is the capacitor(C101, C102, C103) for DC-Link assembled in accordance the specification?
- 3) Are R112, R113, R114 470 Kohm?
- 4) Is R115 14.3Kohm?

2. Troubleshooting procedure

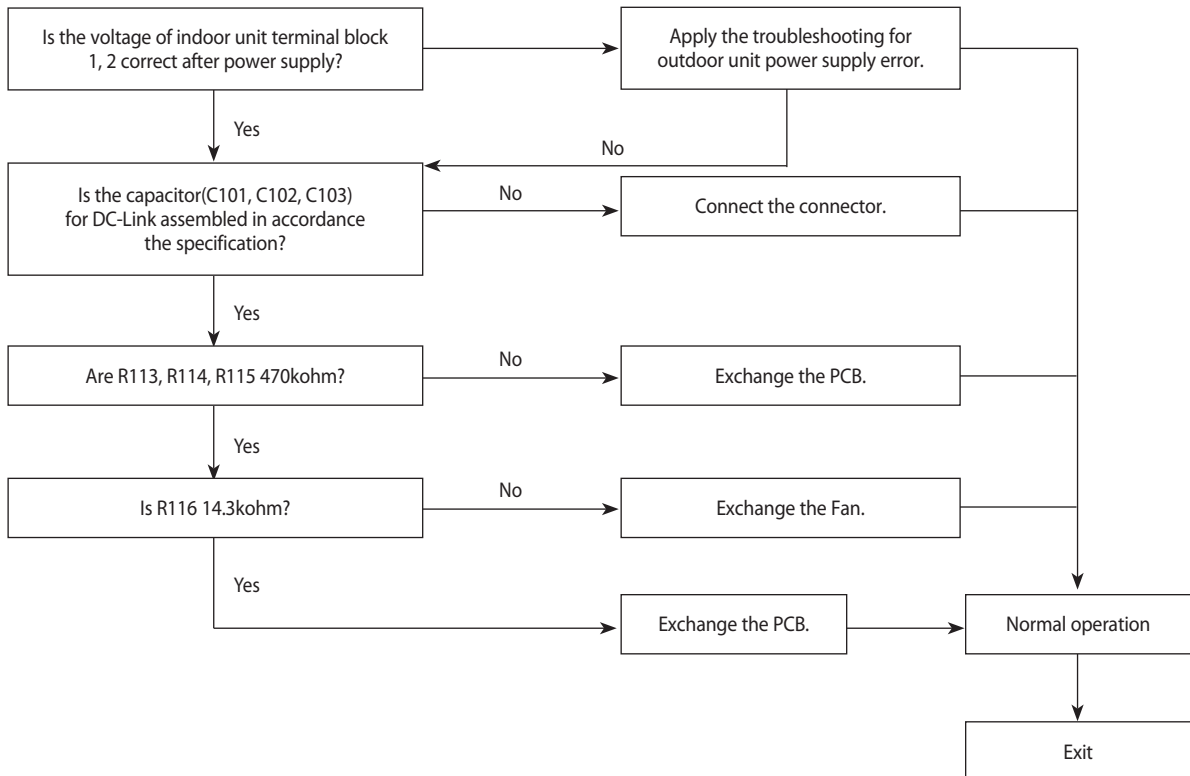


12-2-12 O.C.(Over Current) error

1. Checklist :

- 1) Is the Shunt resistance value correct?
- 2) Is the condition of surrounding temperature abnormal overload?
- 3) Is there any problem as like the temperature sensor separation or measurement value error?
- 4) Is the interphase resistance of compressor normal?

2. Troubleshooting procedure

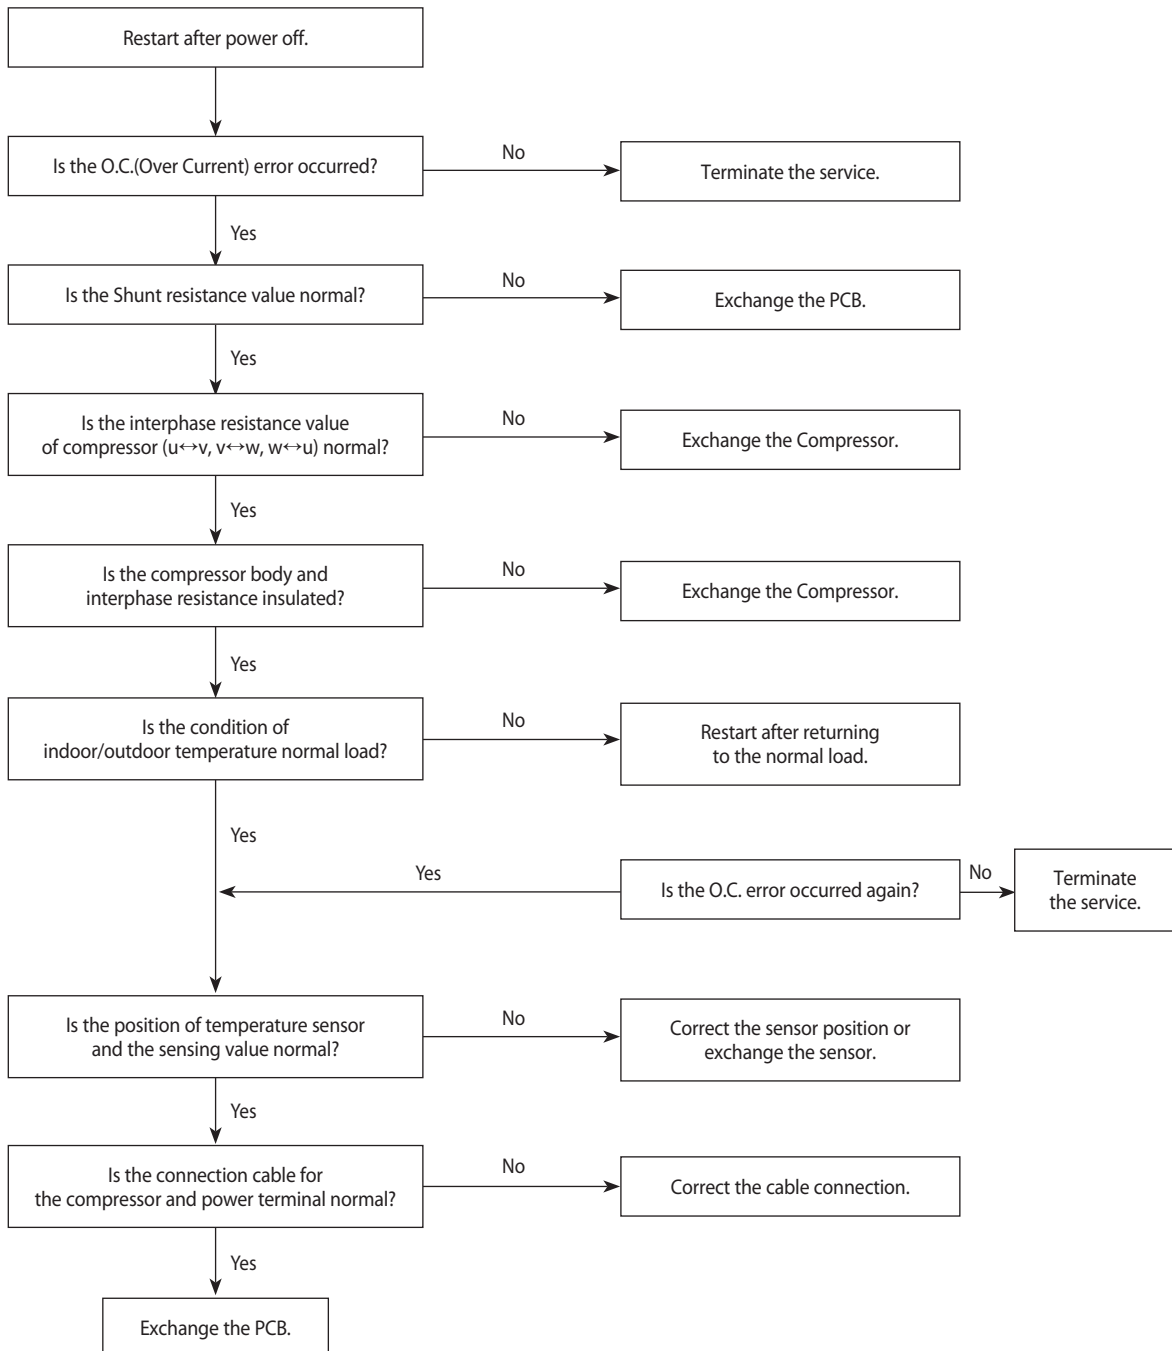


12-2-13 Communication error

1. Checklist :


- 1) Is the communication cable between the indoor unit and outdoor unit connected correctly?
- 2) Isn't the power cable and communication cable error?

2. Troubleshooting procedure

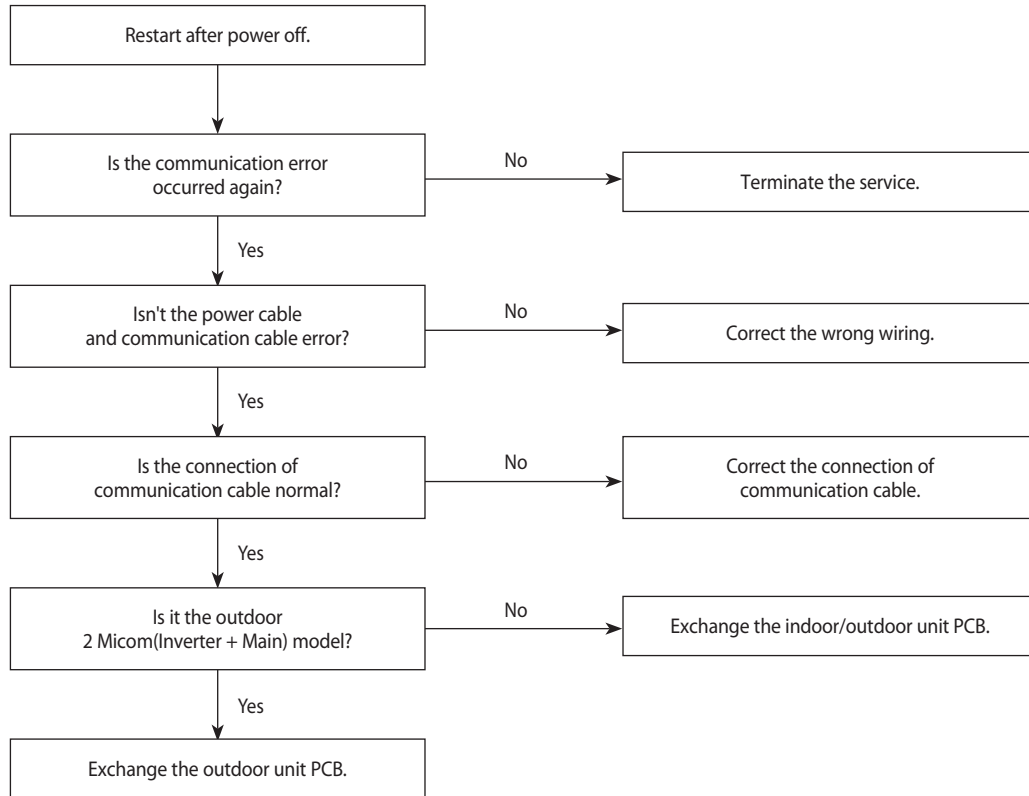


12-2-14 Compressor start error

1. Checklist :
 - 1) Is the connection of cable for the compressor and power?
 - 2) Is the interphase resistance of compressor normal?
2. Troubleshooting procedure

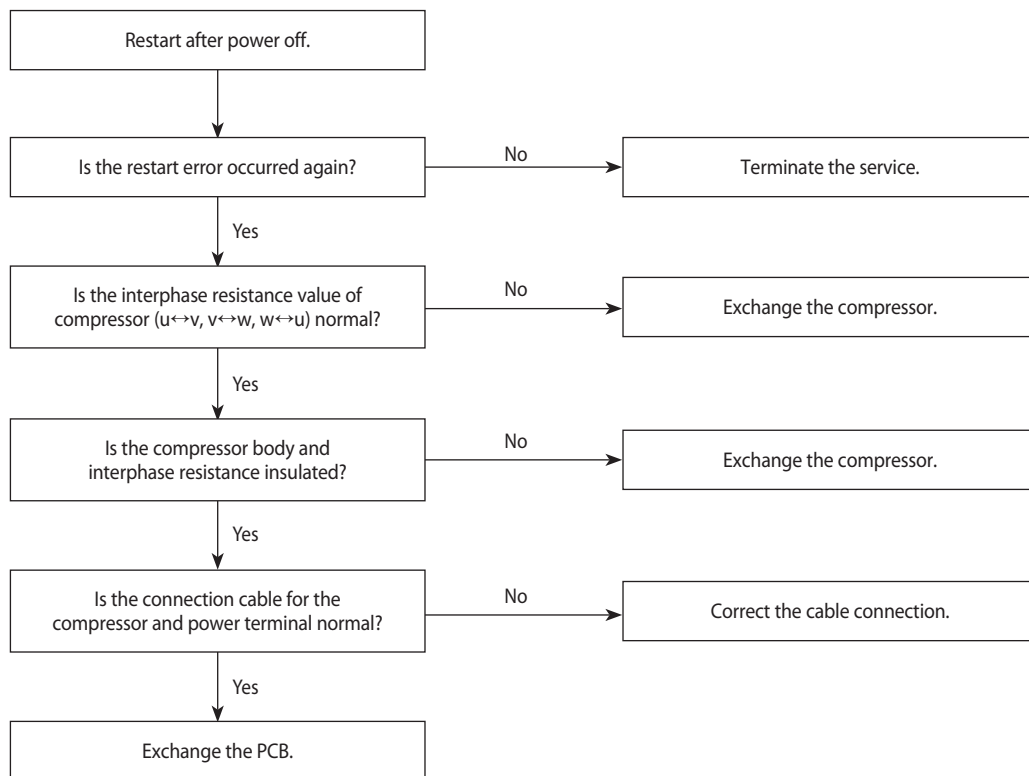

12-2-15 Compressor lock error

1. Checklist :
 - 1) Is the connection of cable for the compressor and power?
 - 2) Is the interphase resistance of compressor normal?
2. Troubleshooting procedure

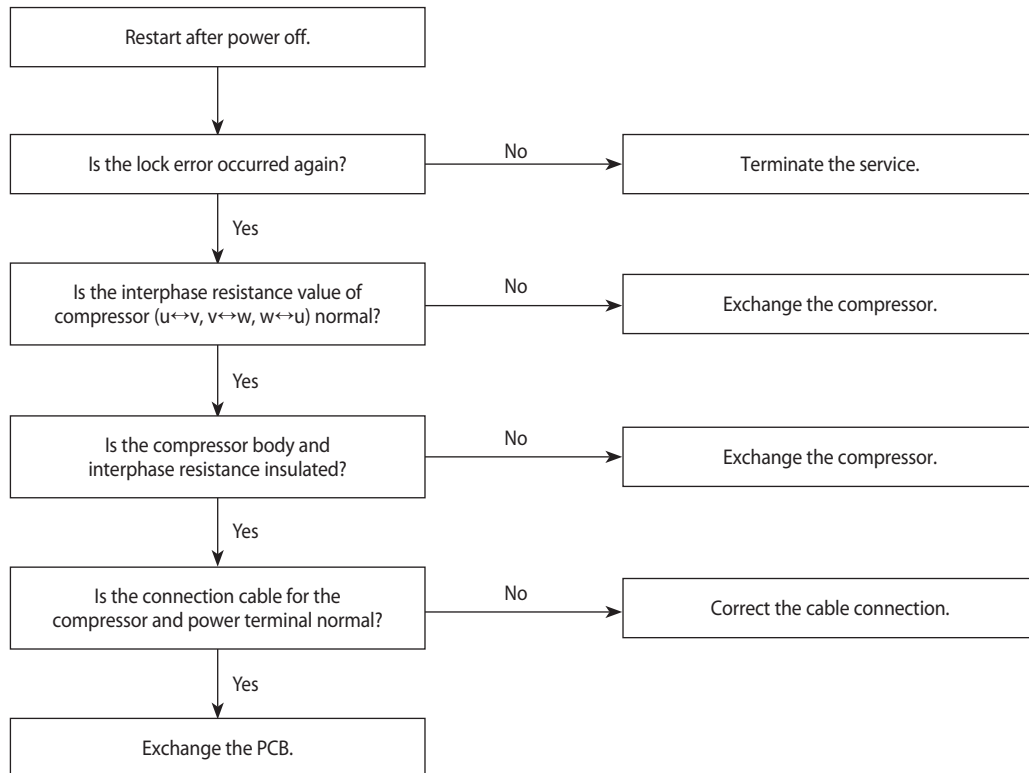


12-2-16 DC Link Over voltage/ Low voltage error

1. Checklist :

- 1) Is the power voltage normal?
- 2) Is the voltage of front and back terminal of indoor(outdoor) power relay normal?
- 3) Is the resistance value for DC Link voltage detection NORMAL?
- 4) Is the resistance value of DC Link discharge normal?
- 5) Is the appearance of DC Link Capacitor normal?

2. Troubleshooting procedure

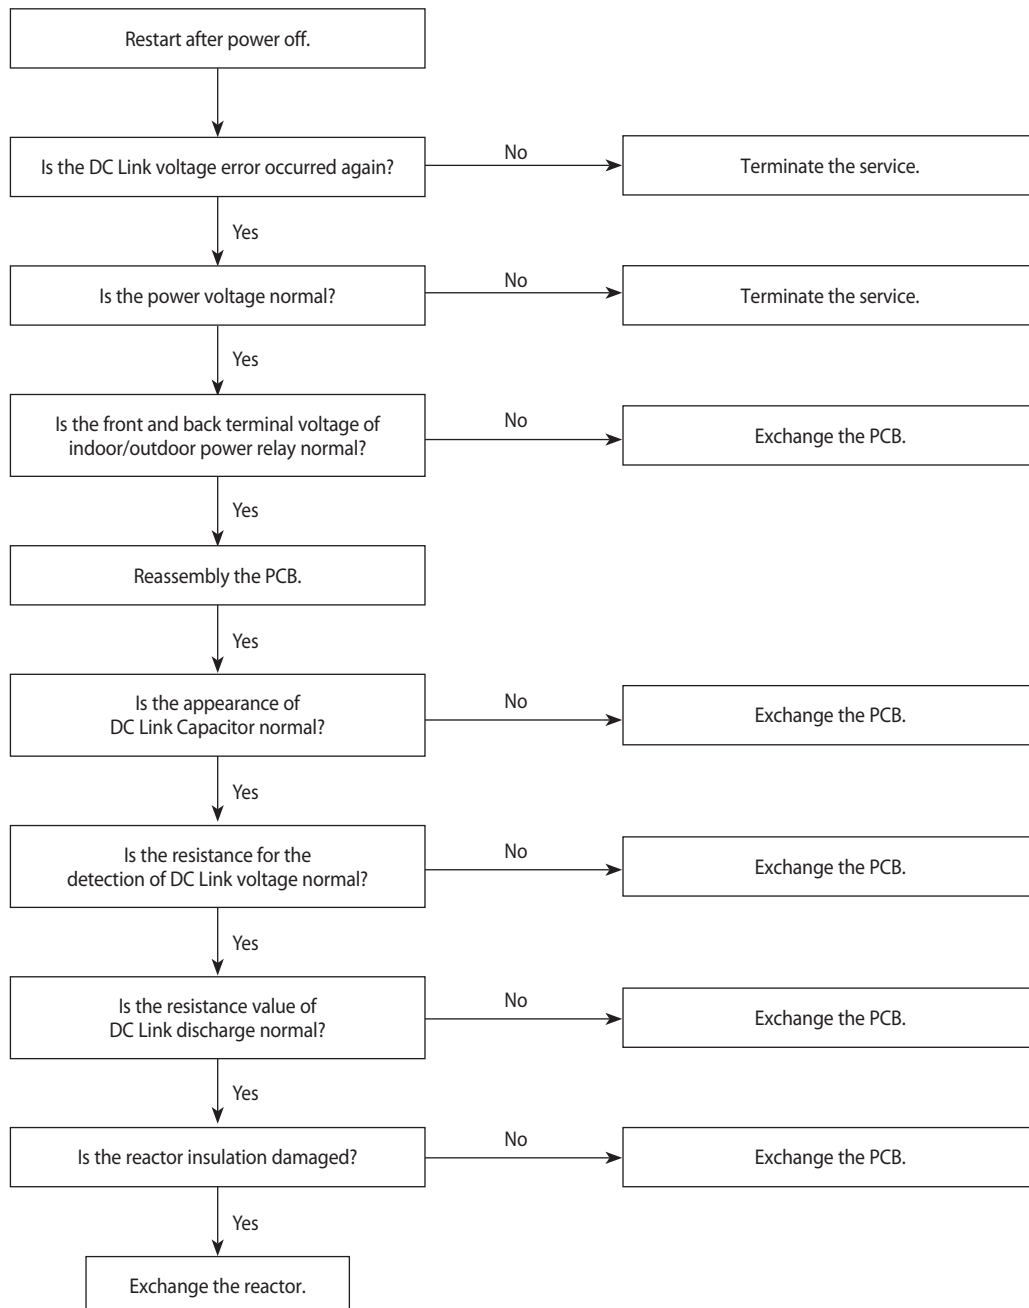

12-2-17 When the remote control is not receiving

1. Check if the connector was normally assembled.
2. Put the set in operation and check the voltage of No. 15(+) and No. 16(-) of the main PCB CN91 while operating the remote control. When the voltage descends below 3V, the assembly module PCB is normal and the main PCB is poor. Then replace the main PCB.
3. Replace the assembly display PCB because the module PCB is poor if the voltage between No. 15~16 of CN91 maintains 5V after the remote control starts operation.

12-2-18 The others

1. AC Line Zero Cross Signal OUT
 - Check the assembly condition of peripheral part of IC21, ZD21, ZD20 and D200 on the PCB.
2. Capacity miss match
 - Check again the indoor unit option code.

12-3 PCB Inspection Method

12-3-1 Pre-inspection Notices

1. Check if you pulled out the AC power plug when you eliminate the PCB or front panel.
2. Don't hold the PCB side not impose excessive force on it to eliminate the PCB.
3. Don't pull the lead wire but hold the whole housing to connect or disconnect a connector to the PCB.
4. In case of outdoor PCB disassembly, check first the complete discharge of condenser (C103) after 30 seconds power off.

12-3-2 Inspection Procedure

1. Check connector connection and peeling of PCB or bronze coating pattern when you think the PCB is broken.
2. The PCB is composed of the 3 parts.
 - Indoor Main PCB Part : MICOM and surrounding circuit, relay, room fan motor driving circuit and control circuit, sensor driving circuit, power circuit of DC12V and DC5V, and buzzer driving circuit.
 - Display part : LED lamp, Switch, Remocon module
 - Outdoor Main PCB part : MICOM and surrounding circuit. IPM and PFC circuit and control circuit.
 - EMI PCB Part : Line filter and Noise Capacitor, Varistor

12-3-3 Indoor Detailed Inspection Procedure

No	Procedure	Inspection Method	Cause
1	Plug out and pull the PCB out of the electronic box. Check the PCB fuse.	1) Is the fuse disconnected?	• Over current • Indoor Fan Motor Short • AC Part Pattern Short of the MAIN PCB
2	Supply power. If the operating lamp twinkles at this time, the above 1)~3) have no relation.	Checking the power voltage.	
		1) Is the DB71 input voltage AC200V~AC240V?	• Power Cord is fault, Fuse open. Wrong Power Cable Wiring, AC Part is faulty.
		2) Is the voltage between both terminals of the C104 on the 2 nd side of the transformer DC12V $\pm 0.5V$?	• Switching Trans or Power Circuit is faulty
		3) Is the voltage between both terminals of OUT and GND of IC19(KA78L05) DC5V $\pm 0.5V$?	• Power Circuit is faulty, Load Short
3	Press the ON/OFF button.	Checking the power voltage.	
		1) Is the voltage over AC180V being imposed on terminal #3 and #5 of the fan motor connector(CN72)?	• Relay(RY71) Coil Disconnection, IC05 is faulty
		2) Check the voltage of both terminals of terminal block 1 and N(1) after 3 minute operation.: AC220V	• Relay(RY71) Contact is faulty
4	Press the ON/OFF button. 1. FAN Speed [High] 2. Continuous Operation	1) Is the voltage over AC180V being imposed on terminal #3 and #5 of the fan motor connector(CN72)?	• Fan Motor of the indoor is faulty
		2) The fan motor of the indoor unit doesn't run.	• Fan Motor Connector(CN72) is faulty
		3) The power voltage between terminal #3 and #5 of the connector(CN72) is 0V.	• ASS'Y Main PCB is faulty • Connection is faulty

12-3-4 Outdoor Detailed Inspection Procedure

No	Procedure	Inspection Method	Cause
1	Wait 30 seconds over after disconnecting the power cable Check the outdoor PCB.	1) Is C101 discharged? 2) Is the resistance of both terminals of C101 opened? 3) Is the fuse of EMI PCB normal? 4) Is the reactor wire connected?	• Over Current • Inner short of PCB • BLDC FAN Motor Error
2	Check the Outdoor unit PCB.	1) Is R701 200ohm? 2) Does ry74 operate normally? (IC05 & 16:0V, 1:5V) 3) Is the fuse(F701) normal? 4) Is the Sub PCB assembled normally?	• Outdoor PCB Error • SUB Relay(RY74) Error • IC05 Error • Indoor PCB Error
3	Check the LED lighting after power supply.	1) Normal: Red: Light On, Green: Flickering, Yellow: Light Off? 2) Is the voltage of C101 250V over? 3) Is the input of IC19 8V, and the output 5V? 4) Recheck after disassembling BLDC FAN Wire.	• Inner short of outdoor PCB • Wrong assembly of outdoor PCB • BLDC FAN Error
4	Check the condition of indoor & outdoor connection cable.	1) Is the green LED light on once per second? 2) Is the indoor & outdoor connection cable connected in order? 3) Is the grounding wire connected to the both of indoor & outdoor unit? 4) Is the voltage of terminal block N(1), 225V?	• Wrong connection of Indoor/Outdoor wiring • Wrong assembly of outdoor communication circuit
5	Check the Comp Wire.	1) Is it connected red, blue, and yellow in order in counterclockwise. 2) Are the valve and its installation condition good? 3) Is the installation condition of outdoor unit?	• Wrong assembly • Installation condition is bad.
6	Check the BLDC Fan.	1) Is CN01 1, 3 over 250V? 2) Is CN01 3, 5 within 1V~5V? 3) Is the voltage of CN01 6 changed? 4) Is the resistance of BLDC Motor 1, 3 opened after power off?	• Outdoor PCB Error • BLDC Motor Error


12-4 Main Part Inspection Method


Part	Breakdown Inspection Method											
Room Temperature Sensor	Measure resistance with a tester											
	Normal	At the normal temperature 37kΩ~ 8.3kΩ(-7°C~+30°C) *Refer to Table 12-3-4.										
	Abnormal	∞, 0Ω . . . Open or Short										
Room Fan Motor	Measure the resistance between terminals of the connector (CN72) with a tester.											
	Normal	At the normal temperature (10°C ~ 30°C)										
		<table><tr><td>Compare terminal</td><td>Resistance</td><td>Remark</td></tr><tr><td>Yellow, Blue</td><td>404.4Ω ± 10%</td><td>Main</td></tr><tr><td>Yellow, Red</td><td>340Ω ± 10%</td><td>Sub</td></tr></table>		Compare terminal	Resistance	Remark	Yellow, Blue	404.4Ω ± 10%	Main	Yellow, Red	340Ω ± 10%	Sub
		Compare terminal	Resistance	Remark								
		Yellow, Blue	404.4Ω ± 10%	Main								
Yellow, Red	340Ω ± 10%	Sub										
Abnormal	∞, 0Ω . . . Open or Short											
Stepping Motor	Measure the resistance between the red wire and each terminal wire with a tester.											
	Normal	About 300Ω at the normal temperature (20°C ~ 30°C)										
	Abnormal	∞, 0Ω . . . Open or Short										

13. Block Diagram


13-1 Indoor Unit


* : OPTION

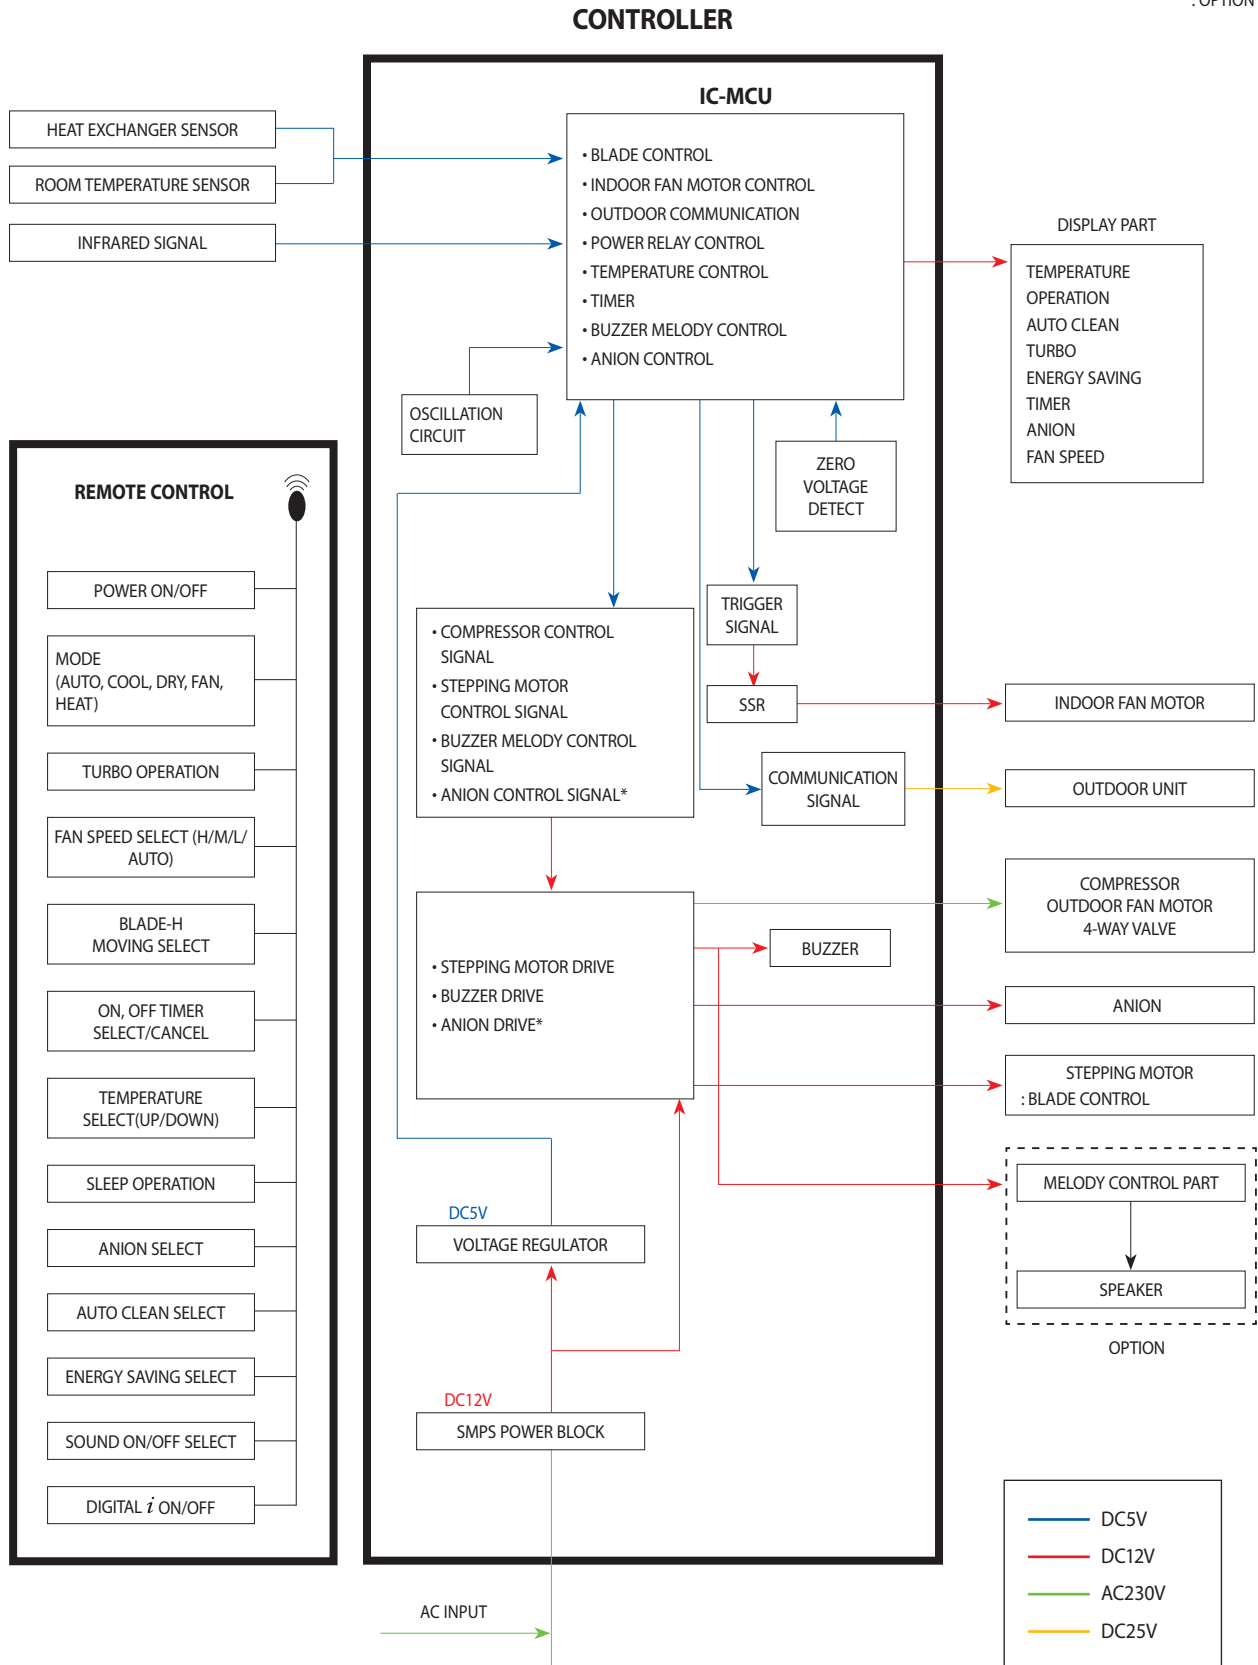

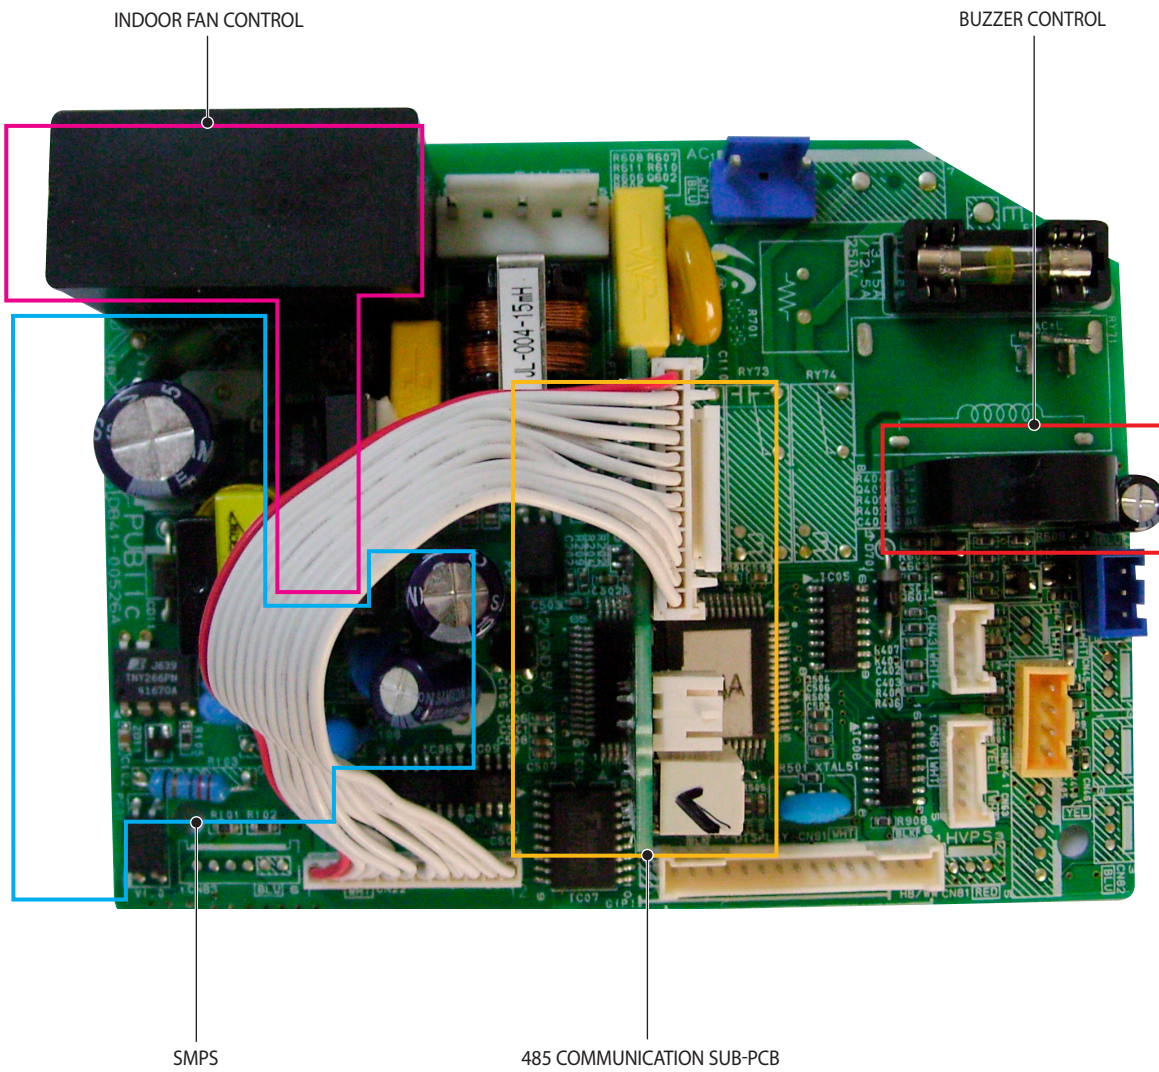

13-2 Outdoor Unit

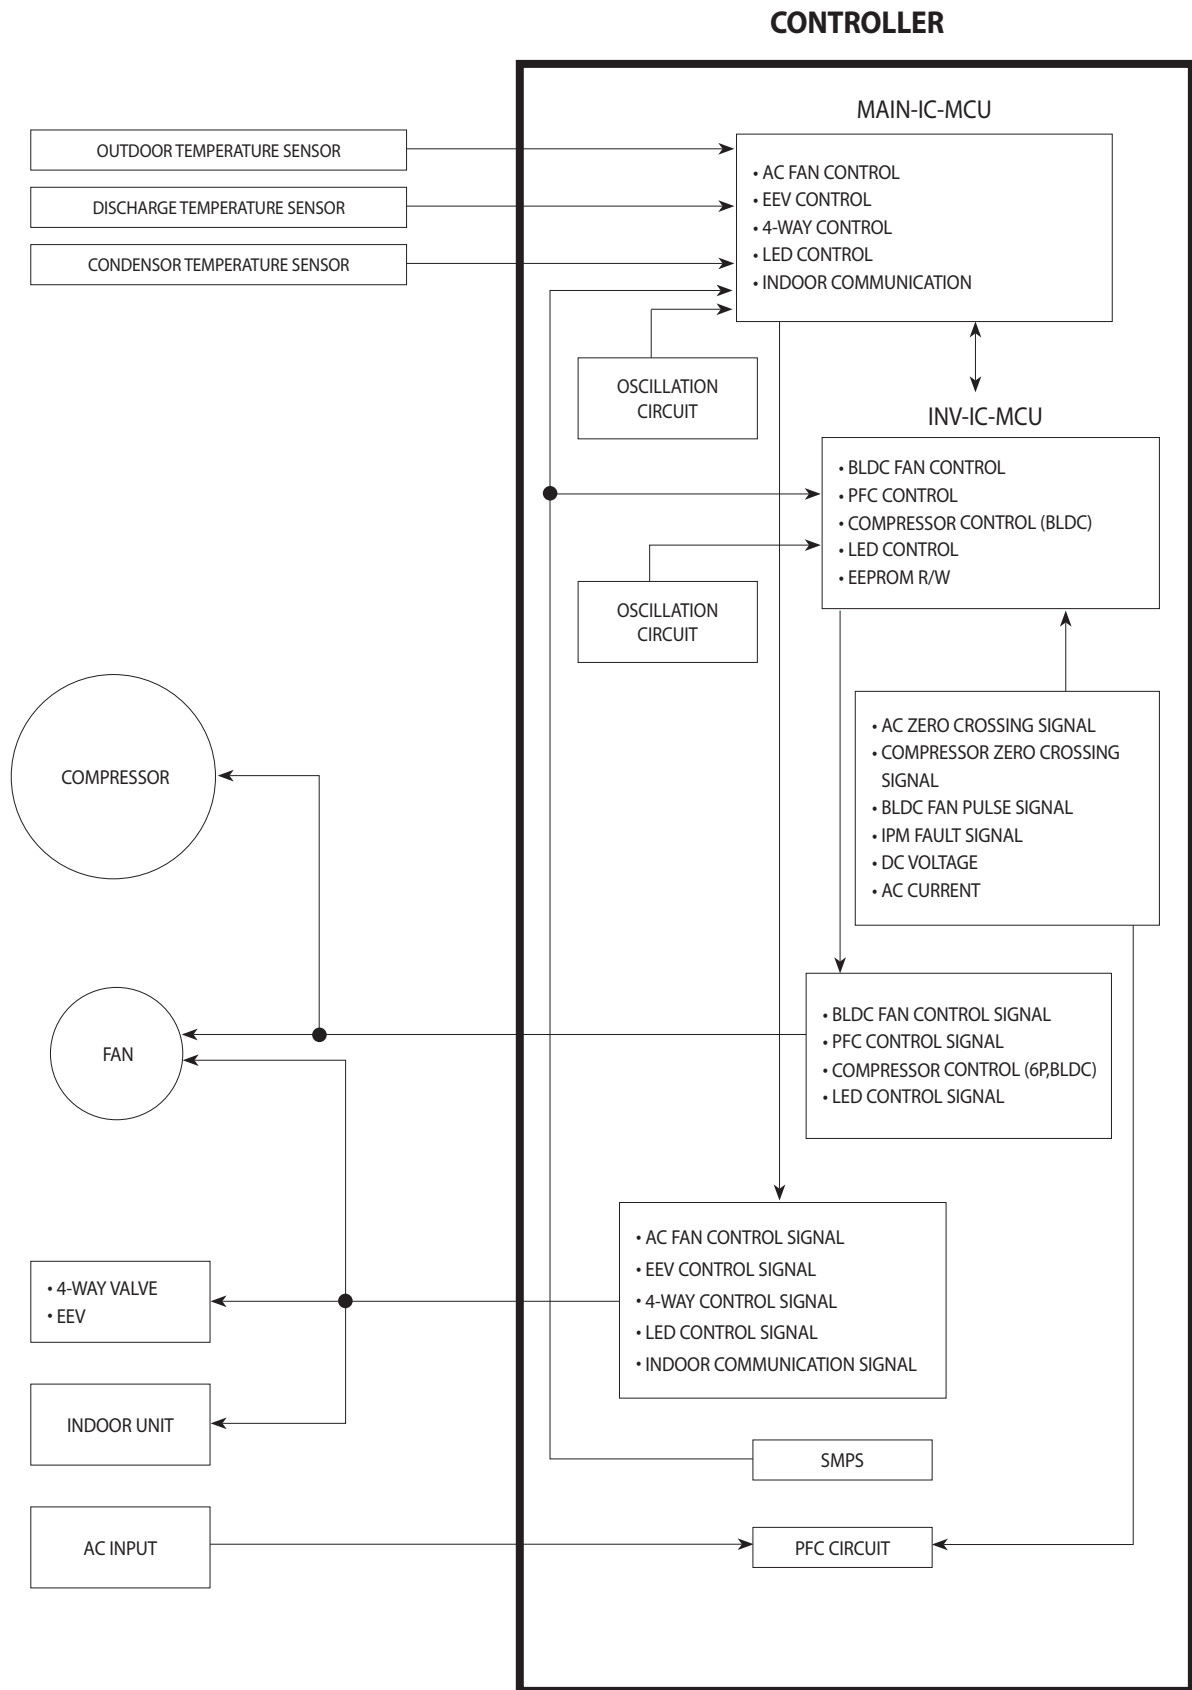


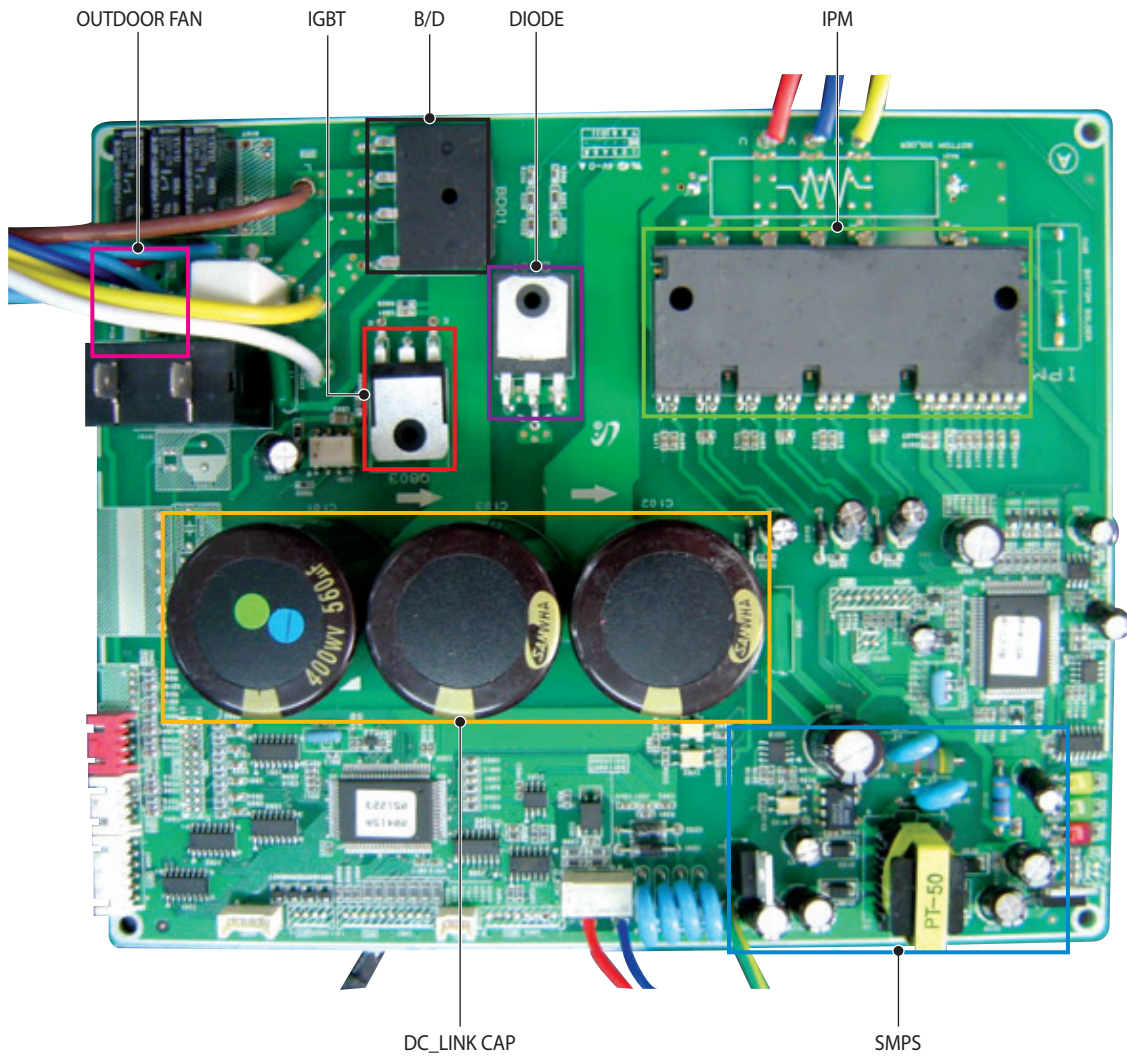

14. Reference Sheet

14-1 Index for Model Name

* Project model code for overseas from 2007(For RAC Export Models)

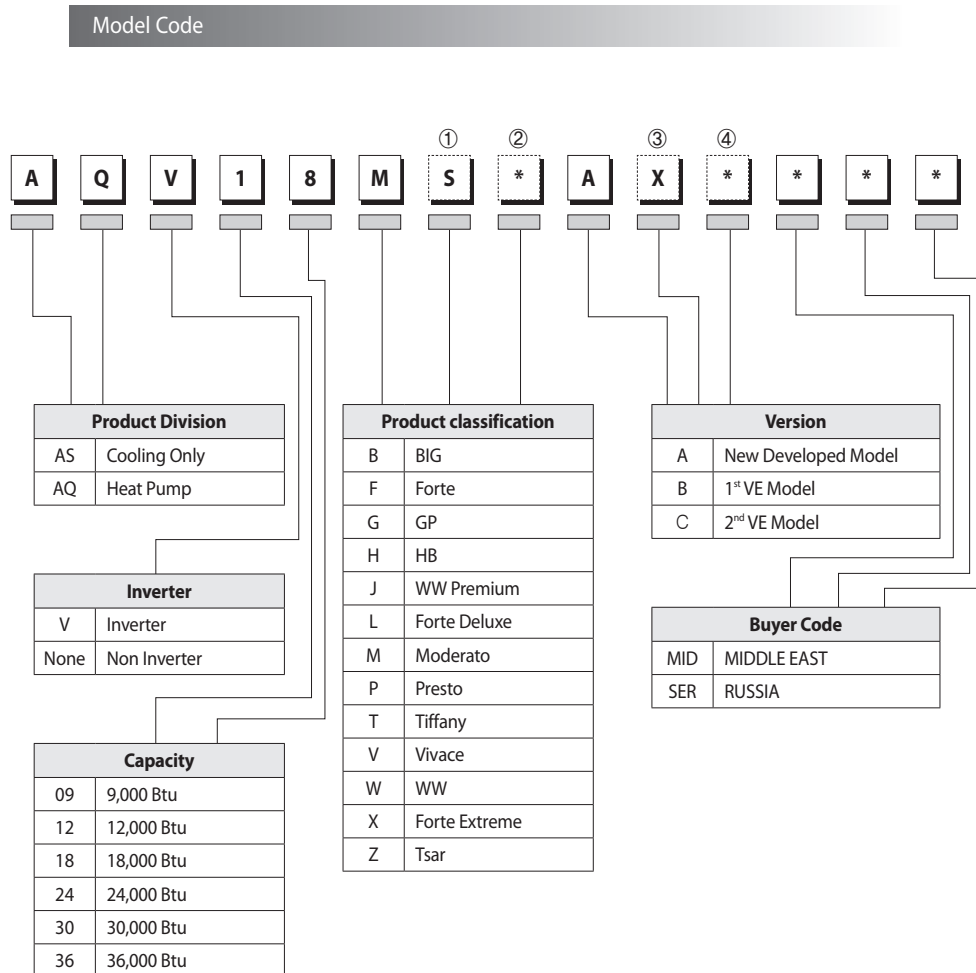

- ① : Use the " ① " digit for Grille Color deviation.
 : Don't use the digit for Basic White model.
 ex) Silver : S, Black : B, White : W, etc.
- ② : Use the " ② " digit for Electric Source deviation.
 : Only for "XAP", "XAX", "GEM" Buyer.
- ③ : Use the " ③ " digit for classification between indoor and outdoor.
 Indoor ⇒ "N" & Outdoor ⇒ "X".
- ④ : Use the " ④ " digit for KD models.
 "CKD" ⇒ "1" & "SKD" ⇒ "2".

□ Except the RAC Export Models for China.


14-2 Low Refrigerant Pressure Distribution

Note : • Please measure the refrigerant pressure after the air conditioner operates on testing cooling mode during more than 10 minutes.


- Indoor Temp. Variation : 20°C ~ 32°C
- Outdoor Temp. Variation : -5°C ~ 45°C

Low Refrigerant Pressure Distribution

AQV18M*A

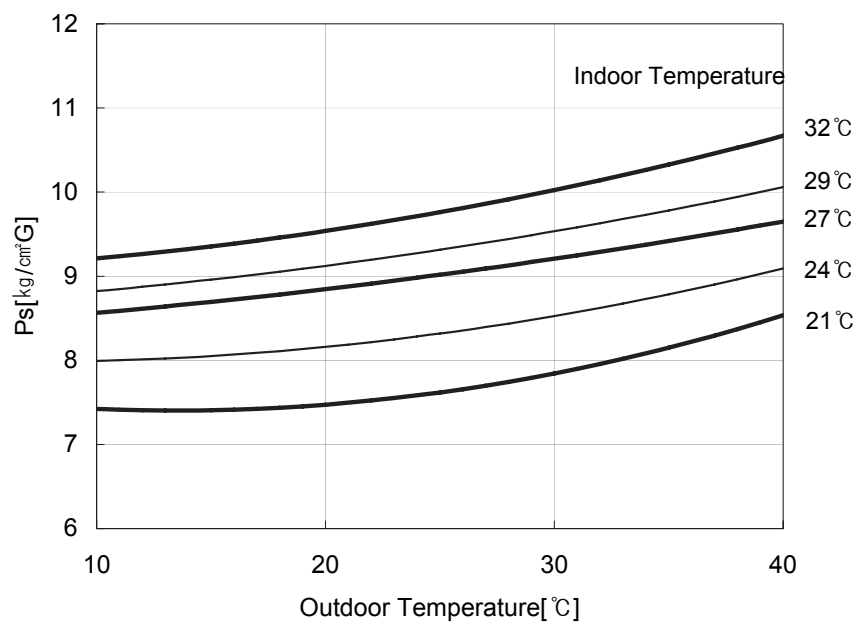

AQV24M*A

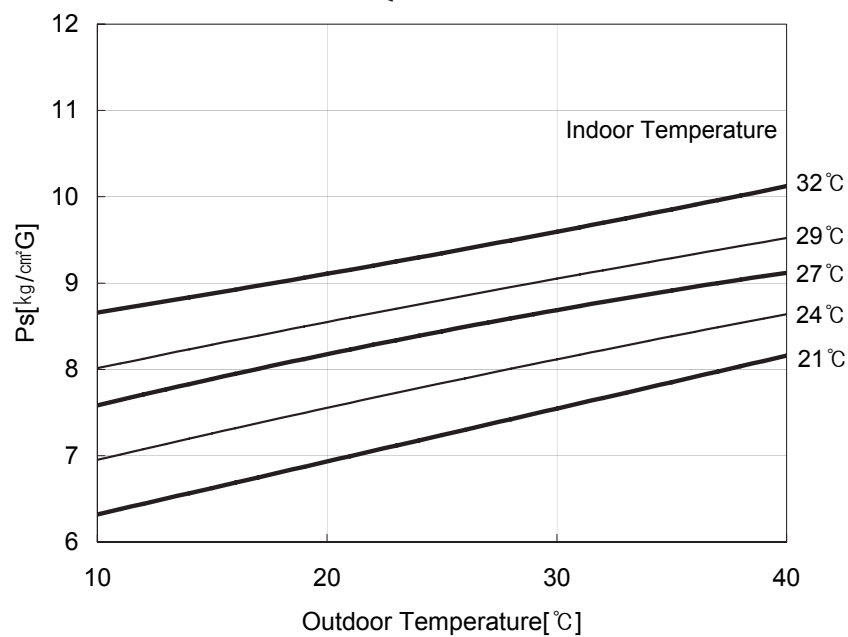

14-3 Pressure & Capacity mark

■Power/Heat

W	cal/s	kcal/h	Btu/h	HP	kg·m/s	lb·m/s
1	0.23885	0.85985	3.4121	0.001341	0.10197	0.73756
4.1868	1	3.6	14.286	0.0056146	0.42693	3.088
1.163	0.27778	1	3.9683	0.0015596	0.11859	0.85778
0.29307	0.06999	0.252	1	3.9302×10^{-4}	0.029885	0.21616
745.7	178.11	641.19	2,544.4	1	76.04	550
9.8067	2.3423	8.4322	33.462	0.013151	1	7.233
1.3558	0.32383	1.1658	4.6262	0.0018182	0.13826	1

14-4 Q & A for Non-trouble

Classification	Class	Description
Cooling	Q	The cooling is weak.
	A	When it is hot outside, its cooling capacity decreases due to the increase of the ambient temperature. When the dust filter gets blocked or warm outside air gets in, the cooling capacity will decrease. So, make sure to clean the dust filter frequently, prevent heat loss by closing the doors and insulate the cooling area by using curtains, blinds, shades or window tinting.
	Q	The cooling is good generally. But, it gets weak when it is considerably hot.
	A	It occurs when the outdoor unit is exposed to direct sun light and heat-up air is not ventilated well. So, set up a sunblind over the outdoor unit and keep stuff away from the unit to increase the ventilation. When the cooling capacity decreases during a heat wave, clean the heat exchanger of the outdoor unit or spray some cold water to the heat exchanger to increase the cooling capability.
	Q	The cooling is weak. Does it need refrigerant charging?
	A	It is not correct charging refrigerant regularly. Except that you have moved in several times or the connection pipes are broken, the refrigerant does not run low. So, when refrigerant is additionally charged, it could be costly and cause a product's failure. When the refrigerant leaks, all of it will escape in a short time resulting in cooling failure and no water coming out of the drain hose. So, if water comes out from the drain hose, it indicates the normal operation of the product and it does not need refrigerant charging.
	Q	It fails to do cooling.
	A	When the air conditioner is set to Ventilation or the desired temperature is set higher than the current temperature, it fails to do cooling. In this case, select Cooling or set the desired temperature lower.
Leakage	Q	It floods the floor.
	A	Place the drain hose properly. When it is not placed properly, the drain water would flow back flooding the floor. So, straighten out the drain hose for the water to be drained well.
	Q	Water drips at the drain connection (service valve) of the outdoor unit.
	A	When a glass bottle is taken out of the refrigerator, moisture gets condensed on its surface due to the temperature differences. The same principle applies to the air conditioner. When cold refrigerant goes through the copper tube, moisture gets condensed on the surface of the tube and the connection areas. To prevent the water condensation, the pipes are insulated. But, the connection areas of the outdoor unit are not insulated for the purpose of maintenance or repair, and water gets condensed due to the temperature differences and drips down. Generally, it evaporates right away. But, when it drips much during muggy days, put a water pan on the floor.
	Q	It leaks even though a drain pump is used.
	A	It occurs when the drain pump is plugged out or it is out of order. Check the power of the drain pump and the position of the drain hose, and when the pump is faulty, contact the drain pump manufacturer. Samsung Electronics do not manufacture drain pumps. So, we are not able to correct the drain pump problems.
Smells	Q	Whenever the air conditioner is turned on, it irritates my eyes and gives me a headache.
	A	There are no components in the air conditioner irritating the eyes and sending out chemical smells. But, when the air conditioner is turned on, other smell sources are sucked into the air conditioner and get out of it. So, find and root out the smell sources. Generally, it occurs at a interior renovated place, a pharmacy, a gasoline handling place, a tire shop, a second-hand book shop or an electronic component handling place; when its chemical or musty smells are sucked in and sent out, it can be misled that the air conditioner generates them. So, find and root out the problem or refresh the room frequently.

Classification	Class	Description
Smells	Q	Whenever the air conditioner is turned on, it stinks.
	A	There are no components in the air conditioner sending out chemical smells. But, when the air conditioner is turned on, other smell sources are sucked into the air conditioner and get out of it. So, find and root out the smell sources. Generally, when the drain hose is taken out to the washing room or there are sources of smells such as a diaper bin, a shoe shelf or a socks bin, bad smells generate. Also, it occurs where glass cleaners or air fresheners are used; when they are sucked in interacting with dusts and moistures inside, bad smells generate. These kinds of organic materials noxious to human bodies. So, we recommend against the use of them.
	Q	Whenever the air conditioner is turned on, it smells sour.
	A	When the room is papered recently, its paste smells would be sucked inside. Also, when the air conditioner is installed in the study room of young boys loving sweat-generating activities such as the basketball, excessive sweats evaporate and get sucked into the air conditioner resulting in bad smells. So, find and root out the problem or refresh the room frequently.
	Q	Whenever the air conditioner is turned on, it smells musty.
	A	It is due to the improper keeping of the product after its use. When keeping the product, dry up the inside with the operation of Ventilation to prevent must. When the product is kept without drying up the inside with Ventilation, mold would grow inside resulting in must. So, open the windows and switch on the Ventilation function to get rid of the saturated smell inside.
	Q	Whenever the air conditioner is turned on, it sends out bad smells such as stale smells.
	A	It occurs generally when there are pet animals in the house. Their smells stay at the same place. But, when the air conditioner is turned on, the air gets circulated resulting in the circulation of the smells. So, find and root out the problem or refresh the room frequently.
	Q	It sends out bad smells.
Operation	A	When the air filter is filthy, it could send out bad smells. So, clean the filter and ventilate the room with the windows open while operating the Ventilation function.
	Q	It won't start.
	A	There is a power failure or it is plugged out. Also, check if the power distribution panel is switched off.
	Q	It goes off during operation.
	A	When the hot air does not escape properly, it goes off during operation. It occurs when it does not ventilate properly because the outdoor unit is covered, the back of the outdoor unit is blocked by a cardboard or a plywood panel, and the front of the outdoor unit is blocked by the closed window or other obstacles. Clear the above obstacles from the outdoor unit.
	Q	It generally works properly. But, when it's considerably hot, it goes off during operation.
	A	It occurs when the outdoor unit is exposed to direct sunlight and the hot air does not escape properly. Set up a sun blind over the outdoor unit and clear the neighboring obstacles from the outdoor unit to provide good ventilation. When it goes off frequently during a heat wave, it would prevent the turn-off and increase the cooling capacity cleaning the outdoor unit or spraying some water to the heat exchanger.
	Q	The remote controller won't operate.
Operation	A	When the batteries run out or the transmitter or receiver of the remote controller is blocked by obstacles, change the batteries or keep the obstacles away from the controlling area. Also, the remote controller may not work under intensive light from a 3-wave length lamp or a neon sign due to the EMI. In this case, take the remote controller closer to the receiver.

Classification	Class	Description
Installation	Q	Who installs the air conditioner? (Relocation/Re-installation)
	A	When relocating or re-installing the air conditioner, make sure to contact Samsung Electronics Service Center or Authorized Service Agent and have them to do the job. (If not, it could cause personal injury or product damage.) The cost for the relocation/re-installation of the air conditioner is subject to the customer's expense. There is a cost table. But, our service engineer needs to visit to total up the cost correctly. When you move in, make sure to contact Samsung Electronics Service Center or Authorized Service Agent in advance to streamline the process.
	Q	Is it possible to install the outdoor unit outside?
	A	It is possible to install it at a designated place in the apartment or on the rooftop nearby. But, it's illegal hanging an angle iron case with the outdoor unit in it outside the apartment. Also, it is illegal obstructing passers-by with the outdoor unit installed outside.
	Q	What can be done to install the outdoor unit facing the road because it is a commercial building?
	A	The following is an excerpt from Building Code going into effect from JUNE 1st 2005. "The exhaust pipe of a cooling or ventilation facility installed in a building adjacent to the streets of commercial or residential areas shall be installed higher than 2 m to prevent the exhaust air from blowing directly to passers-by and the current facilities shall be corrected by MAY 31st 2005." So, please install it higher than 2 m or not to blow the hot exhausting air directly to passers-by.
	Q	What about installing a windscreen during installation not to blow hot air directly to passers-by?
	A	When the hot air from the front of the outdoor unit is blocked, the product's performance will be affected and it will fail to operate properly. So, keep it at least 300mm away from its surrounding walls and give it good ventilation.

14-5 Cleaning/Filter Change


14-5-1 Cleaning your Air Conditioner

To get the best possible use out of your air conditioner, you must clean it regularly to remove the dust that accumulates on the air filter.




• Before cleaning your air conditioner, ensure that you have switched off the breaker used for the unit.


1. Open the front panel by pulling tabs on the lower right and left sides of the indoor unit.

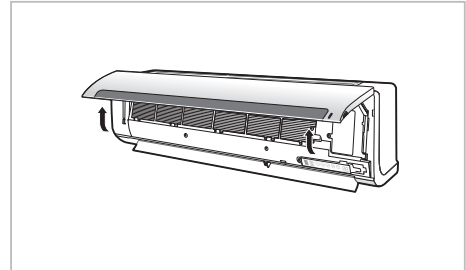

2. Detach the front panel by pulling it forwards.
3. Hold the edge of the air filter under the front panel and pull to release.
4. Remove all dust on the air filter with a vacuum cleaner or brush.
5. WHEN YOU FINISH, INSERT THE TOP OF THE FILTER INTO THE SLOT AND FIX IT TO 5 tabs or 3 tabs of the panel.

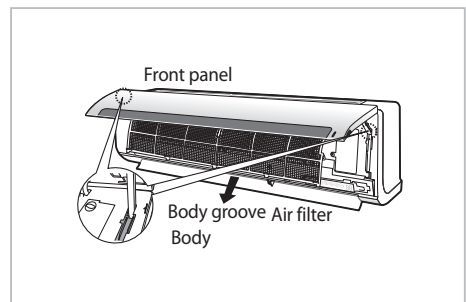

6. CLEAN THE FRONT PANEL WITH A DAMP CLOTH AND MILD DETERGENT (do NOT use benzene, solvents or other chemicals).
7. Reassemble the air filter and the front panel.

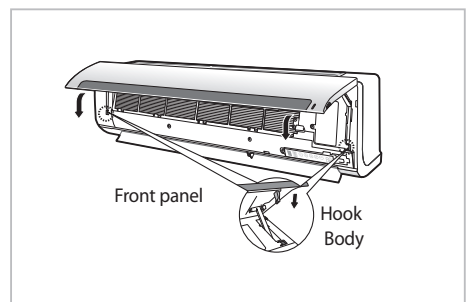


Note : • If you have not used the air conditioner for a long period of time, set the fan going for three to four hours to dry the inside of the air conditioner thoroughly.

14-5-2 Cleaning Deodorizing and Bio filter (Option)

To remove minute dust particles and odors, deodorizing and Bio filter are installed in the air conditioner. You should clean the filters every 3 months.

1. Open the upper front panel by pulling the lower right and left tabs of the panel.
2. Pull out the deodorizing and Bio filter.
3. Wash the filters with clean water, then dry them in the shade.
4. Insert the filters in their place.
Note : • You can change the position of filters with each other.
5. Close the front panel.

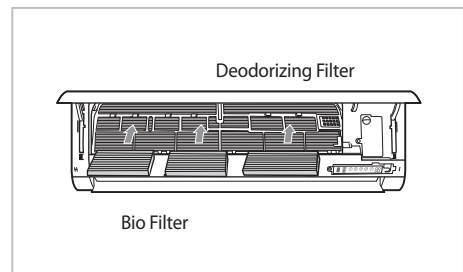

14-6 Installation

14-6-1 Before Installation

Keep the air conditioner outlet and inlet free from its surroundings.
In case of installation, keep the symmetry and fix it to prevent vibration.
The pipe length shall meet the standard as far as possible.

14-6-2 Installation Procedure

■ Location

Install the product in an area to guarantee the best cooling effect, convenience of piping and electric work, and inexistence of vibration or wind.

■ Wall Drilling

Drill the wall downward in a diameter of 60 to 65mm.

■ Fixing Indoor Unit & Outdoor Unit


Fix the air conditioner indoor unit securely to the wall. Secure the outdoor unit in a suitable position.

■ Pipe Spooling & Connecting

You shall cut the pipe with a pipe cutter and grind all the burrs of the cut surface.
Pipe expansion may continue until the pipe surface becomes uneven or torn apart.
Be sure to use a torque wrench to tighten pipes or flare nuts.

<Torque & Depth>

Outer Diameter(D)	Torque(kgf-cm)	Depth(A)
6.35mm(1/4")	140~170	1.3mm
9.52mm(3/8")	250~280	1.8mm
12.70mm(1/2")	380~420	2.0mm
15.88mm(5/8")	440~480	2.2mm
19.05mm(3/4")	990~1,210	2.2mm

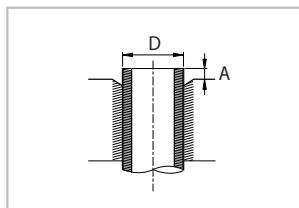

■ Leak Test

Put an inert gas like nitrogen in the outdoor unit pipe and put soap bubbles or other test liquids on the pipe surface for the leak test.

■ Drain Hose Connecting

Install the drain hose downward to drain water naturally. Be sure to pour water into the hose to check if it drains well.

■ Electric & Earth Work

Electric and earth work shall meet the "Electric Facility Technology Standard" and the "Internal Wire Regulation" of the Electric Business Laws.

■ Inspection & Trial Run

Upon completion of the tests, you shall make a trial run while you explain the main functions of the air conditioner to finish the installation.

14-7 Installation Diagram of Indoor Unit and Outdoor Unit

14-7-1 Air-Purge Procedure

- 1) Connect each assembly pipe to the appropriate valve on the outdoor unit and tighten the flare nut.



- 2) Connect the charging hose of low pressure side of manifold gauge to the packed valve having a service port as shown at the figure.



- 3) Open the valve of the low pressure side of manifold gauge counter-clockwise.



- 4) Purge the air from the system using vacuum pump for about 30 minutes.
 - Make sure that pressure gauge show $-0.1\text{MPa}(-76\text{cmHg})$ after about 30 minutes.
 - This procedure is very important in order to avoid gas leak.
 - Turn off the vacuum pump.
 - Close the valve of the low pressure side of manifold gauge clockwise.
 - Remove the hose of the low pressure side of manifold gauge.






- 5) Set valve cork of both liquid side and gas side of packed valve to the open position.



- 6) Mount the valve stem nuts and the service port cap to the valve, and tighten them at the torque of $183\text{kgf}\cdot\text{cm}$ with a torque wrench.



- 7) Check for gas leakage.
 - At this time, especially check for gas leakage from the 3 way valve's stem nuts, and from the service port cap.

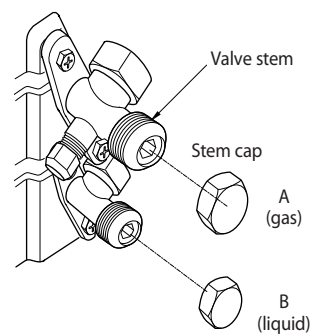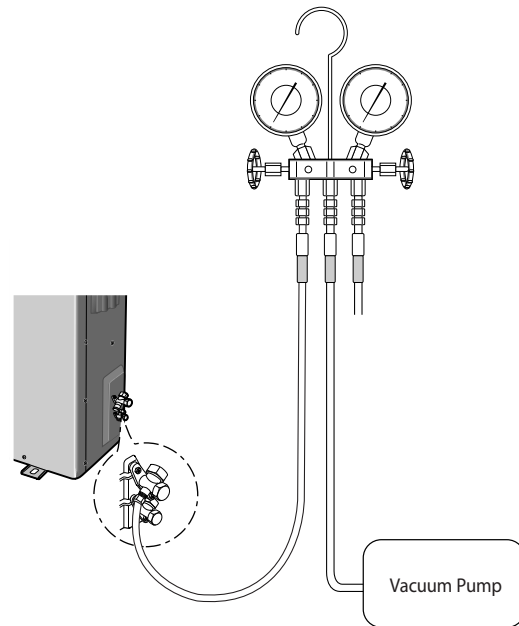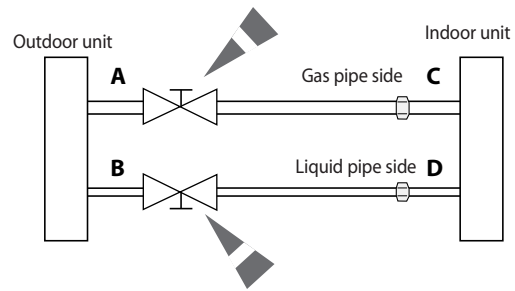

14-7-2 "Pump down" Procedure

Pump down will be carried out when an evaporator is replaced or when the unit is relocated in another area.

- 1) Remove the caps from the 3 way valve and the 3-Way valve.



- 2) Turn the 3-Way valve clockwise to close and connect a pressure gauge (low pressure side) to the service valve, and open the 3 way valve again.



- 3) Set the unit to cool operation mode.
(Check if the compressor is operating.)



- 4) Turn the 3-Way valve clockwise to close.




- 5) When the pressure gauge indicates "0" turn the 3-Way valve clockwise to close.



- 6) Stop operation of the air conditioner.



- 7) Close the cap of each valve.

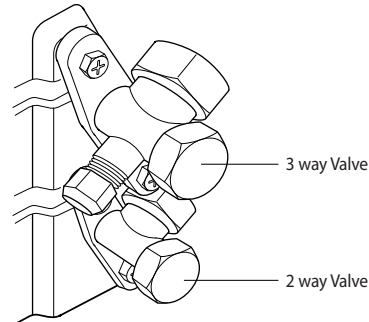

Remarks

Relocation of the air conditioner

- Refer to this procedure when the unit is relocated.
- Carry out the pump down procedure (refer to the details of 'pump down').
- Remove the power cord.
- Disconnect the assembly cable from the indoor and outdoor units.
- Remove the flare nut connecting the indoor unit and the pipe.
- At this time, cover the pipe of the indoor unit and the other pipe using a cap or vinyl plug to avoid foreign material entering.
- Disconnect the pipe connected to the outdoor unit.
At this time, cover the valve of the outdoor unit and the other pipe using a cap or vinyl plug to avoid foreign material entering.
- Make sure you do not bend the connection pipes in the middle and store together with the cables.
- Move the indoor and outdoor units to a new location.
- Remove the mounting plate for the indoor unit and move it to a new location.



This Service Manual is a property of Samsung Electronics Co., Ltd.
Any unauthorized use of Manual can be punished under applicable
International and/or domestic law.

© Samsung Electronics Co., Ltd. Feb. 2007.
Printed in China.
Code No. DB98-27272A(2)